 


Welcome

This user guide introduces you to the many features in your phone.





www.motorola.com

 
 
 
 
MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

© Motorola, Inc. 2003.

Software Copyright Notice


The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.








Contents

Safety and General Information	6
Getting Started	13
What's in the Box?	13
About This Guide	13
Installing the UICC or SIM Card	13
Installing the Battery	14
Charging the Battery	15
Battery Use	16
Turning Your Phone On	17
Adjusting Volume	18
Making and Answering Calls	19
Viewing Your Phone Number	20
Learning to Use Your Phone	21
Using the Display	21
Using the 5-Way Navigation Key	24
Using the Video Call and Browser Keys	25
Using Menus	25
Entering and Editing Text	28
Choosing a Text Entry Method	37
Locking and Unlocking Your Phone	38
Changing Your Unlock Code	40
If You Forget Your Unlock Code	41
Locking and Unlocking the Keypad	41
Taking and Viewing Pictures	42
Recording and Viewing Videos	44
Making Video Calls	46
Using Location Information	47




 



Setting Up Your Phone	48
Storing Your Name and Phone Number	48
Setting the Time and Date	48
Setting a Ring Style	48
Setting a Wallpaper Image	49
Setting a Screen Saver Image	49
Setting Display Colour	50
Adjusting Lights on Your Phone	50
Setting Your Display Timeout	51
Conserving Battery Power	52
Calling Features	53
Changing the Active Line	53
Redialling a Number	53
Using Automatic Redial	53
Using Caller ID	54
Cancelling an Incoming Call	55
Turning Off a Call Alert	55
Calling an Emergency Number	55
Dialling International Numbers	56
Viewing Recent Calls	56
Returning an Unanswered Call	58
Using the Notepad	59
Attaching a Number	60
Calling with Speed Dial	60
Calling with 1-Touch Dial	60
Using Voicemail	61
Using Call Waiting	62
Putting a Call on Hold	62
Transferring a Call	63
Phone Features	64
Main Menu	64

    

 

Feature Quick Reference.....	66
Specific Absorption Rate Data.....	77
Warranty Information	79
Index.....	84

    

 

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

 
 
 
 
Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorised antennas may result in non-compliance with the local regulatory requirements in your country.



Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimetres) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimetres) from your body.

Approved Accessories

 
Use of accessories not approved by Motorola, including but not limited to batteries and antenna, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care



facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

 
 
Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimetres) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimetres) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.





Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

  If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your GP may be able to assist you in obtaining this information.



Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless it is a phone type especially qualified for use in such areas and certified as "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: *The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.*






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries


Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, bag, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

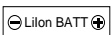Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

 Some people may be susceptible to epileptic seizures or blackouts when exposed to blinking lights, such as when watching television





or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a blinking-lights feature on your phone. (The blinking-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate blinking lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

 
 
- Do not play or use a blinking-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.



Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

  - Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.




European Union Directives Conformance Statement



Hereby, Motorola declares that this product is in compliance with

 - The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

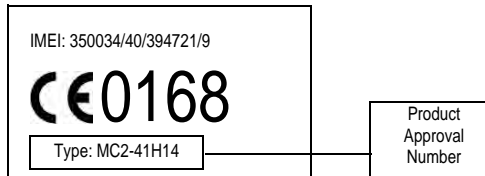

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (the R&TTE Directive) at www.motorola.com/rtte - to find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the Web site

Getting Started

What's in the Box?

Your digital wireless phone has a battery and typically comes equipped with a charger. Other accessories can customise your phone for maximum performance and portability.

About This Guide

Optional Features



Features marked with this label are optional network, SIM card, and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

Optional Accessories



Features marked with this label require an optional Motorola Original™ accessory.

Installing the UICC or SIM Card

 
Your 3G UICC (Universal IC Card) contains your phone number, service details, and phonebook/message memory. Your phone can

use GSM SIM (Subscriber Identity Module) cards, but not all features will be available.

Caution: Do not bend or scratch your card. Avoid exposing your card to static electricity, water, or dirt.


Do This

- 1 Push the battery door down to release it from the phone.

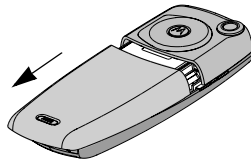


- 2 Open the card door on the right side of your phone.

 - 3 Insert the card with the gold plate facing down and the notch as shown.

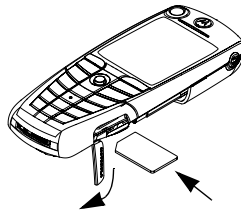

- 4 Close the card door.

 - 5 Place the battery door back on the phone and push it up to snap it into place.

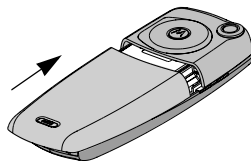

Installing the Battery

 
You must install and charge the battery to use your phone.




Caution: Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

Do This


- 1 Remove the battery from its protective clear plastic case.
- 2 Push the battery door down to release it from the phone.

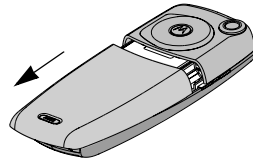

 - 3 Insert the battery, printed arrow first, **under the tab** at the top of the battery compartment and push down.

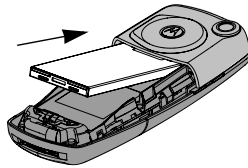

 - 4 Place the battery door back on the phone and push it up to snap it into place.

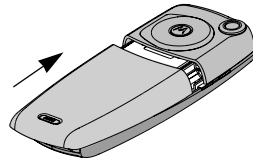


Charging the Battery

New batteries are partially charged. Before you can use your phone, install and charge the battery, as follows.

Note: Some batteries perform best after several full charge/discharge cycles.

Do This

 - 1 Plug the travel charger into your phone with the release tab up.

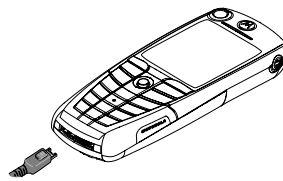

-
- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
 - 3 When your phone indicates **Charge Complete**, press the release tab and remove the travel charger.
-

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows the status of the charging process.

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

Battery Care

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximise performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling centre for proper disposal methods.

Never dispose of batteries in a fire because they may explode.

Turning Your Phone On

Do This



- 1 Press and hold the power key


To


turn on your phone



Do This

2 If necessary, press  to scroll to the User Account you want, then press **SELECT** ()

3 If necessary, enter your SIM card PIN code and press **OK** ()

4 If necessary, enter your four-digit unlock code and press **OK** ()

To

select the user account you want from the list of accounts (stored on the SIM card)

unlock your SIM card

Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. Contact your service provider.

unlock your phone

The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Adjusting Volume

Press the upper or lower volume keys to:

- increase and decrease earpiece or speakerphone volume during a call
- increase and decrease the ringer volume setting when the idle display is visible
- turn off an incoming call alert

Making and Answering Calls

This section describes basic calling features. To make video calls, see page 46.

Making a Call

To call a number, your phone must:

 
 
- be turned on with the phone and keypad unlocked
- have a SIM card inserted and unlocked
- have a network connection with adequate signal strength


Press

1 keypad keys


To

dial the phone number (up to 32 digits)

Tip: If you make a mistake, press **DELETE** () to delete the last digit, or press and hold **DELETE** () to clear all digits.

2  (send key)

make the call

3  (end key)

end the call




Note: You can make an emergency call even when the phone is locked, or when a SIM card is not inserted. See page 55.

Answering a Call


 
To answer a call, your phone must:


- be turned on with the phone unlocked
- have a SIM card inserted and unlocked
- have a network connection with adequate signal strength

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
1  or ANSWER 	answer the call
2  (end key)	end the call

Viewing Your Phone Number

To view your phone number in idle, press  .

While you are on a call, press  > **My Tel. Numbers**.

Your phone number must be stored on your SIM card to use this feature. To store your phone number on the SIM card, see page 48. If you do not know your phone number, contact your service provider.

Learning to Use Your Phone

See page 1 for a basic phone diagram.

Using the Display

The *idle display* (shown below) is the standard display when you are *not* on a call or using the menu.

Move the navigation key (⊙) up, down, left, or right for quick access:

 


The menu indicator (≡) at the bottom centre of the display indicates that you can press the menu key (⏏) to display a menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (⏏) or right soft key (⏏) to perform the function indicated by the left or right soft key label.

At the top of the display are the following status indicators:


- ① Signal Strength
- ② Data Service
- ③ Signal Security
- ④ Service
- ⑤ Current Line
- ⑥ Text Case
- ⑦ Messages or Entry Method
- ⑧ Location
- ⑨ Alert Type
- ⑩ Battery Level

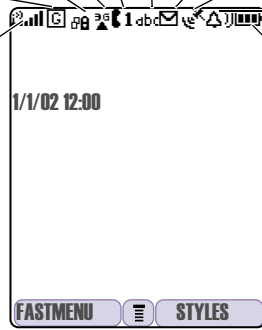

① Signal Strength Indicator Indicates the strength of your phone's connection with the network.

Strong No signal

You cannot make or answer calls when the "no signal" indicator is displayed.

 **② Data Service Indicator** Indicates when a packet data connection is available. This type of connection may be used by your service provider to allow faster data transfer speeds. The indicator does not mean that you are on a call; it indicates only that you are registered on the network with a packet data connection.

③ Signal Security Indicator Indicates when you have a secure connection for packet data transfers, embedded application connections, or circuit switch data calls.



 
4 Service Indicator Indicates when your phone uses your home network (📶) or another network (📶). When you leave your home network area, your phone *roams* or seeks another network.



5 Current Line Indicator Indicates when you have Voice Privacy on, a call in progress, or Call Diverting on. This icon also indicates which line is active (if you have a call on hold), and whether you have Caps Lock, Numeric Entry, or Symbol Entry switched on (when entering text).

6 Text Case Indicator Indicates the text case when you are in a text editor.

- abc No capital letters ABC All capital letters
- Abc Next letter capital


To change the case in a text entry display, press .



7 Message or Entry Method Indicator Indicates when you have a new voice (📞) or text (📧) message waiting. When you enter a text message, a number here indicates how many more characters can fit in the message.



 

 
Any time you enter text, an icon here indicates the entry method: **Symbol** (📧), **Numeric** (123), **Primary**, or **Secondary**:

Primary	Secondary	
1	2	Tap, no capital letters
1↕	2↕	Tap, next letter capital
1↑	2↑	Tap, all capital letters
📧	📧	iTAP, no capital letters
📧↕	📧↕	iTAP, next letter capital
📧↑	📧↑	iTAP, all capital letters

To change the entry method, press  (see page 37).

8 Location Indicator Indicates when Location information is off (grey icon), on (white icon), or on and finding your location (green icon).

9 Alert Type Indicator Indicates the current selected alert profile. The default alert setting is a ringer.

-  = loud ring
-  = soft ring
-  = vibrate
-  = ring and vibrate
-  = silent

10 Battery Level Indicator Indicates the amount of charge left in the battery. The more bars visible, the greater the charge.

High     Empty

 
Recharge your battery as soon as possible when you see the **Low Battery** warning message and hear the low battery alert.


Note: When you charge the battery, the battery level indicator instead indicates how much of the charging process is complete. See page 15.

Using the 5-Way Navigation Key

Use the 5-way navigation key like a joystick to navigate the menu system, change feature settings, and play games.

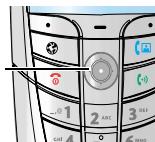

5-way key

 

Press it in to select a highlighted menu item. This press usually performs the same function as the right soft key ().

Tip: Down and up are the primary movements within menus. Move left and right to change feature settings, navigate the datebook, and edit text.


Using the Video Call and Browser Keys

Your phone has special keys that provide access to important features. Enter a phone number and press the Video Call key () to make a video call (see page 46). Pressing the Browser key () opens a Web session. You can use these keys any time you are not on a call.

Using Menus

From the idle display, press  to display the main menu.







Press  to highlight a menu feature icon in the main menu. The following icons represent features that may appear in the main menu, depending on your service provider and service subscription options.

- | | | |
|---|---|---|
|  Games & Apps |  Phonebook |  Web Access |
|  Tools |  Messages |  Multimedia |
|  Settings |  Recent Calls |  Camera |

Selecting a Menu Feature

Select a menu feature as follows, starting from the idle display:

Find the Feature  > **Multimedia**
 > **Pictures**

This example shows that from the idle display, you must press , scroll to and select **Multimedia**  from the main menu, then scroll to and select **Pictures**. Use  to scroll, and the left/right soft keys to select the functions listed in the bottom left and right corners of the display.

Selecting a Feature Option

Some features require you to select an item from a list.

Highlighted item

Press **BACK** (BACK key icon) to return to the previous screen.

A sub-menu is available. Press (MENU key icon) to open the sub-menu.

 
Press **VIEW** (VIEW key icon) to view details of the highlighted item. If no details are available, **STORE** (STORE key icon) and **DELETE** (DELETE key icon) appear. Press **STORE** to store the item in your phonebook, or **DELETE** to delete the item from the list.

Select an item by highlighting it using one of the following:


- Press (UP/DOWN arrow key icon) to scroll up or down to highlight an item.
- In a numbered list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list item.
- When an item has a list of possible values, press (LEFT/RIGHT arrow key icon) to the left or right to scroll and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.

Entering and Editing Text

Some features require you to enter information.

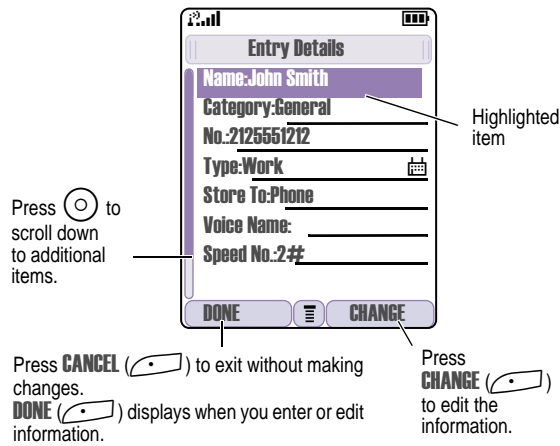

 
The message centre lets you compose and send text messages. A *flashing cursor* shows where text will appear.

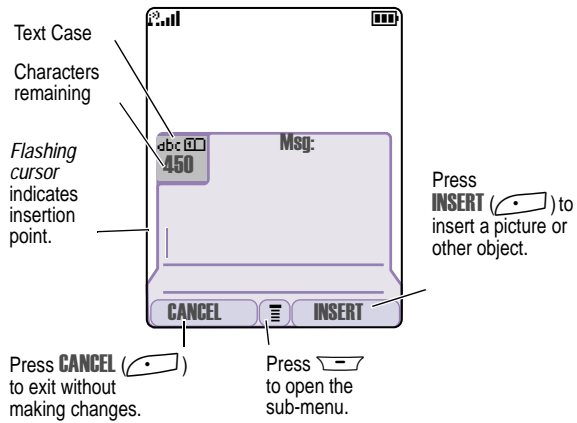


Using the Tap Method

This is the standard entry method for entering text on your phone.


Press	To
1 A number key (one or more times)	select a letter, number, or symbol shown in the chart on page 31.
2 Number keys	enter remaining characters
	Tip: Press right to accept a word completion, or to insert a space
3 OK	store the text

 In a text entry screen, you can press  to switch entry methods. An indicator tells you which method is active (see page 22). If **Tap Method** (1 or 2) is not available, see page 38.

 When you enter text using the standard tap method, the flashing cursor changes to a *block cursor*, and the soft key functions change.

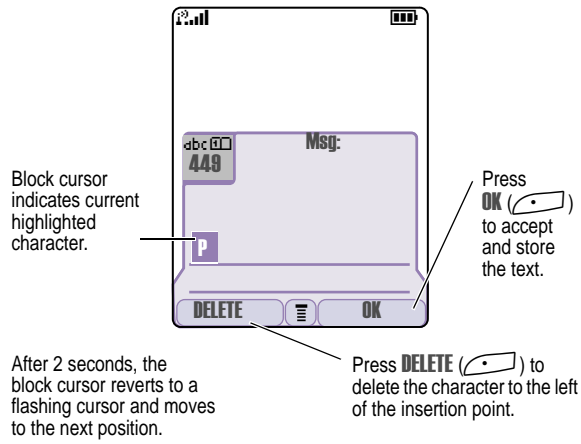

 When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** you might see:

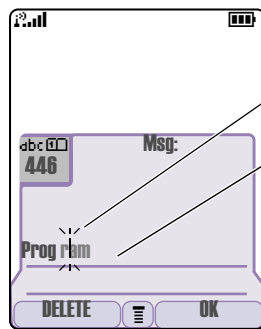

Flashing cursor indicates insertion point.


 
In **Tap**, press right to accept the word, or press to reject it and enter a space after **prog**.


If you want a different word, such as **progress**, continue pressing number keys to enter the remaining characters.

Character Chart





Use this chart as a guide for entering spaces, numbers, letters, symbols, and other characters with the Tap method.

	space . 1 ? ! , @ _ & ~ : ; " - () ' ` % £ \$ ¥ ¢ €
	a b c 2 ä á á à â ã α β ç
	d e f 3 ð ë é è ê ø
	g h i 4 ï í î γ
	j k l 5 λ
	m n o 6 ñ ö ø ó ò ô õ ω
	p q r s 7 π β σ
	t u v 8 θ ü ú û ù

	w x y z 9 ξ ψ
	+ - 0 x * / \ [] = > < # §

Note: This chart may not reflect the exact character set on your phone. In an email address or URL editor,  shows the common characters for that editor first.

 
Tap Method Text Entry Rules

- Press a number key repeatedly to cycle through its characters. See the character chart on page 31.
- If you do not press a key for 2 seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- Press  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalised. To force the character to lowercase while it is highlighted by the block cursor, press  down.
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display. You can switch languages within a message. Press  to select the text entry method and language.
- If you enter or edit information and do not want to save your changes, press  to exit without saving.

Using iTAP™ Text Entry Method

iTAP™ is a predictive text entry method that lets you enter a word using one keypress per letter.

For example, if you press , letter combinations that match your key presses appear:

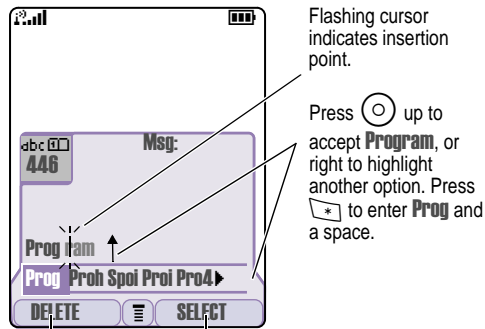

Flashing cursor indicates insertion point.

Press up to accept **Program**, or right to highlight another option. Press to enter **Prog** and a space.

Press **DELETE** () to clear the last letter entered.

Press **SELECT** () to insert the highlighted word.

If you want a different word, such as **progress**, continue pressing number keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press to switch entry methods. An indicator tells you which method is active (see page 22). If **ITAP** (or) is not available, see page 38.

Press	To
1 Number keys (one press per letter)	show possible letter combinations at the bottom of the display
2 right or left	highlight the combination you want

Press

3 **SELECT** ()

To

lock a highlighted combination

You can press number keys to add more letters to the end of the combination.

or




 
enter the highlighted combination when it spells a word

A space appears after the word.



If you enter a word your phone does not recognise, your phone stores it to use as one of your word options. When you fill memory space for unrecognised words, your phone deletes the oldest words as you add new words.

Using the Symbol Entry Method


In a text-entry screen, press  to switch entry methods until you see the Symbol icon () in the status bar.

Press

1 Number keys (one press per symbol)

To

show possible symbol combinations at the bottom of the display

2  right or left

highlight the combination you want

Press
3 SELECT ()

To
 lock a highlighted combination
 You can press number keys to
 add more symbols to the end of
 the combination




 
 


 
 

 
 
or



enter the highlighted
 combination
 A space appears after the
 combination.


Symbol Chart


Use this chart as a guide for entering symbols in symbol method.

	.?! , @ _ & ~ ; : " - () ' ` % £ \$ ¥ ¢ €
	@ _ \
	/ : ;
	" & '
	() [] {}
	¿ ¡ ~
	< > =
	\$ £ ¥ ¢ €
	# % *
	+ - x * / = > < # §
	enter a space (hold to enter a return)
	change text entry method (hold for default)

 Note: In an email address or URL editor,  shows the common characters for that editor first.



Using the Numeric Method

 In a text entry screen, press  to switch entry methods until you see the Numeric icon (123) in the status bar.


Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.

Deleting Letters and Words


Place the cursor to the right of the text you want to delete, and then:

Do This	To
Press DELETE 	delete one letter at a time
Hold DELETE 	delete the entire message

Copying, Cutting, and Pasting Text

Press  from a text entry screen to display these options:

Option	Description
Copy Text	tells your phone to copy the text you are about to highlight (see "Highlighting Text" below)
Copy All Text	copies all text in the editor
Cut Text	tells your phone to cut the text you are about to highlight (see "Highlighting Text" below)
Cut All Text	cuts all text in the editor
Paste	pastes the text you cut or copied
Undo	undoes the last copy, cut, or paste in the current text editor

Note: **Copy All Text** also appears in the menu (press ) when you are viewing details for a Phonebook entry, Datebook event, Browser page, Text Message, or Recent Calls entry.

Highlighting Text





 
In a text editor, to highlight and copy or cut text:

Find the Feature

 > **Copy Text** or
Cut Text

Press


To

- | | |
|---|---|
| 1  | scroll to the beginning of the text you want to copy or cut |
| 2 START  | turn on the highlighting marker |
| 3  | scroll to the end of the text you want to copy or cut |
| 4 COPY  | copy or cut the text you selected |
| or | You can now paste the text in another location or file. |
| CUT  | |

Text remains on your clipboard, available to paste, until you copy or cut other text or until you turn off your phone.

Choosing a Text Entry Method

 
Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another method.

Press  in any text entry screen to change to one of the following entry methods:


Primary

The primary text entry method you set up (see the next section).

- Numeric** (123) Enter numbers only.
- Symbol** (123) Enter symbols only (see page 34).
- Secondary** The secondary text entry method you set up (see the next section).

Press  in any text entry screen to change your entry *case*. An icon in the status bar indicates when you select *no capital letters* (abc), *next letter capital only* (Abc), or *all capital letters* (ABC).

Setting Up a Text Entry Method

To set the primary or secondary text entry methods, press  > **Entry Setup** from any text entry screen. Select **Primary Setup** or **Secondary Setup**, and choose:

- (None)** Hide the **Secondary** setting (only available for **Secondary Setup**).
- ITAP** Let the phone predict each word as you press keys (see page 32).
- Tap Method** Enter letters, numbers, and symbols by pressing a key 1 or more times (see page 29).

Locking and Unlocking Your Phone


You can lock your phone manually or set it to lock automatically whenever you turn it off.

When you try to use a locked phone, it prompts you for the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer*.

You can make emergency calls on your phone even when it is locked. See page 55.

Locking Your Phone Manually


Find the Feature  > **Settings > Security**
> **Phone Lock > Lock Now**

Press	To
1 keypad keys	enter your four-digit unlock code
2 OK ()	lock the phone

Setting Your Phone to Lock Automatically


You can set your phone to lock every time you turn it off:

Find the Feature  > **Settings > Security**
> **Phone Lock**
> **Automatic Lock > On**

Press	To
1 keypad keys	enter your four-digit unlock code
2 OK ()	set the phone to lock automatically

Unlocking Your Phone

At the **Enter Unlock Code** prompt:


Press	To
1 keypad keys	enter your four-digit unlock code
	If you forget your unlock code, see page 41.
2 OK ()	unlock your phone

Changing Your Unlock Code

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to note the new numbers.

Notes:

- *Your service provider may retain your phone's security code for customer service purposes. In this case, you cannot use phone features that require the security code (such as master clear, master reset, and the unlock code bypass feature).*
- *If the only password you can change is the unlock code, the **New Passwords** menu is unavailable and the **Unlock Code** option appears on the **Phone Lock** menu. In this case, open the unlock code editor by selecting:  > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.*

To change a code or password:

Find the Feature

 > **Settings** > **Security**
> **New Passwords**

Press

1 

To

scroll to the code or password
you want to change

2 **CHANGE** 

select the code or password



3 keypad keys

enter your old code

If you forget your unlock code,
see page 41.

4 **OK** 



submit your old code

Press	To
5 keypad keys	enter the new code
6 OK ()	assign the new code
7 keypad keys	re-enter the new code
8 OK ()	confirm the new code

If You Forget Your Unlock Code



If you forget your security code (originally set to 000000), SIM PIN, SIM PIN2, or call barring password, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, when you see the **Enter Unlock Code** message:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

Locking and Unlocking the Keypad

This feature prevents an accidental keypress from inadvertently dialling an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).


Press	To
 	lock or unlock keypad

Note: *Incoming calls and messages unlock the keypad.*

Taking and Viewing Pictures

Taking Pictures

 You can use your phone's camera key to take pictures quickly and easily.

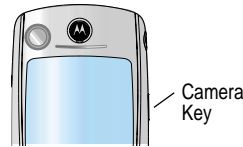

Do This	To
1 Press the camera key	display the camera's image. To change cameras, press > Internal View (camera on the front of the phone) or External View (camera on the back of the phone).
2 Point your phone at the subject of the picture	find the picture you want to take <i>Note: Press for a menu that lets you change the camera view or set up the picture resolution.</i>
3 Press	zoom the picture in and out
4 Press CAPTURE	freeze the picture in your phone's display
5 Press STORE	save the captured picture as a file, wallpaper, screen saver, or message attachment






Downloading Pictures



You can download pictures and animations to your phone and use them as wallpaper or a screen saver.

Viewing Pictures

Find the Feature  > **Multimedia** > **Pictures**

Press	To
1 	scroll to the picture
2 SELECT 	view the picture
3  left or right	view the previous/next picture
or	
DETAILS 	view picture information
or	
	open the Picture Viewer menu to perform other procedures as described in the following list

The **Picture Viewer** menu provides the following options:

Option	Description
New Picture	Capture a new picture.
New Slideshow	Create a slideshow from a series of stored pictures.
Set as Wallpaper	Set the picture as your phone's wallpaper image.
Set as Screen Saver	Set the picture as your phone's screen saver image.
Set as Power-Up Animation	Set the picture as the image that appears when you turn on your phone.
Details	View picture information.



To adjust your phone's wallpaper and screen saver images, see page 49.

Recording and Viewing Videos

Recording Videos

Find the Feature

> **Multimedia** > **Videos**
> **(New Video)**

The image in the camera's viewfinder appears on your phone's display. To change cameras, press > **Internal View** (camera on the front of the phone) or **External View** (camera on the back of the phone).

Do This

- 1 Point your phone at the subject of the video

To

find the scene you want to record

Note: Press for a menu that lets you change the camera view or set the video quality, length, or sound.

- 2 Press

zoom the image in and out

- 3 Press **CAPTURE**

start recording the scene in your phone's display

 
Tip: Press to zoom in and out during the video.

- 4 Press **STOP**

stop recording






- 5 Press **STORE**

save the captured video as a file or message attachment



Watching Videos

Find the Feature  > **Multimedia** > **Videos**



Press	To
1 	scroll to the video
2 PLAY 	view the video
3 	control the video: ▲ pause ◀▶ rewind or fast forward ▼ stop
or	
DETAILS 	view video information
or	
	open the Video Player menu to perform other procedures as described in the following list

The **Video Player** menu includes the following options:

Option	Description
Details	View video information.
Setup	Change the settings for Auto Repeat , which tells your phone to play a video repeatedly until you stop it, and Timer , which shows a timer in your phone display.

 
 

 

Making Video Calls


If you call someone else who has a video phone, you can see each other while you talk.

Press	To
1 keypad keys	dial the phone number (up to 32 digits)
2 	make the call
3  (end key)	end the call

Previewing Video Calls

You can preview your phone's image to see how you look before you make a video call:

Press	To
1 keypad keys	dial the phone number (up to 32 digits)
2 	open the dialling menu
3 	scroll to Preview Video Call
4 SELECT 	display your camera's image
5 CALL 	place the call
or	
	display the preview menu
	This menu lets you turn your camera off, or to change camera images.

 

Setting Up Video Calls

To make video calls, your phone uses a video gateway number that you can enter.

Note: Your service provider may have already programmed the text message inbox settings for you.

Find the Feature  > **Settings > Initial Setup**
> **VideoGateway**

Enter the number provided by your service provider.

Using Location Information

Your phone can use Assisted Global Positioning Service (AGPS) to tell the network where you are physically located.

 
 
Note: AGPS may not work in all locations and may not be available due to network, environmental, or interference issues. You cannot use your camera while your phone is checking your location.

Hiding or Showing Location Information

When **Location** is turned **On**, services may use your known location to provide useful information (for example, driving directions, or the location of the nearest bank). Contact your service provider for details.

When **Location** is turned **Off**, it does not send location information.

Find the Feature  > **Settings > Phone Status**
> **Location**
> **On or Off**



Setting Up Your Phone

Storing Your Name and Phone Number



To store or edit user name and phone number information on your SIM card:

Find the Feature

 **> Settings > Phone Status
> My Tel. Numbers**

If you do not know your phone number, contact your service provider. To view your phone number from the idle display or during a call, see page 20.

Setting the Time and Date

You must set the time and date to use the datebook.

Find the Feature

 **> Settings > Initial Setup
> Time and Date**

Setting a Ring Style


Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

The ring style indicator in your display shows the current ring style (see page 22).

To set a ring style

Find the Feature

 **> Settings > Ring Styles
> Style
> *the profile you want***

Each ring style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press  > **Ring Styles** > **Style Detail**.

Note: *Some ring tones vibrate automatically. If you use one of these tones, your phone vibrates even when it is not set to **Vibrate** or **Vibe&Ring**. To turn off these vibrations, see page 70.*

To turn off alerts for messages that arrive during a call.

Find the Feature  > **Settings** > **In-Call Setup**
> **Msg Alert**

Setting a Wallpaper Image

You can set a picture or animation as a wallpaper (background) image in your phone's idle display.

Note: *When you set an animation as a wallpaper image, only the first frame of the animation is displayed.*

Find the Feature  > **Settings** > **Personalise**
> **Wallpaper**

Setting	Description
Picture	select the picture or animation for the background image in your idle display
Layout	select Centre or Tile

Setting a Screen Saver Image

You can set a picture or animation as a screen saver image. The image is displayed when no activity is detected for a specified time period.

The screen saver image is shrunk to fill the display, if necessary. An animation repeats for one minute, then the first frame of the animation is displayed.

Find the Feature  > **Settings > Personalise > Screen Saver**

Setting	Description
Picture	select the picture that appears when your phone is idle
Delay	select how long your phone must be idle before the screen saver picture appears <i>Note: If this setting is longer than your Display Timeout setting, then your display will turn off before you ever see the screen saver.</i>

Note: Using a screen saver can reduce battery life.

Setting Display Colour

You can select the colour palette that your phone uses to display indicators, highlights, and soft key labels.

Find the Feature  > **Settings > Personalise > Colour Style > the style you want**

Note: To restore default colours, press  0 "COLOURS" ( +  +  +  +  +  +  + )

Adjusting Lights on Your Phone

You can adjust the lights that appear in your phone's display, behind the keypad, and when you receive incoming calls or messages.

Setting the Display Backlight

You can set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power:

Find the Feature  > **Settings** > **Initial Setup**
> **Backlight**

Setting Caller ID Lights for Calls

You can tell your phone backlight to change when you receive incoming calls.

Find the Feature  > **Settings** > **Lights**
> **Call-Light ID**

*Note: If you set a **Call-Light ID** for a single phonebook entry or category, your phone uses those patterns for those entries. If you select **Off** here, though, your phone does not use any **Call-Light IDs**.*

Setting Notice Lights for Messages

You can tell your phone backlight to change when you receive incoming text or email messages, voicemail, and alarms.

Find the Feature  > **Settings** > **Lights**
> **Notice Lights**

Setting Your Display Timeout

This is a power-saving feature that turns off your phone's display when it is inactive for a selected idle time. Your display reactivates if you press a key or receive a call.

Find the Feature  > **Settings** > **Initial Setup**
> **Display Timeout**
> *selected idle time*



 
 
 
Conserving Battery Power

Some networks and phones include a battery save setting to conserve battery power.

Find the Feature



> **Settings** > **Initial Setup**
> **Battery Save**



Calling Features

For basic instructions on how to make and answer calls, see page 19.

Changing the Active Line



 
Change the active phone line to make and receive calls from your other phone number.

Note: This feature is available only for dual-line enabled SIM cards.

Find the Feature  > **Settings > Phone Status**
> **Active Line**

The active line indicator in the display shows the current active phone line. See page 22.

Redialling a Number

Press	To
1 	go directly to the dialled calls list
2 	scroll to the entry you want to call
3 	redial the highlighted number

Using Automatic Redial



If you receive a busy signal, your phone displays **Call Failed**.

With automatic redial, your phone automatically redials the number. When the call goes through, your phone rings or vibrates one time, displays the message **Redial Successful**, and then connects the call.

To turn automatic redial on or off:

Find the Feature  > **Settings** > **Initial Setup**
> **Auto Redial**

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a busy signal and see **Call Failed**:

Press **To**
 or **RETRY** () activate automatic redial

Using Caller ID

Incoming Calls



Calling line identification (caller ID) displays the phone number for incoming calls.

 
The phone displays the caller's name when the name is stored in your phonebook, or **Incoming Call** when caller ID information is not available.

Outgoing Calls





You can show or hide your phone number as an ID for the calls that you make.

Find the Feature  > **Settings** > **In-Call Setup**
> **My Caller ID**

You can override the default caller ID setting when you make a call. While dialling (with digits visible in the display), press  > **Hide ID/Show ID**

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
 or IGNORE ()	cancel the incoming call



Depending on your phone settings and the type of subscription you have, the call may be forwarded to another number, or the caller may hear a busy signal.

Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.


Press	To
either volume key	turn off the alert

Calling an Emergency Number

Your service provider may program one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted. Your service provider can program additional emergency numbers into your SIM card. *However, your SIM card must be inserted in your phone in order to use the numbers stored on it.* See your service provider for additional information on this issue.


Note: *Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all*

locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number

 
Dialling International Numbers




To dial the local international access code:

Do This	To
Press and hold 	insert the international access code (+) for the country from which you are dialling

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialled, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

Shortcut: Press  to go directly to the dialled calls list from the idle display.

Find the Feature	
	 > Recent Calls
Press	To
1 	scroll to Received Calls or Dialled Calls
2 SELECT 	select Received Calls or Dialled Calls

Press

3 


To

scroll to an entry you want to call, store, or delete

Note: ✓ means the call connected.


4 

 
call the entry's number

Tip: Press and hold  for two seconds to send the entry number as DTMF tones. To activate DTMF tones, see page 72.

or



if **View** appears above the  key—view the entry's details

if **Store** appears above the  key—store the entry's details in the phonebook



or



open the **Last Calls Menu** to perform other procedures as described in the following list


The **Last Calls Menu** can include the following options:

Option	Description
Video Call	Make a video call to the selected number.
Preview Video Call	Preview your phone's camera image before making a video call to the selected number.

Option	Description
Store	Create a phonebook entry with the selected number in the No. field. (This option does not appear if STORE appears above the  key, or if the number is already stored as a phonebook entry.)
Delete	Delete the entry. (This option does not appear if DELETE appears above the  key.)
Delete All	Delete all entries in the current list.
Hide ID/Show ID	Hide (or show) your caller ID for the next call.
Send Message	Create a new text message, with the selected number in the Tel No. field.
Add Digits	Add digits to the end of the selected number.
Attach Number	Attach another number from the phonebook or recent calls list to the end of the selected number.
Send Tones	Send the selected number to the network as DTMF tones, for credit card calling or password entry. (This option is available only during an active call.) To activate DTMF tones, see page 72.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the  (missed call) indicator

- **X Missed Calls**, where **X** is the number of missed calls

Press	To
1 VIEW (☞)	see the received calls list
2 (○)	select a call to return
3 (☞)	make the call

Using the Notepad


Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Find the Feature ☞ > **Recent Calls** > **Notepad**

Press	To
(☞) or ☞	call the number
or STORE (☞)	open the Dialling Menu to attach a number or insert a special character
	create a phonebook entry with the number in the No. field



Attaching a Number

 While dialling (with digits visible in the display):

Press	To
 > Attach Number	attach a number from the phonebook or recent call lists

Calling with Speed Dial

 Each entry you store in your phonebook is assigned a unique *speed dial* number that identifies the location where the entry is stored in phone memory or on the SIM card. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
2 	submit the number
3 	call the entry

Calling with 1-Touch Dial

To call phonebook entries 1 to 9, press and hold the one-digit speed dial number for one second.

You must specify which phone number list you want to use with this feature: phone memory phonebook, fixed dial list, or SIM card phonebook:

Find the Feature  > **Settings > Initial Setup > 1-Touch Dial**



Using Voicemail




You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

Storing Your Voicemail Number


Storing your voicemail number in your phone makes it easy for you to listen to voicemail messages. Your service provider may have already done this for you.

Find the Feature  > **Messages**
  > **VoiceMail Setup**

Press	To
1 keypad keys	enter the phone number for your voicemail
<hr/>	
2 OK ()	store the number

Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays  (voice message waiting) and **New VoiceMail**.

Press	To
CALL ()	listen to the message

Listening to a Voicemail Message




Find the Feature  > **Messages** > **VoiceMail**


The phone calls your voicemail phone number. If no voicemail number is stored, the phone prompts you to store one.

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.




Press	To
1 	answer the new call
2 SWITCH 	switch back to the first call
or	
LINK 	connect the two calls

*Note: You can press **SWITCH**  at any time to switch between calls.*

You must turn on call waiting to use the feature.

Find the Feature  > **Settings** > **In-Call Setup**
> **Call Waiting**

Putting a Call on Hold







Do This	To
Press HOLD  (if available)	put a call on hold
or	
Press  > Hold	Your phone displays a  (flashing phone) indicator to indicate that the call is on hold.

Transferring a Call


 



You can announce that you are transferring an active call to another party, or you can directly transfer the call.

Announce the Call Transfer

Find the Feature	 > Hold
Press	To
1 keypad keys	enter the phone number where you are transferring the call
2 	dial the phone number Speak to the person who answers the target phone.
3 	open the menu
4 	scroll to Transfer
5 SELECT ()	select Transfer
6 OK ()	confirm the transfer

Do Not Announce the Call Transfer

Find the Feature	 > Transfer
Press	To
1 keypad keys	dial that number where you are transferring the call
2 	transfer the call

 





Phone Features







    
Main Menu

This is the standard main menu layout. **Menu organisation and feature names may vary on your phone.**

- | | |
|--|-------------------|
| Games & Apps | Web Access |
| Tools | Browser |
| SIM Apps | Web Shortcuts |
| Calculator | Stored Pages |
| Datebook | History |
| Shortcuts | Goto URL |
| Dialling Services | Browser Setup |
| <ul style="list-style-type: none">• Barred Dial• Fixed Dial• Service Dial• Quick Dial | Camera |
| Fast Menu | Multimedia |
| Settings | Pictures |
| (see next page) | Sounds |
| Phonebook | Videos |
| Messages | Video Camera |
| Recent Calls | |



Settings Menu


 
 

 
-  **Personalise**
 - Main Menu
 - Home Keys
 - Colour Style
 - Greeting
 - Banner
 - Banner Graphic
 - Wallpaper
 - Screen Saver
 - Quick Dial
-  **Ring Styles**
 - Lights
 - Call-Light ID
 - Notice Lights
-  **Connection**
 - IrDA Link
 - Active Call
 - Bluetooth Link
 - Sync
 - Incoming Call
-  **Call Divert**
 - Voice Calls
 - Fax Calls
 - Data Calls
 - Cancel All
 - Divert Status
-  **In-Call Setup**
 - In-Call Timer
 - Call Cost Setup
 - My Caller ID
 - Answer Options
 - Call Waiting
 - Msg Alert
-  **Initial Setup**
 - Time and Date
 - VideoGateway
 - 1-Touch Dial
 - Auto Redial
 - Display Timeout
 - Backlight
- Scroll
- Animation
- Vibe Sync
- Language
- Battery Save
- DTMF
- Master Reset
- Master Clear
-  **Phone Status**
 - My Tel. Number
 - Active Line
 - Battery Meter
 - User Account
 - Storage Devices
 - Location
 - Other Info...
-  **Headset**
 - Auto Answer
 - Ringer Options
-  **Car Settings**
 - Auto Answer
 - Auto Handsfree
 - Power Off Delay
 - Charger Time
-  **Network**
 - New Network
 - Network Setup
 - Available Net...
 - My Network List
 - Service Tone
 - Call Drop Tone
-  **Security**
 - Phone Lock
 - Lock Keypad
 - Lock Application
 - Fixed Dial
 - Restrict Calls
 - Call Barring
 - SIM PIN
 - SIM PIN2
- Universal PIN
- WIM PINs
- New Passwords
-  **Java Settings**
 - Java System
 - Network Access
 - DNS IP

Feature Quick Reference

 

You can do more with your phone than make and receive phone calls! For example, you can store frequently called numbers in the phonebook for easy dialling, organise your meetings and other events in the datebook, browse the Web, download applications, send messages and email, and more.


 

 
 
 
 
 
 
 

 
This chapter provides information to help you locate features on your phone that are not described in this user guide. For more detailed information, see the reference guide.

Calling Features

Feature	Description
Conference Call	During a call:  > Hold , dial next number, press  , press LINK ()
Call Diverting	Set up or cancel call diverting:  > Settings > Call Divert
Call Barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring

Messages

Feature	Description
Send Message	Send a text message: Press  > Messages > Messages  > Create Message














 
Feature	Description
Receive Message	Read a new text message or MMS picture message that you have received: Press READ 
Inbox Setup	Set up or edit the text message inbox settings:  > Messages  > Setup > Message Setup
Insert Pictures, Sounds, & Quick Notes	While composing a message:  > Insert <i>Note: To insert another object, select  > Insert again.</i>
Sent Messages	View sent messages:  > Messages > Outbox
Received Messages	Read received messages:  > Messages > Message Inbox Press  to perform various operations on the selected message.
Store Pictures & Sounds	Highlight a picture or sound in a message, then:  > Store
Info Services	Read subscription-based information services messages:  > Messages > Info Services 
Drafts	View messages saved in drafts folder:  > Messages > Drafts

Email



 

 




Feature	Description
Send Email Message	Send an email message: ☐ > Messages > Email Messages ☐ > New Email
Receive Email Message	Read a new email message that you have received: Press READ (☐)
Email Inbox Setup	Set up or edit the email message inbox settings: ☐ > Messages ☐ > Setup > Email Msg Setup
Manually Send & Receive	Manually send and receive email messages: ☐ > Messages ☐ > Send/Receive Mail

Phonebook

Feature	Description
Create Entry	Create a new phonebook entry: ☐ > Phonebook ☐ > New > Phone Number, Email Address, or Mailing List
Dial Number	Call a number stored in the phonebook: ☐ > Phonebook > <i>entry to call</i>
Voice Dial Number	Voice dial a number stored in the phonebook: ☐ > Voice Dial Say the entry's name (in two seconds)

Feature	Description
Edit Entry	Edit a phonebook entry:  > Phonebook > <i>entry to edit</i> Press VIEW () , then press EDIT ()
Delete Entry	Delete a phonebook entry:  > Phonebook > <i>entry to delete</i>  > Delete
Sort Phonebook List	Set the order in which phonebook entries are listed:  > Phonebook  > Setup > Sort by > <i>sort order</i>
Set Primary Number	Set the primary number for a phonebook entry with multiple numbers:  > Phonebook > <i>entry</i>  > Set Primary > <i>phone number</i>
Copy Phonebook Entry	Copy a phonebook entry between the phone and SIM card:  > Phonebook > <i>entry</i>  > Copy Entry
Check Phonebook Capacity	Check how much space remains for storing phonebook entries on the phone or SIM card:  > Phonebook  > Phone Capacity or SIM Capacity
1-Touch Dial	Set 1-touch dial to call entries stored in your phone memory phonebook or the SIM card phonebook:  > Settings > Initial Setup > 1-Touch Dial




Personalising Features



Feature	Description
Event Alert	Change an event alert:  > Settings > Ring Styles > Alert Detail > <i>event name</i>
My Tones	Compose your own ring tones, manage ring tones that you have composed or downloaded:  > Settings > Ring Styles > My Tones
Greeting Text	Change the greeting text that appears when you turn on your phone:  > Settings > Personalise > Greeting 
Vibe Sync Vibrations	Turn on or off the vibrations in special games and ring tones:  > Settings > Initial Setup > Vibe Sync
Menu View	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalise > Main Menu > View
Soft Keys & Menu Icons	Change soft key labels and menu feature icons in the idle display:  > Settings > Personalise > Home Keys
Shortcuts	Create a shortcut to a menu item: Highlight the menu item, then press and hold  Select a shortcut:  > Shortcuts > <i>shortcut name</i>

Menu Features







Feature	Description
Language	Set menu language: ☰ > Settings > Initial Setup > Language
Master Reset	Reset all options <i>except</i> unlock code, security code, lifetime timer: ☰ > Settings > Initial Setup > Master Reset
Master Clear	Reset all options <i>except</i> unlock code, security code, lifetime timer, clear all user settings and entries <i>except</i> SIM card information: ☰ > Settings > Initial Setup > Master Clear

Dialling Features

 
 



 





Feature	Description
Fixed Dial	Turn fixed dialling on or off: ☰ > Settings > Security > Fixed Dial  Use the fixed dial list: ☰ > Tools > Dialling Services > Fixed Dial
Service Dial	Dial service phone numbers: ☰ > Tools > Dialling Services > Service Dial 
Quick Dial	Dial pre-programmed phone numbers: ☰ > Tools > Dialling Services > Quick Dial 

Feature	Description
DTMF Tones	<p>Activate DTMF tones:  > Settings > Initial Setup > DTMF</p> <p>Send DTMF tones during a call: Press number keys</p> <p>Send stored numbers as DTMF tones during a call: Highlight a number in the phonebook or recent call lists, then press  > Send Tones</p>


Call Monitoring


Feature	Description
Call Times	<p>View call timers:  > Recent Calls > Call Times</p> 
In-Call Timer	<p>Display time or cost information during a call:  > Settings > In-Call Setup > In-Call Timer</p> 
Call Cost	<p>View call cost trackers:  > Recent Calls > Call Cost</p> 

Handsfree Features



Feature	Description
Speaker-phone	Activate a connected external speakerphone during a call: Press SPEAKER  (if available) or  > Spkrphone On 
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset:  > Settings > Car Settings or Headset > Auto Answer 
Auto Hands-Free (car kit)	Automatically route calls to a car kit when connected:  > Settings > Car Settings > Auto Handsfree 
Power-Off Delay (car kit)	Set the phone to stay on for a period of time after the ignition is switched off:  > Settings > Car Settings > Power-Off Delay 
Charger Time (car kit)	Charge the phone for a period of time after the ignition is switched off:  > Settings > Car Settings > Charger Time 

 Data Calls




 



Feature	Description
Send Data	Connect your phone to the device, then place the call through the device application 

Feature	Description
Receive Data	Connect your phone to the device, then answer the call through the device application 

Network Features

Feature	Description
Network Settings	View network information and adjust network settings:  > Settings > Network 

Personal Organiser Features












Feature	Description
Add Datebook Event	Add an event to the datebook:  > Tools > Datebook > <i>day</i>  > New
View Datebook Event	View or edit event details:  > Tools > Datebook > <i>day</i> > <i>event name</i>
Calculator	Calculate numbers:  > Tools > Calculator
Currency Converter	Convert currency:  > Tools > Calculator  > Exchange Rate Enter exchange rate, press OK () enter amount, select \$ function


Security

Feature	Description
SIM PIN	Lock or unlock the SIM card: ☰ > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your phone displays SIM Blocked . Contact your service provider.
Lock Application	Lock phone applications: ☰ > Settings > Security > Lock Application
Show or Hide Private Phonebook Entries	You can show or hide private phonebook entries: ☰ > Settings > Security > Show/Hide Private Entries To change your private entry code: ☰ > Settings > Security > New Passwords > Private Entries Code To mark an entry private, open it and change its Private setting to On .

News and Entertainment

Feature	Description
Launch Micro-Browser	Start a micro-browser session: ☰ > WebAccess > Browser
Download Picture or Sound	Download a picture, animation, or sound file from a Web page: highlight the file, press SELECT (⏏), press STORE (⏏)

Feature	Description
Web Sessions	Select or create a Web session:  > WebAccess > Web Sessions
Launch Game or Java Application	Launch a Java game or application:  > Games & Apps , highlight the application, press SELECT ()
Download Game or Java Application	Download a Java game or application:  > WebAccess > Browser , highlight the application, press SELECT (), press DOWNLOAD ()
Network Access	Edit network connection settings for Java games and applications:  > Settings > Java Settings > Network Access
SIM Applications	Use SIM card applications:  > Tools > SIM Applications 
Picture Viewer	Manage pictures and animations:  > Multimedia > Pictures 

 





Specific Absorption Rate Data

This model phone meets international standards for exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The guidelines include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your phone model, the SAR limit is 2.0 W/kg.* Tests for SAR are conducted in accordance with CENELEC** testing procedures using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

   
 
Before a phone model is available for sale to the public, it is tested to confirm compliance with the guidelines. The tests are performed in positions and locations (e.g., at the ear and worn on the body) that conform to a uniform testing methodology determined by an expert standards body. The highest SAR value for this model phone when tested for use at the ear is: 0.55 W/kg.***






While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that modifications to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

   -
- * The SAR limit recommended by international guidelines (ICNIRP) for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements.
 - ** CENELEC is a European Union standards body.
 - *** Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.





Warranty Information

Motorola guarantees you, the original purchaser, the Personal Communicator and accessories which you have purchased from an authorised Motorola dealer (the "Products"), to be in conformance with the applicable Motorola specifications current at the time of manufacture for a term of [1] year from date of purchase of the Product(s) (Warranty Term).

 
 
 
 
You must inform Motorola of the lack of conformity to the applicable specifications of any of the Products within a period of two (2) months from the date on which you detect a defect in material, workmanship or lack of conformity and in any event within a term not to exceed the Warranty Term, by submitting the Product for service to Motorola. Motorola shall not be bound by Product related statements not directly made by Motorola nor any warranty obligations applicable to the seller.

 
A list of the Motorola Call Centre numbers is enclosed with this Product.

During the Warranty term, Motorola will, at its discretion and without extra charge, as your exclusive remedy, repair or replace your Product which does not comply with this warranty; or failing this, to reimburse the price of the Product but reduced to take into account the use you have had of the Product since it was delivered. This warranty will expire at the end of the Warranty Term.

This is the complete and exclusive warranty for a Motorola Personal Communicator and accessories and in lieu of all other warranties, terms and conditions, whether express or implied.

Where you purchase the product other than as a consumer, Motorola disclaims all other warranties, terms and conditions express or implied, such as fitness for purpose and satisfactory quality.






In no event shall Motorola be liable for damages nor loss of data in excess of the purchase price nor for any incidental special or consequential damages* arising out of the use or inability to use the Product, to the full extent such may be disclaimed by law.


This Warranty does not affect any statutory rights that you may have if you are a consumer, such as a warranty of satisfactory quality and fit for the purpose for which products of the same type are normally used under normal use and service, nor any rights against the seller of the Products arising from your purchase and sales contract.

(*including without limitation loss of use, loss of time, loss of data, inconvenience, commercial loss, lost profits or savings.

 How to get warranty service?






In most cases the authorised Motorola dealer which sold and/or installed your Motorola Personal Communicator and original accessories will honour a warranty claim and/or provide warranty service. Alternatively, for further information on how to get warranty service please contact either the customer service department of your service provider or Motorola's call centre at the telephone numbers below for your country.

 

In order to claim the warranty service you must return the Personal Communicator and/or accessories in question to Motorola please avoid leaving any supplementary items like SIM cards. The Product should also be accompanied by a label with your name, address, and telephone number; name of operator and a description of the problem. In the case of vehicular installation, the vehicle in which the Personal Communicator is installed should be driven to the Authorised Repair Centre, as analysis of any problem may require inspection of the entire vehicular installation.

   In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The phone should also clearly display the original compatible electronic serial number (IMEI) and mechanic serial number [MSN]. Such information is contained with the Product.







Conditions

This warranty will not apply if the type or serial numbers on the Product has been altered, deleted, duplicated, removed, or made illegible. Motorola reserves the right to refuse free-of-charge warranty service if the requested documentation can not be presented or if the information is incomplete, illegible or incompatible with the factory records.


 
Repair, at Motorola's option, may include reflashing of software, the replacement of parts or boards with functionally equivalent, reconditioned or new parts or boards. Replaced parts, accessories, batteries, or boards are warranted for the balance of the original warranty time period. The Warranty Term will not be extended. All original accessories, batteries, parts, and Personal Communicator equipment that have been replaced shall become the property of Motorola. Motorola does not warrant the installation, maintenance or service of the products, accessories, batteries or parts.




 Motorola will not be responsible in any way for problems or damage caused by any ancillary equipment not furnished by Motorola which is attached to or used in connection with the Products, or for operation of Motorola equipment with any ancillary equipment and all such equipment is expressly excluded from this warranty.



When the Product is used in conjunction with ancillary or peripheral equipment not supplied by Motorola, Motorola does not warrant the operation of the Product/peripheral combination and Motorola will not honour any warranty claim where the Product is used in such a combination and it is determined by Motorola that there is no fault with the Product. Motorola specifically disclaims any responsibility for any damage, whether or not to Motorola equipment, caused in any way by the use of the Personal Communicator, accessories, software applications and peripherals (specific examples include, but are not limited to: batteries, chargers, adapters, and power supplies) when such accessories, software applications and peripherals are not manufactured and supplied by Motorola.



 
 


 


What is not covered by the warranty

This warranty is not valid if the defects are due to damage, misuse, tampering, neglect or lack of care and in case of alterations or repair carried out by unauthorised persons.

  
 
 
 
1. Defects or damage resulting from use of the Product in other than its normal and customary manner.
2. Defects or damage from misuse, access to incompatible sources, accident or neglect.
3. Defects or damage from improper testing, operation, maintenance, installation, adjustment, unauthorised software applications or any alteration or modification of any kind.
4. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
5. Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
6. Defects or damage due to range, coverage, availability, grade of service, or operation of the cellular system by the cellular operator.
7. Defects or damage due to moist, liquid or spills of food.
8. Control unit coil cords in the Product that are stretched or have the modular tab broken.
9. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to customer normal use.
10. Leather cases (which are covered under separate manufacturer's warranties).
11. Products rented on a temporary basis.
12. Periodic maintenance and repair or replacement of parts due to normal wear and tear.





Note: *The talk-time, stand-by time and total life cycle of a Motorola rechargeable battery for your Personal Communicator will depend on usage conditions and network configurations. As a consumable product, the specifications indicate that you should be able to obtain optimum performance for your Motorola Personal Communicator within the first six months from date of purchase and up-to (200) charges.*

    The warranty for Motorola rechargeable batteries becomes void if (i) the batteries are charged other than by Motorola approved battery chargers specified for the charging of the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, (iii) the battery is used in equipment or service other than the cellular telephone equipment for which it is specified.



Index

A

- accessories
 - connector ports 1
 - optional 13
 - standard 13
- Add Digits** feature 58
- AGPS 47
- alert
 - creating 70
 - defined 48
 - indicators 24, 48
 - muting 18
 - turning off 49, 55
- animation
 - inserting in message 67
 - screen saver, setting 43
 - storing 67, 75
 - using 43
 - viewing 76
 - wallpaper 49
 - wallpaper, setting 43
- application, locking and
 - unlocking 75
- Attach Number** feature 58, 60
- automatic redial 53

B

- backlight 50, 51
- barring calls 66
- battery
 - car kit charger time 73
 - charging 15
 - extending battery life 16, 51
 - installing 14
 - level indicator 16, 24
- block cursor, defined 30

C

- calculator 74
- call
 - adding digits after phone
 - number 58
 - alert profile, setting 48
 - alert, muting 18
 - alert, turning off 55
 - answering 19
 - barring 66
 - call waiting 62
 - cancelling 55
 - costs 72
 - deleting 56
 - dialled calls list 56
 - dialling 19

- dialling a recent call 56
 - diverting 66
 - emergency number 55
 - ending 19, 20
 - hold 62
 - ignoring 55
 - making 19
 - placing 19
 - prefix digits, inserting 60
 - received calls list 56
 - receiving 19
 - recent calls 56
 - speakerphone 73
 - storing 56
 - terminating 55
 - timers 72
 - transferring 63
 - unanswered call 58
 - video 46, 57
 - video preview 46
 - Call Failed** message 53
 - call waiting 62
 - caller ID
 - incoming calls 54
 - lights 51
 - outgoing calls 58
 - calling line identification. *See*
 - caller ID
 - call-light ID 51
 - camera 42, 46
 - car kit
 - automatic answer 73
 - automatic hands-free 73
 - charger time 73
 - power-off delay 73
 - codes 18
 - conference call 66
 - copy text 36
 - cursor 29
 - customising the menu 70
 - cut text 36
- D**
- data call
 - receive 74
 - send 73
 - date, setting 48
 - datebook 74
 - default passwords 40
 - deleting a call 56
 - dialled calls list 56
 - dialling
 - fixed numbers 71
 - quick dial numbers 71
 - service numbers 71
 - dialling a number 19
 - display
 - backlight 50, 51
 - described 21
 - greeting 70
 - language 71



menu icons, personalising

70

diverting calls 66

drafts folder 67

DTMF tones 57, 58

activating 72

sending 72

E

earpiece

volume, adjusting 18

email

inbox setup 68

receiving 68

sending 68

sending manually 68

emergency number 55

end key

functions 1, 19, 20, 25

ending a call 19, 20

Enter Unlock Code message 39, 41

F

fixed dial 71

flashing cursor, defined 29

G

games 76

greeting 70

H

hands free use

automatic answer 73

automatic call routing 73

charger time 73

power-off delay 73

speakerphone, activating 73

headset

automatic answer 73

Hide ID feature 58

hold a call 62

home keys, personalising 70

I

ignoring a call 55

incoming call

cancelling 55

ignoring 55

terminating 55

Incoming Call message 54

indicators

alert setting 24, 48

battery level 16, 24

menu 21

message 23

missed call 58




ring alert 24


service 23

signal strength 22

silent alert 24

    text entry 23





vibrate alert 24
information services 67
iTAP software
 deleting text 36
 entering words 33

J

Java applications 76
joystick 24

K

key
 end 1, 19, 20, 25
 left soft key 1, 25, 70
 menu 1, 25
 power 17
 right soft key 1, 25, 70
 send 1, 19, 20, 25, 56
 video 46
 volume control 18





L

language, setting 71
Last Calls Menu
 opening 57
 options 57
left soft key
 functions 1, 25
 personalising 70
lights 50

location 47
lock
 application 75
 phone 38
 SIM card 75
loud ring alert 24

M

    making a call 19
master clear 71
master reset 71
menu
 entering text 28
 icons, changing in idle
 display 70
 icons, converting to text 70
 indicator 21
 language, setting 71
 Last Calls Menu 57
 lists 27
 navigating 24, 26
 Picture Viewer 43, 45
 view, changing 70
menu key 1, 25
message
 alerts during calls 49
 deleting 67
 drafts 67
 inbox setup 67
 information services 67
 lights 51





locking 67
outbox 67
picture 67
reading 67
status 67
text 66, 67
voicemail 61
message indicator
 defined 23
micro-browser
 browser setup 76
 Java applications 76
 using 75
 Web sessions 76
microphone 1
missed call indicator 58
Missed Calls message 59
my tones 70

N

network settings 74
notepad
 defined 59
 entering digits 59
notice lights 51
numeric text entry method 38

O




1-touch dial
 defined 60
 setting preference 60, 69

88 - Index

using 60
optional accessory, defined 13
optional feature, defined 13
outbox 67

P

   passwords
 changing 40
 default 40
paste text 36
phone
 accessories, optional 13
 accessories, standard 13
 alert, turning off 55
 clear stored information 71
 date, setting 48
 language, setting 71
 locking 38
 network settings 74
 1-touch dial 60
 passwords 40
 reset all options 71
 security code 41
 speed dial, using 60
 text entry indicator 23
 time, setting 48
 turning on/off 17
 unlock code 18, 41
 unlocking 18, 38
phone number
 adding digits after 58





- attaching to prefix digits 60
- attaching two numbers 58
- redialling 53
- storing in phonebook 68
- phonebook
 - attaching two numbers 58
 - capacity, checking 69
 - copying entries 69
 - deleting an entry 69
 - dialling a number 68
 - editing an entry 69
 - 1-touch dial 60
 - prefix digits, inserting 60
 - primary number, setting 69
 - private entries 75
 - sorting entries 69
 - speed dial number 60
 - speed dial, using 60
 - storing an entry 68
 - voice dialling 68
- picture
 - inserting in message 67
 - screen saver, setting 43
 - storing 67, 75
 - using 43
 - viewing 76
 - wallpaper, setting 43, 49
- PIN code
 - entering 75
- power key 17
- predictive text entry
 - deleting text 36
 - entering words 33
 - profile 48

Q

quick dial 71

R

- received calls list 56
- receiving a call 19
- recent calls 56
- redial
 - automatic redial 53
 - busy number 53
- right soft key
 - functions 1, 25
 - personalising 70
- ring alert
 - indicators 24
 - muting 18
 - setting 48
 - turning off 55
- ring and vibrate alert
 - indicator 24
 - muting 18
 - turning off 55
- ring style 70
- ring tone, creating 70
- ringer
 - setting 48
- volume, adjusting 18





roam. *See* service indicator

S

screen saver 43

security code 41

send key 1, 19, 20, 25, 56

sending a call. *See* making a call

service dial 71

service indicator 23

shortcuts

creating 70

Show ID feature 58

signal strength indicator 22

silent alert indicator 24

SIM applications 76

SIM Blocked message 18, 75

SIM card

applications 76

defined 14

installing 13

locking 75

PIN code entry 18

precautions 14

SIM Blocked message 18, 75

unlocking 18

SIM PIN code

entering 75

soft keys

illustration 1, 25

personalising 70

soft ring alert 24

sound

inserting in message 67

storing 67, 75

speakerphone 18, 73

speed dial

number, defined 60

using 60

storing a call 56

symbol text method 36

symbol text mode 34

symbols, entering 34, 36

T

tap method text entry 29

text

block cursor 30

character chart 31

copy 36

cut 36

entering from keypad 28

entry method, setup 38

entry mode, changing 37

flashing cursor 29

iTAP software predictive text

entry 32





numeric entry method 38


paste 36

symbol chart 35

symbol method 36

     symbol mode 34





tap method 29
undo 36
text entry indicator
 defined 23
text method, setup 38
time, setting 48
timers 72
transfer a call 63
travel charger, using 16

keys 18
ringer 18
speakerphone 18

W

wallpaper 43, 49
Web pages 75
Web sessions 76

U

undo copy, cut, or paste 36
unlock application 75
unlock code 18, 38, 41

V

vibe sync 70
vibrate alert
 indicator 24
 muting 18
 setting 48, 70
 turning off 55, 70
video 46
video call key 46
voice dial
 dialling a number 68
voice key
 dialling a number 68
voicemail 61
volume
 earpiece 18

6809468A81

Index - 91

