



MOTOROLA
intelligence everywhere™

 


MOTOMANUAL

V186
GSM

HELLOMOTO

Introducing your new Motorola V186 GSM wireless phone. Here's a quick anatomy lesson.

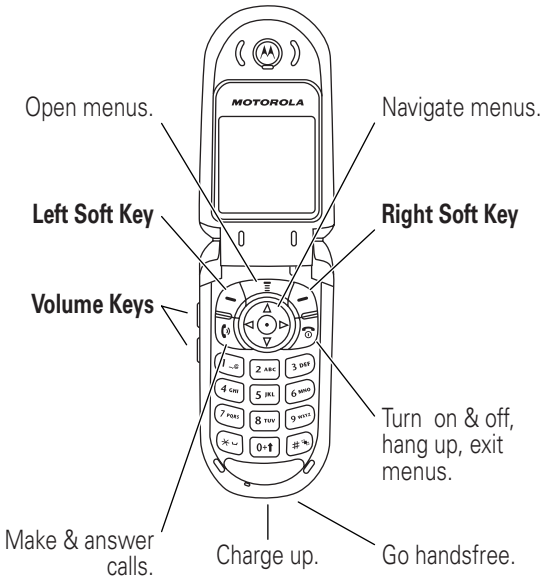

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

America Online, AOL, the America Online & Design logo, the AOL & Design logo, and the Triangle Logo, are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc.

© Motorola, Inc., 2005.

The information contained in Motorola's user's guides is believed to be correct at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice. The contents of Motorola's user's guides are provided "as is." Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or contents of this guide.

Manual Number: 6809492A77-0

feature locator

main menu



Phonebook



Ring Styles

- Style
- style Detail



Messages

- Create Message
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts
- Media Templates



Office Tools

- SIM Tool Kit Apps *
- Web Access
 - Browser
 - Browser Setup
 - Web Sessions
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Chat
- Dialing Services
 - Voice Dial
 - Fixed Dial
 - Quick Dial
 - Service Dial *



Games & Apps



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times



Multimedia

- Themes
- My Pictures
- Sounds
- MotoMixer



AIM

- Sign On
- Offline Conversati...
- Offline Settings
- Help



Settings

- (see next page)

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu



Personalize

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial



Ring Styles

- Style
- style Detail



Call Forward

- Voice Calls
- Fax Calls *
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Contrast
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Active Line *
- Battery Meter
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial
- Restrict Calls
- Call Barring
- SIM PIN
- New Passwords
- Certificate Mgmt



Java Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight
- DNS IP *

* optional features

contents

feature locator	3	customize	28
essentials	7	ring style	28
about this guide	7	time & date	29
SIM card	8	wallpaper	29
battery	8	screen saver	29
removable lens	10	themes	30
turn it on & off	11	display appearance	30
make a call	11	answer options	31
answer a call	11	calls	32
your phone number	12	turn off a call alert	32
main attractions	13	recent calls	32
multimedia messages	13	redial	33
USB connectivity	15	return a call	34
basics	16	notepad	34
display	16	hold or mute a call	34
menus	19	call waiting	35
text entry	21	caller ID	35
volume	25	emergency calls	36
navigation key	26	international calls	36
external display	26	1-touch dial	36
handsfree speaker	26	voicemail	37
codes & passwords	27		
lock & unlock phone	27		

other features	38
advanced calling	38
phonebook	40
messages	44
AOL®	
Instant Messenger™.	45
chat	46
personalizing	46
call times.	49
handsfree	49
data calls	50
network.	51
personal organizer.	51
security	52
fun & games	53
troubleshooting	55
SAR data	56
AOL® license.	58
index	62



essentials


CAUTION: Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press  > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press  to open the menu, highlight and select  **Recent Calls**, then highlight and select **Dialed Calls**.

Press  to scroll to and highlight a menu feature. Press the **SELECT** key to select the highlighted menu feature.

symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



 
This means a feature requires an optional accessory.

SIM card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

1

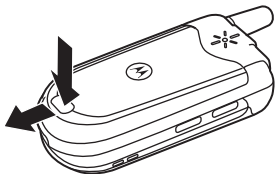


2

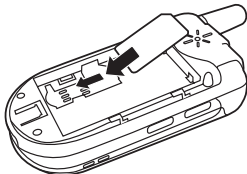 


battery

battery installation

 
1

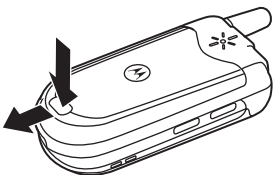

2

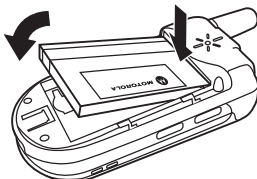 


3

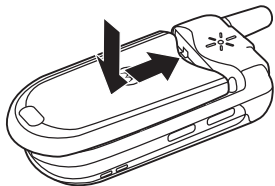 

battery charging

 New batteries are not fully charged. Plug the travel charger into your phone and an electrical outlet. Your phone displays **Charge Complete** when finished.

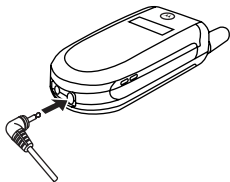

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.



- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.

 
removable lens

Your phone has a removable lens that you can replace to change its appearance.


Always use Motorola Original lenses. The phone warranty does not cover damage caused from using non-Motorola accessories.




- 1 Use your fingernail to lift the top of the lens and pull it away from the phone.

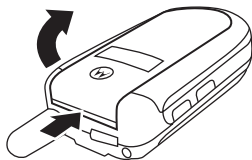


 - 2 Insert the tab at the bottom of the new lens into the bottom of the phone flip, then use your thumbs to press along the sides of the lens as you press it into place.

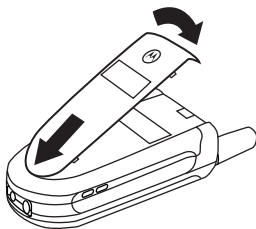


turn it on & off

 To turn on your phone, press and hold  for 2 seconds. If prompted, enter your 6-digit SIM card PIN code and/or 4-digit unlock code.

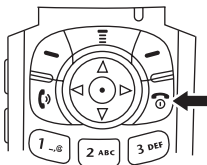


Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. Contact your service provider.


To turn off your phone, press and hold  for 2 seconds.


make a call

Enter a phone number and press  to make a call.



To “hang up,” close the flip or press .


answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.

To “hang up,” close the flip or press .

your phone number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you’re on a call? Press  > **My Tel. Numbers**.

To store or edit your name and number on your SIM card, press the **EDIT** key while displaying it. If you don’t know your phone number, contact your service provider.



main attractions

You can do much more with your phone than make and receive calls!


multimedia messages

For more message features, see page 44.


send a multimedia message


A *Multimedia Messaging Service* (MMS) message contains pages with text and media objects (including photos, pictures, animations, or sounds). You can send the multimedia message to other MMS-capable phones, and to email addresses.



Find it: Press  > **Messages** > **Create Message** > **New Multimedia Msg**

- 1 Press keypad keys to enter text on the page (for details about text entry, see page 21).

To insert a **picture, sound, or other object** on the page, press  > **Add Media**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press  > **Add Media** > **New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press the **OK** key.
- 3 Choose one or more people for **Send To**:

To select a **phonebook entry**, highlight the entry and press the **ADD** key. Repeat to add other phonebook entries.

To **enter** a new number, highlight [**One Time Entry**] and press the **SELECT** key.

To **enter and store** a new number, highlight [**New Phonebook Entry**] and press the **SELECT** key.

- 4 When you finish entering numbers/addresses, press the **DONE** key. Your phone displays the message fields.

To enter a **subject** for the message, highlight **Subject** and press the **ADD/EDIT** key.


To **attach a file** to the message, highlight **Attachments** and press the **ADD/EDIT** key. Select the file type and the file.

To request a **delivery receipt** for the message, highlight **Receipt** and press the **ADD/EDIT** key. Press the **ADD** key.

- 5 To **send** the message, press the **SEND** key.

To **cancel or save** the message as a **Draft**, press .

receive a multimedia message

When you receive a multimedia message or letter, your phone plays an alert and displays **New Message** with a message indicator such as .



Press the **READ** key to open the message.

If a multimedia message contains media objects:


- Photos, pictures, and animations display as you read the message.

 
- A sound file plays when its slide displays. Use the volume keys to adjust the sound volume.

Note: In a multimedia letter, you may have to highlight an indicator in the text to play a sound file.

- Attached files are added to the end of the message. To open an attachment, highlight the file indicator/filename and press the **VIEW** key (image), **PLAY** key (sound), or **OPEN** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

USB connectivity

 Your phone has a mini-USB port so you can connect it to a PC to make data calls (see page 50).

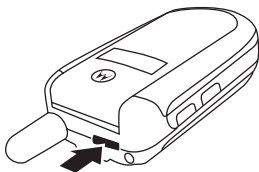


Note: Motorola Original USB data cables and supporting software are sold separately.



 
basics



See page 1 for a basic phone diagram.


display

The *home screen* displays when you turn on the phone. To dial a number from the home screen, press number keys and .

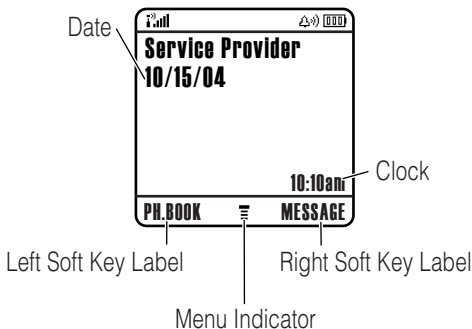
Note: Your home screen may look different from the one below, depending on your service provider.



The *Menu Indicator*  shows that you can press  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Press  up, down, left, or right to open basic menu features.

 Status indicators can display at the top of the home screen:

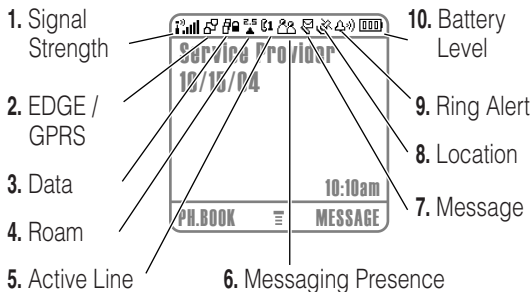

1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when or displays.

2 EDGE/GPRS Indicator – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio Service* (GPRS) network connection. Indicators can include:

= GPRS PDP context active

= EDGE

= GPRS packet data available

3 Data Indicator – Shows connection status.

= secure packet data transfer

= unsecure packet data transfer

= secure application connection

= unsecure application connection

= secure *Circuit Switch Data* (CSD) call

= unsecure CSD call

4 Roam Indicator – Shows when your phone is seeking or using a network outside your home network. Indicators can include:





 = 2G home

 = 2G roam

 = 2.5G home


 = 2.5G roam

 
5 Active Line Indicator – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:





 = line 1 active


 = line 2 active

 = line 1 active, call forward on

 = line 2 active, call forward on


6 AIM® Indicator – Shows when AIM instant messaging is active  or you are away from AIM .



When a Java™ application is active,  can display here.

7 Message Indicator – Shows when you receive a new message. Indicators can include:





 = text message

 = voicemail message

 = voicemail & text message

 = AIM message

 = active chat session

8 Location Indicator – Shows when your phone can send location information  or not .




9 Ring Style Indicator – Shows the ring style setting.

 = loud ring

 = vibrate then ring

 = soft ring

 
 = silent

 = vibrate







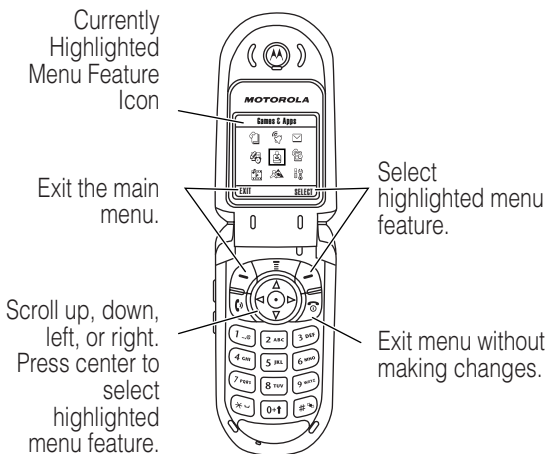



10 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

menus

From the home screen, press  to enter the main menu.




The following menu icons may be available, depending on your service provider and service subscription options.

menu features	
 Phonebook	 Recent Calls
 Ring Styles	 Multimedia
 Messages	 AIM
 Office Tools	 Settings
 Games & Apps	 Browser

Note: Your Instant Messaging menu icon may be different from the icon in the table, depending on your service provider.

 Some features require you to select an option from a list:

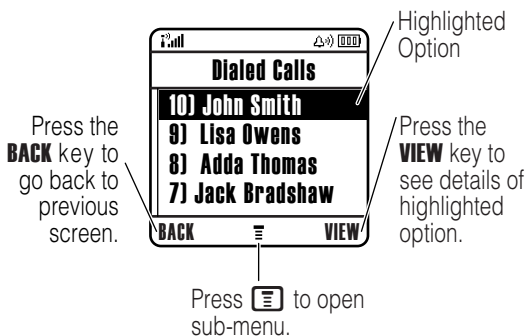


- Scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight an option.





 
- In an alphabetized list, press a key repeatedly to cycle through its letters and highlight the closest matching list option.
- When an option has a list of possible settings, scroll left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

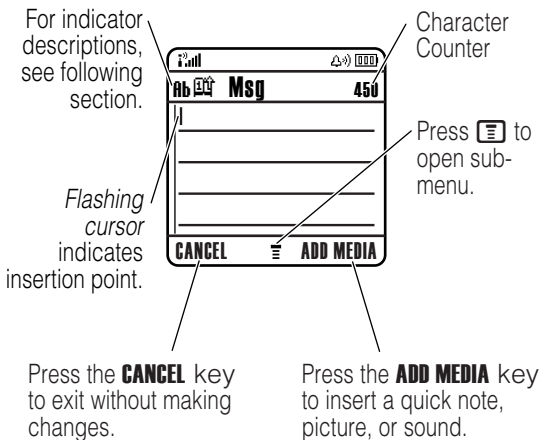
text entry






Some features let you enter text.




 


Press **[#]** in a text entry screen to select an entry mode:

entry mode	
 or 1	Your Primary text entry mode can be set to any iTAP®  or tap 1 mode.
 or 2	Your Secondary text entry mode can be set to any iTAP  or tap 2 mode, or set to None if you don't want a secondary entry mode.
12	Numeric mode enters numbers only.
	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press  > **Entry Setup** in a text entry screen and select **Primary Setup** or **Secondary Setup**.

 
Tip: WANT TO SHOUT YOUR MESSAGE? Press  in a text entry screen to change text case to no capital letters (**ab**), next letter capital (**Ab** with , , **1↑**, or **2↑**), or all capitals (**AB** with , , **1↑**, or **2↑**).

iTAP® mode

Press  in a text entry screen to switch to iTAP mode. If you don't see  or , press  > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your phone displays:

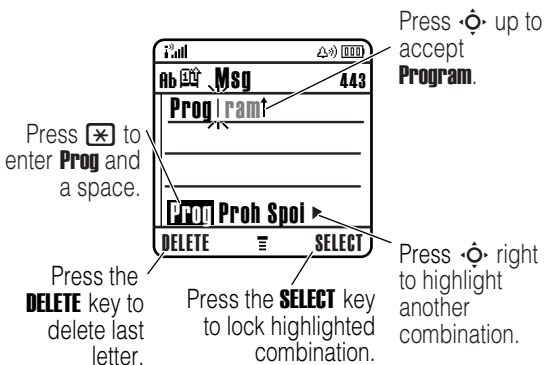


- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press **1** to enter punctuation or other characters.

tap mode

  
Press **#** in a text entry screen to switch to tap mode. If you don't see **Ab 1** or **Ab 2**, press **≡** > **Entry Setup** to set tap mode as your primary or secondary text entry mode.


 

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **3** one time, your phone displays:

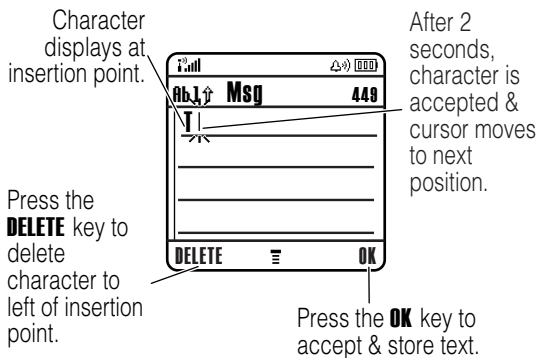


When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your phone might display:

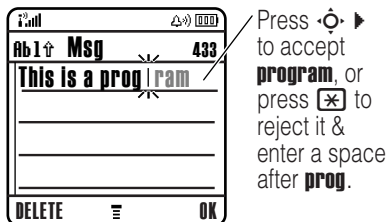


- The first character of every sentence is capitalized. If necessary, press  down to change the character to lowercase before the cursor moves to the next position.
- Press  to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press  to exit without saving.
- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

numeric mode

Press  in a text entry screen until you see 12. Press the number keys to enter the numbers you want.

 
symbol mode

Press  in a text entry screen until you see @. Press a keypad key to show its symbols at the bottom of the display. Highlight the symbol you want, then press the **SELECT** key.

volume

Press the volume keys to:

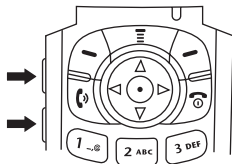

- turn off an incoming call alert
- change the earpiece volume during calls

 


- change the ringer volume from the home screen

Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by pressing the down volume key repeatedly in the home screen.

navigation key

Press the *navigation key*  up, down, left, or right to scroll and highlight things. When you highlight something, press the *center key*  to select it. The center key usually does the same thing as the right soft key.

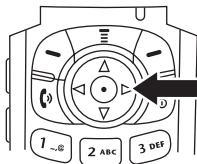

external display

When your phone is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 17.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **SPEAKER** key to turn the handsfree speaker on or off. Your phone displays **Spkrphone On** until you turn it off or end the call.


Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's 4-digit **unlock code** is originally set to **1234**. The 6-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it: Press  > **Settings** > **Security** > **New Passwords**

You can also change your **SIM PIN** or call barring passwords.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your 6-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

To **manually lock** your phone: Press  > **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 36). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 **Loud**

 **Vibrate**

 **Silent**

 **Soft**

 **Vibe then Ring**

The ring style profile's indicator displays at the top of your home screen. To choose your profile:

Find it: Press  > **Ring Styles** > **Style** > *style name*

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press  > **Ring Styles** > *Style Detail*


Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Highlight **Calls** (or **Line 1** or **Line 2** for dual line phones), then press the **ADD/EDIT** key to change it.
- 2 Highlight the alert you want, then press the **SELECT** key.
- 3 Press the **BACK** key to save the alert setting.

time & date

You need to set your phone's time and date to use the datebook.

Find it: Press  > **Settings** > **Initial Setup** > **Time and Date**

Note: To choose an analog or digital clock for your home screen, press  > **Settings** > **Personalize** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it: Press  > **Settings** > **Personalize** > **Wallpaper**

option	
Picture	Select an image for your wallpaper image, or None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver


Set a photo, picture, or animation as a screen saver image. The screen saver displays when the flip is open and no activity is detected for a specified time.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: Press  > **Settings** > **Personalize** > **Screen Saver**



option	
Picture	Select an image for your screen saver, or None for no screen saver.
Delay	Select the length of inactivity before the screen saver displays.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more. 


To **apply** a theme, press  > **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 53.


To **delete** a theme, press  > **Multimedia** > **Themes**, scroll to the theme, and press  > **Delete** or **Delete All**.


Note: You can delete only downloaded themes.

display appearance

To choose the **colors** that your phone uses for indicators, highlights, and soft key labels: Press  > **Settings** > **Personalize** > **Color Style**.

To save battery life, your **backlight** turns off when you're not using your phone. The backlight turns back on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press  > **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press  > **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press  > **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press  > **Settings** > **In-Call Setup** > **Answer Options**

option	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.

calls


To make and answer calls, see page 11.


turn off a call alert



You can press the volume keys to turn off a call alert before answering the call.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to see the dialed calls list.


Find it: Press  > **Recent Calls**

- 1 Highlight **Received Calls** or **Dialed Calls**, then press the **SELECT** key.
- 2 Highlight a call. A ✓ next to a call means the call connected.
 - To call the number, press .
 - To see call details (like time and date), press the **VIEW** key.
 - To see the **Last Calls Menu**, press . This menu can include:

option	
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option displays only during a call.

redial


- 1 Press  from the home screen to see the dialed calls list
- 2 Highlight the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed**, **Number Busy**, press  or the **RETRY** key to redial the number. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and connects the call.




return a call



Your phone keeps a record of your unanswered calls, and displays **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **VIEW** key to see the received calls list.
- 2 Highlight the call you want to return, then press .


notepad


The last set of digits entered on the keypad are stored in *notepad* memory. This can be the last phone number you called, or a number that you “jot down” during a call for later use. To see the number stored in the notepad:

Find it: Press  > **Recent Calls** > **Notepad**

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **STORE** key .
- To open the **Dialing Menu** to attach a number or insert a special character, press .

hold or mute a call

Press  > **Hold** to put all active calls on hold.


Press  > **Mute** to put all active calls on mute.

call waiting

When you're on a call, you'll hear an alert if you receive a second call.



Press  to answer the new call.

- To switch between calls, press the **SWITCH** key.
- To connect the two calls, press the **LINK** key.
- To end the call on hold, press  > **End Call On Hold**.

To turn the call waiting feature on or off:

Find it: Press  > **Settings** > **In-Call Setup** > **Call Waiting**

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.



Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a distinctive ringer ID for specific entries stored in your phonebook (see page 42).


To show or hide **your phone number** for the next outgoing call, enter digits in the display, then:

Find it: Press  > **Hide ID/Show ID**

 
emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

international calls

If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.



1-touch dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone's memory phonebook, your SIM card's phonebook, or your Fixed Dial list:

 
Find it: Press  > **Settings** > **Initial Setup** > **1 Touch Dial**
> **Phone, SIM, or Fixed Dial**

voicemail


Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.



Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone displays the voicemail message indicator  and **New Voicemail**. Press the **CALL** key to listen to the message.

To **check** voicemail messages:
















Find it: Press  > **Messages** > **Voicemail**









Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

other features

advanced calling

feature		
conference call	During a call: Dial next number, press  , press the LINK key.	
transfer a call	During a call:  > Transfer , dial transfer number, press 	
attach a phone number	Dial an area code or prefix for a phonebook number, then:  > Attach Number	
speed dial	Speed dial a phonebook entry: Enter speed dial number, press  , press  Tip: If you forget Aunt Mildred's speed dial number, press  > Phonebook , highlight her entry, and press the VIEW key.	
call forwarding	Set up or cancel call forwarding:  > Settings > Call Forward	
call barring	Restrict outgoing or incoming calls:  > Settings > Security > Call Barring	

feature	
TTY calls	<p>Set up your phone for use with an optional TTY device: </p> <p> > Settings > Initial Setup > TTY Setup</p>
change phone line	<p>If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number. </p> <p> > Settings > Phone Status > Active Line</p> <p>The active line indicator shows the active phone line (see page 18).</p>
fixed dial	<p>When you turn on fixed dialing, you can call only numbers stored in the fixed dial list. </p> <p>Turn fixed dialing on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p>
service dial	<p>Dial service phone numbers: </p>
quick dial	<p>Dial preprogrammed phone numbers: </p>

feature

DTMF tones

Activate DTMF tones:

 > **Settings** > **Initial Setup** > **DTMF**

Send DTMF tones during a call:

Press number keys.

Send stored numbers as DTMF tones during a call:

Highlight a number in the phonebook or recent calls lists, then press

 > **Send Tones**.






phonebook










feature








add new entry  > **Phonebook**  > **New** > **Phone Number** or **Email Address**





Shortcut: Enter a phone number in the home screen, then press the **STORE** key to create an entry for that number.

Tip: One phone isn't enough for some people. When creating a phonebook entry, select **MORE** to store another number for the same **Name**.

feature	
record a voice name	<p>When creating a phonebook entry, highlight Voice Name and press the RECORD key. Press the RECORD key again and say the entry's name (within 2 seconds). When prompted, press the RECORD key and repeat the name.</p> <p>Note: The Voice Name option isn't available in entries stored on the SIM card.</p>
dial number	<p>Call a number stored in the phonebook:</p> <p> > Phonebook, highlight the phonebook entry, press </p> <p>Shortcut: In the phonebook, press a keypad key one or more times to jump to entries that begin with the key's letters.</p>
voice dial number	<p>Voice dial a number stored in the phonebook:</p> <p> > Office Tools > Dialing Services > Voice Dial</p> <p>When prompted, say the entry's voice name (within 2 seconds).</p> <p>Tip: If you use Voice Dial a lot, you can create a shortcut to it. Highlight Voice Dial, then press and hold . To use the shortcut, press  and the shortcut key number.</p>








feature	
set ringer ID for entry	<p>Assign a distinctive ring alert (ringer ID) to an entry:</p> <p> > Phonebook > <i>entry</i>  > Edit > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option isn't available in entries stored on the SIM card.</p> <p>To activate ringer IDs:</p> <p> > Ring Styles > <i>style Detail</i> > Ringer IDs</p>
set picture ID for entry	<p>Assign a photo or picture to display when you receive a call from an entry:</p> <p> > Phonebook > <i>entry</i>  > Edit > Picture > <i>picture name</i></p> <p>Note: The Picture option isn't available in entries stored on the SIM card.</p>
set picture ID view	<p>Display entries as a text list, or with picture caller ID photos:</p> <p> > Phonebook</p> <p> > Setup > View by > <i>view name</i></p>
set category for entry	<p> > Phonebook > <i>entry</i>  > Edit > Category > <i>category name</i></p> <p>Note: The Category option isn't available in entries stored on the SIM card.</p>






feature	
set category view	<p> > Phonebook</p> <p> > Categories > <i>category view</i></p> <p>You can display All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you create.</p>
sort phonebook list	<p>Set the order in which entries are listed:</p> <p> > Phonebook</p> <p> > Setup > Sort by > <i>sort order</i></p> <p>You can sort the phonebook list by Name, Speed No., Voice Name, or Email. When sorting by name, you can display All numbers or just the Primary number for each name.</p>
set primary number or address	<p>Set the primary number for an entry with multiple numbers:</p> <p> > Phonebook, highlight the entry, press</p> <p> > Set Primary > <i>number or address</i></p> <p>Tip: In Primary number view mode, you can still peek at other numbers stored for the same name. Highlight the name and press  left or right to see the other numbers.</p>

feature	
copy phonebook entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p> > Phonebook, highlight the entry, press  > Copy > Entries > To</p>
create group mailing list	 > Phonebook  > New > Mailing List






messages




For basic multimedia message features, see page 13.

feature	
send text message	<p> > Messages > Create Message > New Short Msg </p>
send letter	<p> > Messages > Create Message > New Letter </p>
use a multimedia template	<p>Open a multimedia template with preloaded media: </p> <p> > Messages > Media Template</p>
read new message	<p>Read a new text message or multimedia message that you have received: </p> <p>Press the READ key when the New Message notification displays.</p>







feature		
read old messages	 > Messages > Message Inbox Press  to perform various operations on a message.	
store message objects	Go to a multimedia message page, or highlight an object in a letter, then:  > Store	

AOL® Instant Messenger™




feature		
sign on	 > AIM > Sign On You need a screen name to sign on to AIM®. To set up a screen name, see http://www.aim.com .	
find others online	After you sign on: Select Buddy List to see a Buddy List™ of other users.	
start conversation	From your Buddy List , highlight a name in Online Buddies , press the SEND IM key.	
open active conversation	Open a conversation in progress: From your Buddy List , highlight a name in Conversations , press the VIEW key, press the WRITE key to send a message.	









feature		
end conversation	From the conversation display:  > End Conversation	
sign off	Select Sign Off from the AIM Online menu.	





chat

feature		
start chat	 > Office Tools > Chat  > New Chat	
receive chat request	Press the ACCEPT key or the IGNORE key.	
end chat	During a chat session:  > End Chat	


personalizing

feature		
language	Set menu language:  > Settings > Initial Setup > Language	
scroll	Set the highlight bar to stop or wrap around in menu lists:  > Settings > Initial Setup > Scroll	
activate ringer IDs	Activate ringer IDs assigned to phonebook entries and categories:  > Ring Styles > <i>style</i> Detail > Ringer IDs	





feature	
ring volume	 > Ring Styles > <i>style</i> Detail > Ring Volume
keypad volume	 > Ring Styles > <i>style</i> Detail > Key Volume
reminders	Set reminder alerts for messages that you receive:  > Ring Styles > <i>style</i> Detail > Reminders
clock view	Display an analog or digital clock in the home screen:  > Settings > Personalize > Home Screen > Clock
menu view	Display the main menu as graphic icons or as a text-based list:  > Settings > Personalize > Main Menu > View
main menu	Reorder your phone's main menu:  > Settings > Personalize > Main Menu > Reorder
show/hide menu icons	Show or hide menu feature icons in the home screen:  > Settings > Personalize > Home Screen > Home Keys > Icons
change home keys	Change the functions for the soft keys and navigation key in the home screen:  > Settings > Personalize > Home Screen > Home Keys

feature	
shortcuts	<p>Create a shortcut to a menu item:</p> <p>Highlight the menu item, then press and hold .</p> <p>Use a shortcut:</p> <p>Press , then press the shortcut number.</p>
master reset	<p>Reset all options except unlock code, security code, and lifetime timer:</p> <p> > Settings > Initial Setup > Master Reset</p>
master clear	<p>Clear all settings and entries you made except SIM card information, downloaded pictures and sound files, and reset all options except unlock code, security code, and lifetime timer:</p> <p> > Settings > Initial Setup > Master Clear</p> <p>Caution: Master clear erases all information you have entered (including phonebook and datebook entries) and content you have downloaded (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.</p>

call times



Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.






The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

feature	
call times	Display call timers:  > Recent Calls > Call Times 
in-call timer	Display time information during a call:  > Settings > In-Call Setup > In-Call Timer 

handsfree


Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

feature	
speakerphone	Activate a connected external speakerphone during a call: Press the SPEAKER key (if available, or  > Spkrphone On). 

feature		
auto answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: ☰ > Settings > Car Settings or Headset > Auto Answer	
voice dial (headset)	Enable voice dial with headset send/end key: ☰ > Settings > Headset > Voice Dial	
auto handsfree (car kit)	Automatically route calls to a car kit when connected: ☰ > Settings > Car Settings > Auto Handsfree	
power-off delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off: ☰ > Settings > Car Settings > Power-Off Delay	
charger time (car kit)	Charge the phone for a specified time after the ignition is switched off: ☰ > Settings > Car Settings > Charger Time	

data calls

To connect your phone with a USB cable, see page 15.

feature		
send data	Connect your phone to the device, then place the call through the device application.	

feature

receive data Connect your phone to the device, then answer the call through the device application.



network

feature

network settings Display network information and adjust network settings:




 > **Settings** > **Network**

personal organizer

feature




set alarm  > **Office Tools** > **Alarm Clock**

turn off alarm When an alarm displays:
To turn off the alarm, press the **DISABLE** key or .





To set an 8 minute delay, press the **SNOOZE** key.

add new datebook event










view datebook event Display or edit event details:






feature	
event reminder	When an event reminder displays: To see reminder details, the VIEW key. To close the reminder, press the EXIT key.
calculator	 > Office Tools > Calculator
currency converter	 > Office Tools > Calculator  > Exchange Rate Enter exchange rate, press the OK key, enter amount, and select \$ at the bottom of the display.

security

feature	
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays SIM Blocked .
lock feature	 > Settings > Security > Lock Application
manage certificates	Enable or disable Internet access certificates stored on your phone:   > Settings > Security > Certificate Mgmt Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

feature		
manage pictures	Manage photos, pictures, and animations:  > Multimedia > My Pictures	
manage sounds	Manage ring tones and music that you have downloaded or composed:  > Multimedia > Sounds	
edit sounds with motomixer	Edit MIDI-based sound files that you can use with your phone:  > Multimedia > MotoMixer	
start micro-browser	 > Office Tools > Web Access > Browser Shortcut: Press the right softkey when you see BROWSER in the lower right display.	
download objects from Web page	Download a picture, sound, or phone theme from a Web page: Highlight the file, press the SELECT key, press the STORE key. Note: Normal airtime and/or carrier usage charges apply.	
web sessions	Select or create a Web session:  > Office Tools > Web Access > Web Sessions	

feature		
download game or application	Download a Java™ game or application with the micro-browser:  > Office Tools > Web Access > Browser , highlight the application, press the SELECT key, press the DOWNLOAD key Note: Normal airtime and/or carrier usage charges apply.	
start game or application	Start a Java™ game or application:  > Games & Apps , highlight the game or application, press the SELECT key	
create ring tones	Create ring tones that you can use with your phone:  > Multimedia > Sounds > [New iMelody]	

troubleshooting

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested

for use at the ear is 1.40 W/kg , and when worn on the body, as described in this user guide, is 0.28 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 0.25 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

License Agreement for AOL® Instant Messenger™ Service

The AOL Instant Messenger service (the “Service”) is provided to you by AOL, “AS IS,” subject to the terms and conditions of this License Agreement (the “Agreement”). Please read this Agreement in full before using the Service. ONLY INDIVIDUALS WHO HAVE AGREED TO THE TERMS AND CONDITIONS OF THIS AGREEMENT MAY ACCESS THE AOL INSTANT MESSENGER SERVICE.

BY YOUR USE OF THE AOL INSTANT MESSENGER SERVICE, YOU AGREE TO USE THE AOL INSTANT MESSENGER SOFTWARE (THE “SOFTWARE”) AND SERVICE AS PROVIDED IN THIS AGREEMENT.

1. Limited License. AOL grants you a limited, non-exclusive license to use the Software solely for the specified platform to access the Service.

2. Restrictions on Use. You may not create or use any software other than the Software provided by AOL to access the Service, without the express written authorization of AOL. You may not modify, reverse engineer, decompile or disassemble the Software or in any way ascertain, decipher, or obtain the communications protocol for accessing the Service. You may not adapt, alter, modify, translate, or create derivative works of the Software without the express written authorization of AOL. You may not block, disable or otherwise affect any advertising, advertisement banner window, links to other sites and services, or other features that constitute an integral part of the Software and Service. You may not incorporate, integrate or otherwise include the Software or any portion thereof into any software, program or product that communicates, access, or otherwise connects with any other instant messaging, Internet service, or online service. Finally, you may not authorize or assist any third party to do any of the things described in this paragraph.

3. Your Representations. You represent and warrant that you will use the Software and Service only for lawful purposes and in accordance with this

Agreement, and that you will not use the Software or the Service to violate any law, regulation or ordinance or any right of AOL or any third party, including, without limitation, any right of privacy, publicity, copyright or trademark.

4. Charges. Please consult your rate plan and agreement with your service provider to determine if the Service is included in your rate plan, or if other charges may apply.

5. Termination. Should you breach this Agreement, your right to use the Software and the Service shall terminate immediately and without notice. You may also terminate this Agreement by simply discontinuing use of the Software and the Service. In the event of any termination of this Agreement, the restrictions on your use of the Software and Service as set forth in Paragraph 2 ("Restrictions on Use") shall survive such termination, and you agree to be bound by those terms.

6. No Support by AOL. You understand that you use the Software and the Service at your own risk and provides no assistance or support for your use of the Software or the Service.

7. Disclaimer of Warranty. THE SOFTWARE AND THE SERVICE ARE PROVIDED "AS IS," WITHOUT WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION WARRANTIES THAT THE SOFTWARE AND THE SERVICE ARE (A) FREE OF DEFECTS OR ERRORS, (B) VIRUS FREE, (C) ABLE TO MEET ANY REQUIREMENTS OF YOU OR ANYONE ELSE, (D) ABLE TO OPERATE ON AN UNINTERRUPTED BASIS, (E) MERCHANTABLE, (F) FIT FOR A PARTICULAR PURPOSE OR (G) NON-INFRINGEMENT, UNLESS SUCH WARRANTIES ARE LEGALLY INCAPABLE OF EXCLUSION. AOL SHALL HAVE NO LIABILITY WITH RESPECT TO USE OF THE SOFTWARE OR THE SERVICE.

8. Limitation of Liability. NEITHER AOL, ITS EMPLOYEES, DISTRIBUTORS, SUPPLIERS, DIRECTORS, NOR AGENTS SHALL BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS AND LOST DATA, IN ANY WAY ARISING OUT OF OR RELATING TO THIS

AGREEMENT, EVEN IN THE EVENT SUCH PARTY HAS BEEN ADVISED AS TO THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR THE LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, IN SUCH STATES OR JURISDICTIONS, AOL'S LIABILITY SHALL BE LIMITED TO THE EXTENT PERMITTED BY LAW.

9. No Trademark License. No license is granted to you in this Agreement, either expressly or implicitly, to use any trademark, service mark, names, or logos of AOL, including America Online, AOL, AOL Instant Messenger, Instant Messenger, AIM and the Running Man logo. AOL owns all intellectual property in the Software, the Service and the proprietary AOL name space database, including but not limited to AOL components and algorithms and access to the Service server complex. AOL and/or its suppliers or service providers own all customer data collected through the Service registration process.

10. Injunctive Relief. You acknowledge that the Software contains AOL's proprietary and confidential information, and that disclosure of such information or misuse of the Software will give rise to irreparable injury to AOL, inadequately compensable in damages. Accordingly, AOL may seek and obtain injunctive relief against the breach or threatened breach of the foregoing undertakings, in addition to any other legal remedies that may be available.

11. Construction. If any part of the Agreement is held invalid or unenforceable, that portion shall be construed to reflect the parties' original intent, and the remaining portions remain in full force and effect. The laws of the Commonwealth of Virginia, excluding its conflicts-of-law rules, govern this Agreement, and you expressly agree that jurisdiction for any claim or dispute arising from the use of the Protocols resides in the federal and state courts of the Commonwealth of Virginia.

12. Safety. Please obey all local laws and keep safety in mind when using this device to access the Service while engaging in any activity that requires your full attention.

AOL, AOL Instant Messenger, AIM, Buddy List, and Triangle are trademarks, registered trademarks, and service marks of America Online, Inc.

Part No. AOLIM091901c SKU # (TM1029)

index

A

- accessories 7, 49
- accessory connector port 1
- active line indicator 18
- active line, changing 39
- AIM 45
- AIM indicator 18
- alarm clock 51
- alert
 - set 26, 28
 - turn off 25, 26, 32
- animation 53
- answer a call 11, 31
- AOL Instant Messenger.
 - See AIM
- attach a number 33, 38

B

- backlight 30
- battery 8, 9
- battery indicator 19
- battery life, extending 9,
29, 30, 31
- browser. See micro-browser

C

- calculator 52

call

- answer 11, 31
- end 11, 12
- make 11, 41
- call barring 27, 38
- call forward indicator 18
- call forwarding 38
- call timers 49
- call waiting 35
- caller ID 33, 35, 42
- camera key 1
- car kit 49
- center key 1, 26
- certificate management 52
- chat 46
- clock 29, 47
- codes 27
- color 30
- conference call 38

D

- data call 15, 50, 51
- data indicator 17
- date, setting 29
- datebook 51, 52
- dial a phone number 11, 39,
41

dialed calls 32
display 16, 30, 47
download media objects
 45, 53
drafts folder 14
DTMF tones 33, 40

E

earpiece volume 25
EDGE indicator 17
email 44
email address 40
emergency number 36
end a call 11, 12
end key 1, 11, 12
Enter Unlock Code
 message 27
external display 26

F

fixed dial 39
flip 11, 31
forward calls 38

G

games 54
GPRS indicator 17
group mailing list 44

H

handsfree speaker 26

headset 49
headset jack 1
hold a call 34
home screen 16, 47

I

in-call indicator 18
Incoming Call message 35
instant messenger. See
 AIM
international access code
 36
iTAP text entry mode 22

J

Java applications 54
Java indicator 18

K

keypad 31, 47

L

language 46
lens 10
location indicator 18
lock
 application 52
 phone 27
 SIM card 52
Low Battery message 19

M

make a call 11, 41
master clear 48
master reset 48
menu 19, 46, 47
menu icons 16, 20, 47
menu indicator 16
menu key 1, 7
message 44, 45
message indicator 14, 18
message reminders 47
micro-browser 53, 54
Missed Calls message 34
MMS, defined 13
MotoMixer 53
multimedia letter 44
multimedia message 13,
44, 45
music 53
mute a call 34

N

navigation key 1, 7, 26
network settings 51
notepad 34
number. See phone number
numeric entry mode 25

O

1-touch dial 36

open to answer 31
optional accessory 7
optional feature 7

P

passwords. See codes
personalize 46
phone number 12, 39, 40
phonebook 33, 36, 38, 40
photo 53
picture 53
picture ID 35, 42
PIN code 11, 27, 52
PIN2 code 27
power key 1, 11

Q

quick dial 39

R

received calls 32
recent calls 32
redial 33
reminders 47
return a call 34
ring style indicator 19
ring style, setting 26, 28
ring tone 53, 54
ringer ID 35, 42, 46
ringer volume 26, 47
roam indicator 18

S

- screen saver 29
- security code 27
- send key 1, 11
- service dial 39
- shortcuts 48
- signal strength indicator 17
- SIM Blocked message 11, 52
- SIM card 8, 11, 27, 39, 52
- smart key 1
- soft keys 1, 16, 47
- speakerphone 49
- speed dial 38
- store your number 12
- symbol entry mode 25

T

- tap text entry mode 23
- telephone number. See phone number
- text entry 21
- text message 44, 45
- theme 30
- time, setting 29
- timers 49
- transfer a call 38
- TTY device 39
- turn on/off 11

U

- unlock
 - application 52
 - phone 11, 27
 - SIM card 52
- unlock code 27

V

- voice dial 41, 50
- voice key 1
- voice name, recording 41
- voicemail 37
- voicemail message indicator 18, 37
- volume 25, 47
- volume keys 1

W

- wallpaper 29
- Web pages 53
- Web sessions 53

Y

- your phone number 12
- U.S. patent Re. 34,976



MOTOROLA

***IMPORTANT SAFETY AND LEGAL
INFORMATION >***

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Contents

Safety and General Information	4
FDA Consumer Information on Wireless Phones	10
Product Registration	20
RF Energy Interference	20
Export Law Assurances	20
Wireless: The New Recyclable	21
Wireless Phone Safety Tips	23

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION.
READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information in user's guides published prior to December 1, 2002.

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following procedures.

External Antenna Care

Use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed. In addition, use of unauthorized antennas may result in non-compliance with the local regulatory requirements in your country.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone.

Body-Worn Operation

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines. If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 1 inch (2.5 centimeters) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 1 inch (2.5 centimeters) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries and antennas, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.Motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 6 inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices may be found in the “Wireless Phone Safety Tips” at the end of this manual and at the Motorola website: www.Motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.






Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Batteries

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola original batteries and chargers.**

Your battery or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing

video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

FDA Consumer Information on Wireless Phones



The U.S. Food and Drug Administration (FDA) provides consumer information on wireless phones at:

<http://www.fda.gov/cellphones/qa.html>

Following are safety-related questions and answers discussed at this web site.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio

frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the primary subject of the safety questions discussed in this document.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products--and at this point we do not know that there is--it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly

precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike “hand-free” kits, these so-called “shields” may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) *charged two companies* that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims. According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	TTY 1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

RF Energy Interference

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Wireless: The New Recyclable

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices in the United States, including information on where to recycle wireless devices near you, please visit www.recyclewirelessphones.com.



MOTOROLA

Wireless Phone Safety Tips

“Safety is your most important call!”


Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.



- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.

- 
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.



For more information,
please call
1-888-901-SAFE
or visit the
CTIA Web site at
www.wow-com.comTM



motorola.com