




MOTOROLA

DIGITAL WIRELESS
TELEPHONE

User's Guide >

Welcome

Welcome to the world of Motorola digital wireless communications! We are pleased that you have chosen the Motorola V60i wireless phone.

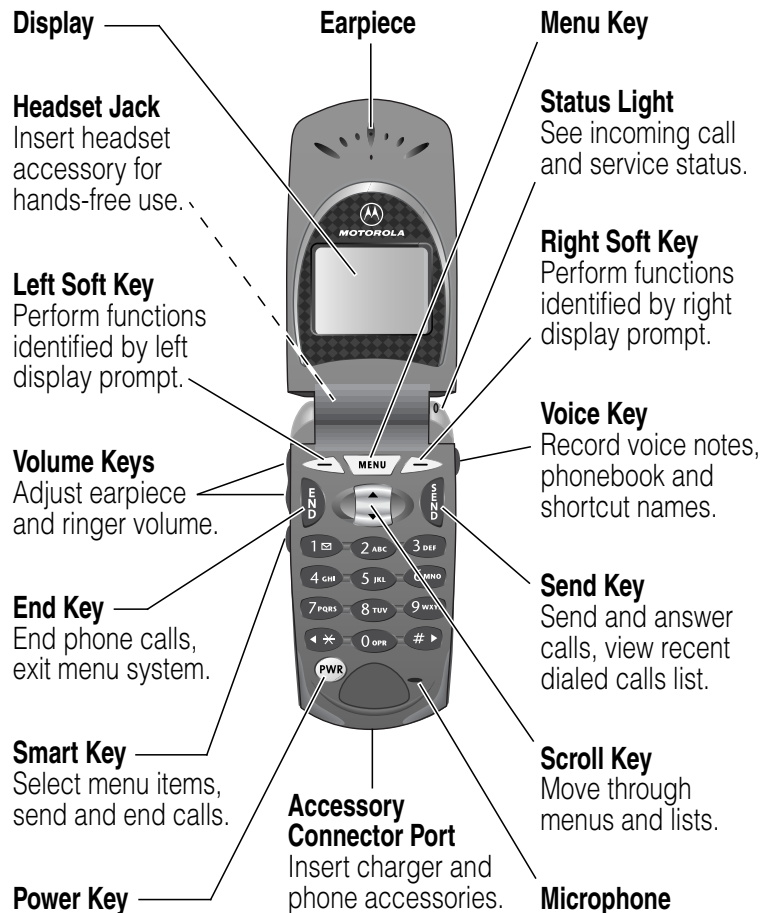

Personal Communications Sector
600 North U.S. Highway 45
Libertyville, Illinois 60048

1-800-331-6456 (United States)
1-888-390-6456 (TTY/TDD United States)
1-800-461-4575 (Canada)

www.motorola.com (United States)
www.motorola.ca (Canada)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. © Reg. U.S. Pat. & Tm. Off. TrueSync, Sidekick, Starfish, and the Stylized Starfish Logo are registered trademarks of Starfish Software, Inc., a wholly owned independent subsidiary of Motorola, Inc. All other product or service names are the property of their respective owners.

© 2001, 2002 Motorola, Inc. All rights reserved.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual number: 6809439A83-O
Cover number: 8988485L49-O









Menu Map

Main Menu

- Recent Calls
 - Received Calls
 - Dialed Calls
 - Notepad
 - Call Times
- Phonebook
- Datebook
- Quick Dial
- Radio
- Messages
 - Voicemail
 - Create Msg
 - Inbox
 - Outbox
 - Quick Notes
 - Drafts
 - Browser Alerts
- Shortcuts
- Voice Notes
- Browser
- Calculator
- Games
- Settings (see next page)

Note: This is the standard phone menu layout. You or your service provider may have changed the menu layout or changed some feature names. Not all features may be available for all users.

For example, the **Radio** feature on the main menu (left) is displayed only when the optional FM Stereo Radio Headset accessory is plugged into the accessory connector port on your phone (see phone illustration, page 1).

Shortcuts
Change display zoom: Press  , then press and hold 
Display my phone number: Press   
Dial voicemail number: Press and hold 
Go to dialed calls list: Press 
Exit menu system: Press 

Settings Menu

- Ring Styles
 - Style
 - Style Detail
 - My Tones
- Phone Status
 - My Tel. Number
 - Active Line
 - Battery Meter
 - Other Information
- Connection
 - Incoming Call
- In-Call Setup
 - In-Call Timer
 - Answer Options
- Security
 - Phone Lock
 - Lock Application
 - Restrict Calls
 - New Passwords
- Other Settings
 - Personalize
 - Main Menu
 - Keys
 - Greeting
 - Banner
 - Quick Dial
 - Initial Setup
 - Time and Date
 - Auto PIN Dial
 - Auto Redial
 - Backlight
 - Status Light
 - Zoom
 - TTY Setup
 - Scroll
 - Animation
 - Language
 - Contrast
 - DTMF
 - Master Reset
 - Master Clear
 - Network
 - Car Settings
 - Headset

Contents

Menu Map	3
About This Guide	10
Safety and General Information	11
Getting Started	18
What's in the Box?	18
Installing the Battery	18
Charging the Battery	19
Replacing the Convertible Covers	20
Turning Your Phone On	22
Making a Call	22
Ending a Call	23
Answering a Call	23
Seeing Your Phone Number	23
About Your Phone	24
Using the Display	24
Zooming In and Out	26
Using the Status Light	26
Adjusting Volume	27
Using the Smart Key	27
Using the External Display	28
Battery Use	29
Making and Answering Calls	31
Redialing a Number	31
Using Automatic Redial	31
Using Caller ID	32
Returning an Unanswered Call	32
Calling an Emergency Number	33
Turning Off a Call Alert	33

Canceling an Incoming Call	33
Calling With Speed Dial	34
Calling With One-Touch Dial	34
Calling a Number In a Text Message	35
Additional Calling Features	35
Using Features While On a Call	37
Using Call Waiting	37
Making a Three-Way Call	37
Additional On-Call Features	38
Using the Menu	39
Navigating to a Feature	39
Selecting a Feature Option	40
Entering Feature Information	41
Entering Text	43
Choosing a Text Mode	43
Using Tap Method	44
Using Symbol Mode	47
Using iTAP™ Software Predictive Text Entry Method	48
Menu Feature Descriptions	52
Recent Calls	64
Viewing Received Calls or Dialed Calls	64
Using the Notepad	65
Viewing and Resetting Call Timers	66
Phonebook	68
Viewing Entry Details	68
Storing a Phonebook Entry	68
Storing a PIN Code With the Phone Number	71
Recording a Voice Name For a Phonebook Entry	72
Dialing a Phonebook Entry	73
Editing a Phonebook Entry	74
Deleting a Phonebook Entry	74

Synchronizing with TrueSync Software	74
Sorting the Phonebook List	75
Datebook	76
Week View	76
Day View	77
Event View	77
Adding a Datebook Event	78
Changing Event Information	78
Copying an Event	79
Deleting an Event	80
Radio	81
Turning the Radio On and Off	81
Tuning a Station	82
Storing a Preset	82
Selecting a Preset	82
Sending and Receiving Calls With the Radio On	82
Messages—Voicemail	84
Storing Your Voicemail Number	84
Receiving a Voicemail Message	85
Listening to a Voicemail Message	85
Turning Off the Voice Message Waiting Indicator	85
Messages—Text	86
Setting Up the Text Message Inbox	86
Receiving a Text Message	87
Reading, Locking, or Deleting a Text Message	87
Sending a Text Message	89
Sending a Quick Note Text Message	91
Viewing the Status of Sent Text Messages	92
Ring Styles	93
Selecting a Ring Style	93
Customizing a Ring Style	93

Contents

Creating Alert Tones	94
Setting Reminders	100
Shortcuts	101
Standard Shortcuts	101
Creating a Shortcut	101
Using Shortcuts	103
Voice Notes	104
Recording a Voice Note	104
Viewing the Voice Notes List	105
Playing a Voice Note	106
Locking and Unlocking a Voice Note	108
Deleting a Voice Note	109
Micro-Browser	110
Starting a Micro-Browser Session	110
Interacting With Web Pages	111
Calculator	112
Calculating Numbers	112
Converting Currency	114
Games	115
Playing a Game	115
Game Options	116
Blackjack	116
Falling Numbers	117
Video Poker	118
Adjusting Your Settings	120
Reordering Menu Items	120
Customizing a Soft Key Function	120
TTY Operation	121
Hands-Free Use	123

Contents

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

The information provided in this document supersedes the general safety information contained in user guides published prior to July 2000. For information regarding radio use in a hazardous atmosphere please refer to the Factory Mutual (FM) Approval Manual Supplement or Instruction Card, which is included with radio models that offer this capability.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

RF Operational Characteristics

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a



Safety and General Information

11

range from 0.05 watts to 0.56 watts in analog mode and 0.0 watts to 0.32 watts in digital mode.

Exposure To Radio Frequency Energy

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95.1-1992
 - Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
 - National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within



Safety and General Information

12

the guidelines set forth in the above standards, always adhere to the following procedures:

Portable Phone Operation and EME Exposure

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Do NOT hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

Body-Worn Operation

To maintain compliance with FCC/Health Canada RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this product. Use of non-Motorola-approved accessories may exceed FCC/Health Canada RF exposure guidelines. If you do not use one of the Motorola-supplied or approved body-worn accessories, and are not using the phone held in the normal use position, **ensure the phone and its antenna are at least one inch (2.5 centimeters) from your body when transmitting.**



Safety and General Information

13

Data Operation

When using any data feature of the phone, with or without an accessory cable, **position the phone and its antenna at least one inch (2.5 centimeters) from your body.**

Approved Accessories

For a list of approved Motorola accessories, visit our website at www.mot.com.

Electromagnetic Interference/Compatibility

Note: Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

Facilities

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

Aircraft

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.

Medical Devices

Pacemakers

The Advanced Medical Technology Association recommends that a minimum separation of 6 inches (15 centimeters) be



Safety and General Information

14

maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, the United States Food and Drug Administration.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Safety and General Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.



Safety and General Information

15

When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

Operational Warnings

For Vehicles With an Air Bag

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe." Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.



Safety and General Information

16

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

Operational Cautions

Antennas

Do not use any portable phone that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

Batteries

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

ITC01-101



Safety and General Information

17

Getting Started

What's in the Box?

Your wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability.

To purchase Motorola Original™ accessories, contact the Motorola Customer Call Center at 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

Installing the Battery


You must install and charge the battery to use your phone.



Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.

Do This

- 1** Remove the battery from its protective clear plastic case.
- 2** If necessary, push down the battery door release latch and lift the door off of the phone.

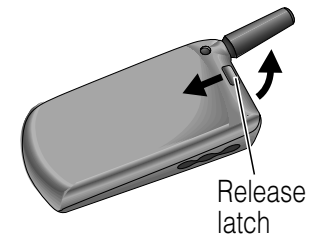


Getting Started




18

Do This

- 3 Insert the battery, printed arrow first, **under the tab** at the top of the battery compartment and push down.

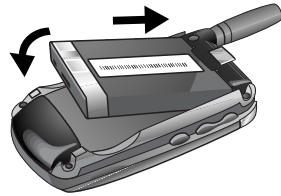

- 4 Insert the ridge at the bottom of the battery door into the base of the phone, then push the door down and snap it into place.

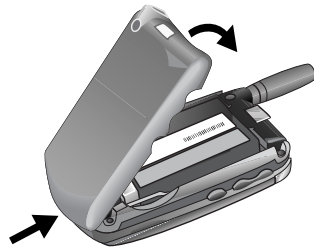

Charging the Battery

New batteries are shipped partially charged. Before you can use your phone, you need to install and charge the battery, as indicated by the following instructions. Some batteries perform best after several full charge/discharge cycles.

Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



Getting Started



19

Do This

- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete.

Replacing the Convertible Covers

Getting Started



You can replace the flip cover and battery cover on your phone to personalize its appearance. Matching front and back cover sets are available in a variety of colors and designs.

Your phone is designed to be used only with Motorola Original accessories. See your Motorola retailer for new or replacement covers.




20

To remove a flip cover:

Do This

- 1 Open your flip phone *half* way.
- 2 Press in the tiny silver release button with your fingernail. This button is on the side of the top half of the phone. While pressing the silver button in, slide the cover off the phone.

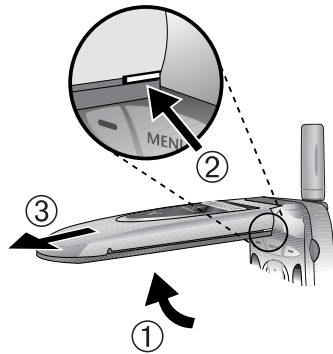

Getting Started

To attach a flip cover:

Do This

- 1 Close your flip phone.
- 2 Line up the ridges on each side of the new cover so that they align with the slots on the phone.



- 3 Slide the new cover onto the phone until it snaps into place.

Turning Your Phone On


Do This

- 1 Open your phone
- 2 Press and hold **PWR**

To

expose the keypad
turn on your phone



- 3 If necessary, enter your four-digit unlock code and press **OK** ()

unlock your phone

The unlock code is originally set to 1234. Your service provider may change this number before you receive your phone.

Getting Started

Making a Call

Do This


- 1 Extend the antenna

To


optimize signal reception

Tip: You may have to pull on the antenna a second time to fully extend it.




Do This	To
2 Press the keypad keys	dial the phone number Tip: If you make a mistake, press DELETE (←) to delete the last digit, or press and hold DELETE (←) to clear all digits.
3 Press 	make the call

Ending a Call

Press	To
	end the call



Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

Press	To
 or ANSWER (→)	answer the call

Tip: If your phone is locked, you must unlock it to answer the call.

Seeing Your Phone Number

Press	To
 MENU 	see your phone number


Getting Started



About Your Phone

See page 1 for a basic phone diagram.

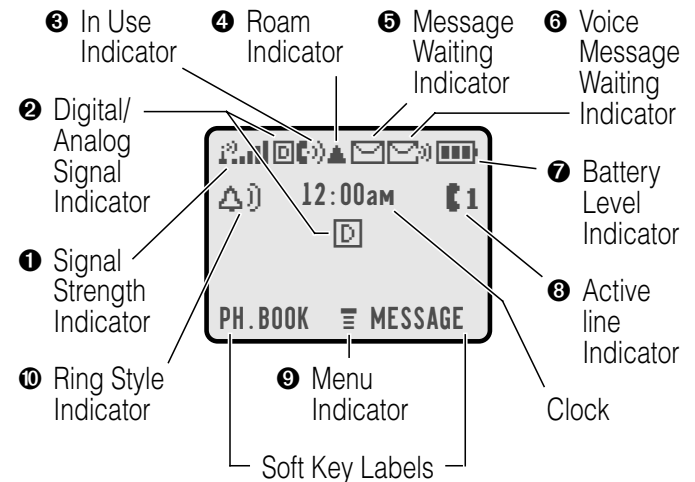

Using the Display




About Your Phone



The *idle display* is the standard display that you see when you are *not* on a call or using the menu.

Labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator at the bottom center of the display indicates that you can press  to enter the main menu.

1 Signal Strength Indicator Vertical bars show the strength of the network connection. You cannot make or receive calls when the  (no signal) indicator is displayed.



2 Digital (D) or Analog (A) Signal Indicator Shows whether you are receiving a digital or analog signal.

3 In Use Indicator Shows that a call is in progress.



4 Roam Indicator Shows that your phone is seeking or using another network system outside your home network.



5 Message Waiting Indicator Appears when you receive a text message.




6 Voice Message Waiting Indicator Appears when you receive a voicemail message.

7 Battery Level Indicator Vertical bars show the battery charge level. Recharge the battery when you see **Low Battery** and hear the low battery alert.





8 Active Line Indicator Shows the current active phone line.


9 Menu Indicator Indicates that you can press  to enter the main menu or open a feature sub-menu.




10 Ring Style Indicator Shows the ring style setting.

 = loud ring



 = soft ring

 = vibrate

 = vibrate and ring

 = silent

Zooming In and Out

Press and release , then press and hold  to zoom in and out on the display. Zoom in to increase text size, zoom out to display more information.

You can also zoom in and out from the menu. See page 60.

Using the Status Light

The status light shows when you have an incoming call or message, or when your phone is *roaming* (using a non-home system).



Indication	Status
alternating red/green	incoming call
flashing green	in service, home system
flashing yellow	roaming, non-home system
flashing red	no service

The status light initially is turned off to extend battery life. To turn it on, see page 60.

Note: Turning on the status light will substantially reduce your phone's *standby time*, the length of time that your phone's battery retains power when the phone is turned on but is not in use.

Adjusting Volume

Press the up and down volume keys to:

- increase and decrease earpiece volume during a call
- increase and decrease the ringer volume setting when the idle display is visible (flip must be open)



Using the Smart Key

The smart key gives you another way to perform many basic phone functions. It anticipates the next action you are likely to perform. For example, when you highlight a menu item, you can press the smart key to select it. You can use the smart key to make and end calls, toggle features on and off, and open your phonebook. The smart key usually performs the same function as the right soft key (A).



About Your Phone



27

Note: The smart key provides an optional way to do some things faster. It is never *the only way* to perform a task.

Using the External Display

When the flip is closed, the external display shows the time and date. It also displays messages to notify you of incoming calls and other events. You can perform the following functions in the external display.

Set Phone Ring Style

Press	To
1 volume keys	scroll to Style
2 smart key	select a ring style
3 volume keys	return to the idle display

Return an Unanswered Call

Your phone keeps a record of your unanswered calls and displays **X Missed Calls** in the external display.

Press	To
1 smart key	see the received calls list
2 volume keys	scroll through the list and select a call to return
3 smart key	make the call

Note: Because the microphone and earpiece are unavailable when the phone is closed, you must use a headset or other hands-free device with this feature.

About Your Phone



28

Battery Use

Battery performance depends on many factors, including your wireless carrier's network configuration; signal strength; the temperature at which you operate your phone; the features and/or settings you select and use; and your voice, data, and other application usage patterns.

Battery Care

Caution: To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola Original™ batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.
- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice

About Your Phone



29

a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type. Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.

Extending Battery Life

- **Turn off your status light**
The status light uses power. To turn it off, see page 60.
- **Turn off your display backlight**
The backlight uses power. To turn it off, see page 60.
- **Minimize keypad-intensive functions**
Activities that require intensive keystroke use (such as playing a game or using messaging) reduce your phone's talk and standby time.

About Your Phone





30

Making and Answering Calls

For basic instructions on how to make a call, end a call, and answer a call, see pages 22–23.

Redialing a Number

If you hear an ordinary busy signal:

Press	To
1 	hang up
2 	redial the busy number

Using Automatic Redial

If the network is busy, you hear a fast busy signal, and your phone displays **Call Failed**.

With automatic redial, your phone automatically redials the number for four minutes. When the call goes through, your phone rings or vibrates one time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. See the “Auto Redial” option on page 60.



Making and Answering Calls

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:



Making and Answering Calls

Press	To
 or RETRY ()	activate automatic redial

Using Caller ID




Calling line identification (caller ID) displays the phone number for incoming calls.




The phone displays the caller’s name when the name is stored in your phonebook, or

Incoming Call when caller ID information is not available.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:


- the  (missed call) indicator
- **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls with no caller ID information

Press	To
1 VIEW ()	see the received calls list
2 	select a call to return
3 	make the call

Calling an Emergency Number

Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Press	To
1 keypad keys	dial the emergency number
2 	call the emergency number



Turning Off a Call Alert

You can turn off your phone's incoming call alert before answering the call.

Press	To
either volume key	turn off the alert

Canceling an Incoming Call

While the phone is ringing or vibrating:

Press	To
 or IGNORE ()	cancel the incoming call



Making and Answering Calls





Making and Answering Calls



Depending on your phone settings and/or service subscription, the call may be forwarded to another number, or the caller may hear a busy signal.

Calling With Speed Dial

Each entry you store in your phonebook is assigned a unique *speed dial* number. To speed dial a phonebook entry:

Press	To
1 keypad keys	enter the speed dial number for the entry you want to call
2 	submit the number
Note: Some networks let you skip this step for speed dial numbers 1 through 99.	
3 	call the entry



Calling With One-Touch Dial

To call phonebook entries 1 through 9, just press and hold the one-digit speed dial number for one second.

We recommend that you reserve phonebook entry 1 (speed dial number 1) for storing and dialing your voicemail number. In many cases, your service provider has already done this for you. If necessary, see page 68 to store your voicemail number for one-touch dial access.

Calling a Number In a Text Message



To call a phone number embedded in a text message that you receive:

Press	To
1 MENU	open the Text Msg Menu
2 ↓	scroll to Call Back
3 SELECT (▶)	call the number

Additional Calling Features

While dialing (with digits visible in the display), open the **Dialing Menu** to perform the following tasks:

Press	To
MENU > Attach Number	attach a number from the phonebook or recent call lists
MENU > Send Message	open a new text message with the number in the To field




Making and Answering Calls

You can also call a number using these features:



Making and Answering Calls

Do This	To Call
Press and release the voice key, then say a voice name  Voice key	a phonebook entry using voice dial To record a voice name, see page 72.
Press MENU > Recent Calls > Received Calls or Dialed Calls > <i>entry to call</i>	a missed call, or a recent received or dialed call

Using Features While On a Call

Using Call Waiting



When you are on a call, an alert tone sounds to indicate that you have received a second call.

Press	To
1	answer the new call
2	switch back to the first call

Making a Three-Way Call



During a call, you can call and connect a third party for a three-way call. You cannot do this if you already have a call on hold.

Press	To
1 keypad keys	dial the third party's number
Note: Some networks may require you to press first.	
2	call the number
3	connect the two calls
4	end the entire call



Using Features While On a Call

Additional On-Call Features



Using Features While On a Call


Press	To
MUTE () (if available) or > Mute	mute the call
SPEAKER () (if available) or > Spkrphone On	activate an attached speakerphone during an active call
> My Tel. Number	see your phone number
> Send Tones	send a number to the network as DTMF tones, for credit card or password calls To activate DTMF tones, see the "DTMF" option on page 61.
> Received Calls or Dialed Calls	view recent received or dialed call numbers
> Messages	view or send messages
> Datebook	view datebook entries
> Other Information	view phone specifications

Using the Menu

Navigating to a Feature

Use these keys to move through the menu system:

 Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

Left Soft Key


Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

Volume Keys

Scroll up or down through menus and lists.

End Key

Exit the menu system without making changes, return to the idle display.

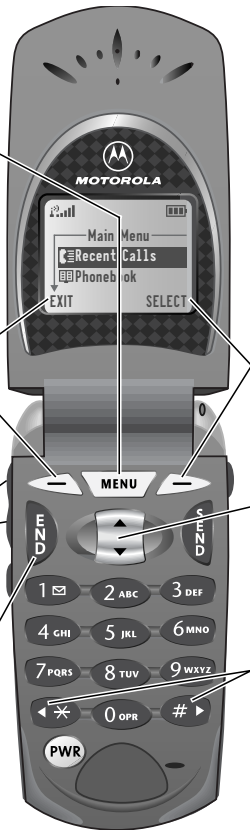

Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

Scroll Key

Scroll up or down through menus and lists.

and


Cycle through and set the value of the highlighted menu item.




Using the Menu

Selecting a Feature Option

Some features require you to select an item from a list:

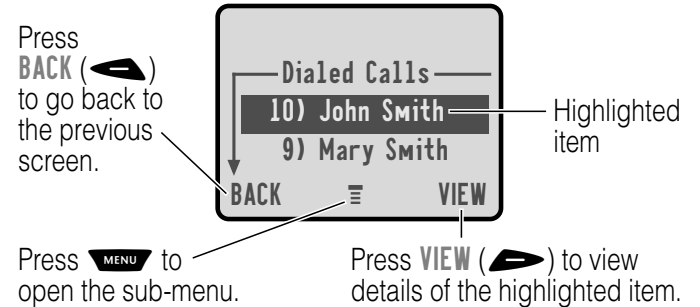

Using the Menu

- Press  to scroll up or down to highlight the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.

Entering Feature Information

Some features require you to enter information:



Press **CANCEL** (↵) to exit without making changes. **DONE** (↵) appears when you enter or edit information.

Press **CHANGE** (↵) to edit the information.

- Enter numbers or text with the keypad.
- When an item has a list of possible values, press **⏪** or **⏩** to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and do not want to save your changes, press **⏪** to exit without saving.



Using the Menu

The message center lets you compose and send text messages. A *flashing cursor* shows where text will appear:




Press **CANCEL** (↵) to exit without making changes.

Press **MENU** (☰) to open the sub-menu.

Press **BROWSE** (↵) to view and insert a quick note.

When you enter text using the standard tap method, the flashing cursor changes to a *block cursor*, and the soft key functions change:

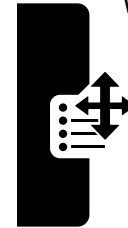

Using the Menu



After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **OK** (↵) to accept and store the text.

Press **DELETE** (↵) to delete the character to the left of the insertion point.

Entering Text

Multiple text entry methods make it easy for you to enter names, numbers, and messages on your phone.

Choosing a Text Mode

Press **MENU** from any text entry screen to select a text mode:

iTAP Let the phone predict each word as you enter it. See page 48.

Tap Method Enter letters, numbers, and symbols by pressing a key one or more times. See page 44.

Numeric Enter numbers only.

Symbol Enter symbols only. See page 47.

Browse Browse your phonebook or recent call lists to select a name or number.

Note: The text mode you select remains active until you change it by selecting another mode.


Entering Text



Using Tap Method

This is the standard mode for entering text on your phone.

Press **MENU** from any text entry screen and select the **Tap Method** menu option.

Do This	To
1 Press a number key one or more times	select a letter, number, or symbol shown in the "Character Chart" on page 46
2 Continue pressing number keys	enter the remaining characters
3 Press OK ()	store the text when you are finished

Entering Text



General Text Entry Rules

Press a number key repeatedly to cycle through its characters. See “Character Chart” on page 46.

Press a number key as many times as necessary to enter the desired character at flashing cursor location.

Press and hold a number key to cycle between text entry modes.



Change letter in block cursor to uppercase or lowercase.

Move flashing cursor to the left or right in text message.

Entering Text



- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

- The first character of every sentence is capitalized. (Press **↓** down to force the character to lowercase while it is highlighted by the block cursor).
- Your phone may support multiple languages. The current language setting determines whether a new message begins on the left or right side of the display.

You can switch languages within a message. Press **MENU** to select the text mode and language you want to use.

Character Chart

Use this chart as a guide for entering spaces, letters, numbers, and symbols with the tap method.

Entering Text




1 [space]	space . 1 ? ! , @ _ & ~ : ; " - () ' ` ¡ ¨ % £ \$ ¥ ¤ €
2 abc	a b c 2 ä å á à â ã α β ç
3 def	d e f 3 δ ð é è ê ε φ
4 ghi	g h i 4 ï í î γ η ι
5 jkl	j k l 5 κ λ
6 mno	m n o 6 ñ ö ø ó ò ô õ μ υ ω
7pqrs	p q r s 7 π β σ
8 tuv	t u v 8 θ ü ú ù û τ
9 wxyz	w x y z 9 ξ ψ
0 opr	+ - 0 x * / \ [] = > < # §

Note: This chart may not reflect the exact character set available on your phone.





Using Symbol Mode

Your phone provides an alternate way to enter symbol characters in a message. Press **MENU** from any text entry screen and select the **Symbol** menu option.

Do This	To
1 Press a number key one time	display its symbol options at the bottom of the display See "Symbol Chart" on page 47.
2 Press * or # or Press the number key multiple times	highlight the symbol you want
3 Press SELECT ()	enter the symbol at the flashing cursor location

Symbol Chart

Use this chart as a guide for entering characters in symbol mode.

1 	space . ? ! , @ _ & ~ : ; " - () ' ` ~ i % £ \$ ¥ ¤ €
2 	@ _ \
3 	/ : ;
4 	" & '

Entering Text









Using iTAP™ Software Predictive Text Entry Method

iTAP™ software provides a predictive text entry method that lets you enter a word using one keypress per letter.

Press **MENU** from any text entry screen and select the **iTAP** menu option.

Enter Words

Do This	To
1 Press a number key one time	enter the first letter of the word The letters associated with the key are shown at the bottom of the display.
2 Press number keys (one per letter)	enter the rest of the word Alternative words and letter combinations are shown at the bottom of the display. The word choices are updated with each keypress.

5 	() [] { }
6 	¿ ¡ ~
7 	< > =
8 	\$ £ ¥ ¤ €
9 	# % *
0 	+ - x * / = > < # §

Entering Text



Do This	To
3 Press or	highlight the word you want
4 Press SELECT (enter the word at the flashing cursor location
	A space is automatically inserted after the word.

For example, to spell the word “act,” press .
The display shows:

Flashing cursor indicates insertion point.

Press to scroll and see additional word choices.

Press **DELETE** () to clear the last letter.

Press **SELECT** () to insert the highlighted word.

Enter Novel Words

You may enter a word that the iTAP software does not recognize. If the word you want is not displayed:

Do This	To
1 Press DELETE () one or more times	delete letters until you see a letter combination that matches the start of the word

Entering Text



Do This	To
2 Press or	highlight the letter or letter combination
3 Press SELECT () , then press	shift the text entry cursor to the left and “lock” the selected word portion
4 Continue to enter letters and highlight letter combinations	spell the word

Punctuation

Press	To
or	enter punctuation or other characters as shown in the “Character Chart” on page 46

Capitalization


The first word of a sentence is automatically capitalized, with following words in lowercase.

Press	To
	change the words to initial character capitalized, all uppercase characters, or all lowercase characters

Entering Text





Enter Numbers

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press number keys	add digits to the number
3 Press SELECT ()	enter the number at the flashing cursor location

Delete Letters and Words

Place the cursor to the right of the text you want to delete, and then do the following:

Do This	To
Press DELETE ()	delete one letter at a time
Hold DELETE ()	delete the entire message

Entering Text



Menu Feature Descriptions

This chapter describes all of your phone's features in order of the menu map shown on pages 3–4.

Main Menu

RECENT CALLS

Received Calls  > Recent Calls
> Received Calls

View a list of recently received calls. See page 64.

Dialed Calls  > Recent Calls
> Dialed Calls

View a list of recently dialed calls. See page 64.

Notepad  > Recent Calls
> Notepad

Call or store the last number entered on the keypad. See page 65.

Call Times  > Recent Calls
> Call Times

View call timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See page 66.




PHONEBOOK  > Phonebook

Store names and numbers as entries in your phonebook, then call numbers by selecting them from the phonebook list. See page 68.

Menu Feature Descriptions



DATEBOOK  > **Datebook**

Use the datebook calendar to schedule and review your appointments. See page 76.

QUICK DIAL  > **Quick Dial**

Dial pre-programmed numbers. Your service provider may program your phone with one or more quick dial numbers, such as the customer service number. You can call them by selecting them from the quick dial list.



Note: Your service provider may use a different name for this feature.

RADIO  > **Radio**

Listen to FM radio stations with the optional Motorola Original™ FM Stereo Radio Headset accessory. This menu feature is displayed only when the FM Stereo Radio Headset is plugged into the accessory connector port on your phone. See page 81.



MESSAGES  > **Messages**

Adjust message settings, view and manage the various types of messages your phone can receive and/or send:



VoiceMail Listen to your recorded voice messages. See page 84.

Create Msg Create new text messages. See page 89.



Inbox Read and manage text messages. See page 86.

Outbox View all outgoing text messages, delivered and undelivered.

Quick Notes Select and send pre-written messages from the quick notes list. See page 91.

Drafts Store and edit text messages that you have written but not sent.

Browser Alerts Read alert messages received by your micro-browser.

SHORTCUTS  > **Shortcuts**

Create keypad or voice shortcuts to menu features. See page 101.

VOICE NOTES  > **Voice Notes**

Use the voice key to record messages and phone calls. See page 104.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

BROWSER  > **Browser**

Access Web pages and run Web-based applications. The micro-browser delivers WAP (Wireless Application Protocol)



pages from your service provider directly to your phone. See page 110.

CALCULATOR  > **Calculator**

Use your phone as a calculator or currency converter. See page 112.

GAMES  > **Games**

Play games on your phone. See page 115.

Settings Menu

RING STYLES

Style  > **Settings** > **Ring Styles**
> **Style**

Select the ring style your phone uses to notify you of incoming calls, messages, or other events. See page 93.

Style Detail  > **Settings** > **Ring Styles**
> **Style Detail**

Change details about the current ring style. *Style* represents the name of the ring style. See page 93.

My Tones  > **Settings** > **Ring Styles**
> **My Tones**

Create custom alert tones for your phone. See page 94.

Menu Feature Descriptions



55

PHONE STATUS

My Tel. Number  > **Settings**
> **Phone Status**
> **My Tel. Number**


View, enter, and edit information about your name and phone number.

Active Line  > **Settings**
> **Phone Status**
> **Active Line**

Change the active phone line to send and receive calls from either of the available numbers.

Battery Meter  > **Settings**
> **Phone Status**
> **Battery Meter**

View a detailed battery charge meter.

Other Information  > **Settings**
> **Phone Status**
> **Other Information**

View your phone's feature specifications (if available from the service provider).

Menu Feature Descriptions



56



Incoming Call  > Settings
> Connection
> Incoming Call

Specify the format for the next incoming call. You can select **Fax In Only**, **Data In Only**, or **Normal**. See page 131.

IN-CALL SETUP

Set the features that are active during a call, such as the in-call timer and call answering options.

In-Call Timer  > Settings
> In-Call Setup
> In-Call Timer

Adjust call timer **Display** and **Beep** settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

Time Display the elapsed time for the current call.

Off No in-call timer display.

Answer Options  > Settings
> In-Call Setup
> Answer Options

Turn call answering options on or off:

Multi-Key Answer by pressing any key.

Open to Answer Answer by opening the flip.

Menu Feature Descriptions



57

SECURITY

Phone Lock  > Settings > Security
> Phone Lock

Lock and unlock your phone. See page 135.

Lock Application  > Settings > Security
> Lock Application

Lock and unlock specific phone applications (such as phonebook or datebook). When an application is locked, users must enter the unlock code to use the application.

Restrict Calls  > Settings > Security
> Restrict Calls

Restrict incoming and outgoing calls. See page 136.

New Passwords  > Settings > Security
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See page 133.

OTHER SETTINGS

Personalize  > Settings
> Other Settings
> Personalize

Set several personal phone options:

Main Menu Change the order of the main menu. See page 120.

Menu Feature Descriptions



58

Keys Change the functions of the soft keys and smart key in the idle display. See page 120.

Greeting Change the text displayed when you turn on your phone.



Banner Change the text that appears in the idle display.

Note: Banner text does not appear in your phone's external display.

Quick Dial Change quick dial number(s).



Initial Setup **MENU** > Settings
> Other Settings
> Initial Setup

Set many basic phone options:

Time and Date Set the phone's time and date.

Auto PIN Dial Some networks require an authenticating PIN code to allow outgoing calls. Use this feature to automatically dial your PIN.



Menu Feature Descriptions



Auto Redial Use this option to turn on or turn off the automatic redial feature. When you turn on automatic redial, your phone automatically redials calls that fail due to busy network conditions. See page 31.

Backlight Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power.

Status Light Turn the status light off (to conserve battery power) and on.

Zoom Switch between three lines (**Zoom Out**) and two lines (**Zoom In**) of display text.

TTY Setup Set your phone to operate in one of three TTY modes, or return to normal **Voice** mode. See page 121.



Scroll Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display.

Menu Feature Descriptions



Animation Turn animation off (to conserve battery power) or on. Animation makes your phone's menus move smoothly as you scroll up and down.

Language Set the language for phone menus.

Contrast Adjust the contrast setting for your display.

DTMF Your phone can send a number to the network as dual tone multi-frequency (DTMF) tones. DTMF tones are used to communicate with automated systems that require you to enter a number such as a code, password, or credit card number. Use this option to set DTMF tones to be long, short, or off.

Master Reset Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer.

Menu Feature Descriptions



Master Clear Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries.

Note: This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

Network  > Settings
> Other Settings
> Network



View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and activate alerts that indicate when a call is dropped or network registration changes.

Car Settings  > Settings
> Other Settings
> Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and

Menu Feature Descriptions



automatically answer calls after two rings. See page 123.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Headset

-  > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See page 123.




Recent Calls



Recent Calls







Viewing Received Calls or Dialed Calls

Your phone keeps a list of the calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added.

Shortcut: Press  to go directly to the dialed calls list from the idle display.

Find the Feature

 > Recent Calls

Press	To
1 	scroll to Received Calls or Dialed Calls
2 SELECT ()	select the list
3 	scroll to an entry
4 	call the entry's number
or	view entry details
VIEW ()	
or	open the Last Calls Menu to perform other procedures as described in the following list
	

The **Last Calls Menu** includes the following options:

Option	Description
Store	Create a phonebook entry with the number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent call lists, after the highlighted number.
Send Tones	Send the number to the network as DTMF tones, for credit card or password calls.



Recent Calls




Using the Notepad

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:


Find the Feature  > Recent Calls
> Notepad



Recent Calls

Press	To
	call the number
or	
	open the Dialing Menu to attach a number or insert a special character
or	
STORE ()	create a phonebook entry with the number in the No. field

Viewing and Resetting Call Timers

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.



You can view the following network connection times:

Timer	Description
Last Call	Time spent on last dialed or received call. You cannot reset this timer.
Dialed Calls	Time spent on dialed calls since the last time you reset this timer.
Received Calls	Time spent on received calls since the last time you reset this timer.
All Calls	Time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Time spent on all calls on this phone. You cannot reset this timer.



Recent Calls

To view a call timer:

Find the Feature

MENU > Recent Calls
> Call Times

Press	To
1	scroll to the timer you want
2 SELECT ()	view the recorded time

To reset the call timer:

Press	To
1 RESET ()	reset the time (if available)
2 YES ()	confirm the reset

Phonebook

You can store a list of names and phone numbers or email addresses in your phone's electronic phonebook.

To see the names in your phonebook, press

MENU > **Phonebook** from the idle display. Scroll to a name and press **VIEW** () to view details of the phonebook entry as shown below.



Phonebook


Viewing Entry Details

Type indicator identifies number type:

- Work
- Home
- Main
- Mobile
- Fax
- Pager
- Email

Voice Name indicator indicates a recorded voice name

Entry's **Name**

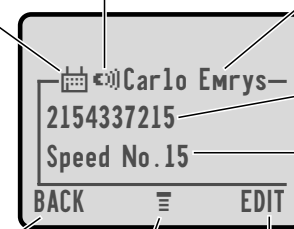

Entry's **phone number** or **email address**

Entry's speed dial number

Return to list

Press **MENU** to open the **Phonebook Menu**

Edit entry



Storing a Phonebook Entry

A phone number or email address is required for a phonebook entry. All other information is optional.

Shortcut: Enter a phone number in the idle display, then press **STORE** (▶) to create a phonebook entry with the number in the **No.** field. Go directly to step 3 to continue.

Enter Information

Find the Feature **MENU** > Phonebook
 MENU > New


Press	To
1 	scroll to Phone Number or Email Address
2 SELECT (▶)	select the entry type
3 CHANGE (▶)	select Name
4 keypad keys	enter a name for the entry
5 OK (▶)	store the name
6 CHANGE (▶)	select No. or Email
7 keypad keys	enter the phone number or email address
	Tip: You can store a PIN code with the phone number. See page 71.
8 OK (▶)	store the phone number or email address
9 CHANGE (▶)	select Type
	Note: This option is not available for email entries.
10 	scroll to the number type
11 SELECT (▶)	select the number type



Phonebook



Phonebook

Press	To
12 RECORD (▶)	record a voice name for the entry, if desired
or	
	Go to step 13 if you do not want a voice name
13 	scroll to Speed No.
	The next available speed dial number is assigned to a new phonebook entry.
14 CHANGE (▶)	select Speed No. if you want to change it
15 keypad keys	enter a different speed dial number, if desired
16 OK (▶)	store the speed dial number
17 SELECT (▶)	select MORE if you want to create another entry under the same Name
	You must use a different Type identifier for each number.




Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

Press	To
DONE (▶)	store the entry

Storing a PIN Code With the Phone Number

You can store a PIN code with the phone number for calls that require additional digits (for example, to make a calling card call, or to retrieve voicemail or answering machine messages). Insert one or more of the following characters in the dialing sequence to ensure that the number dials and connects properly:

Press	To
 > Insert Pause	insert a p (pause) character Your phone dials the preceding digits, waits for the call to connect, then sends the remaining digit(s).
 > Insert Wait	insert a w (wait) character Your phone dials the preceding digits, waits for the call to connect, then prompts you for confirmation before it sends the remaining digit(s).
 > Insert 'n'	insert an n (number) character Your phone prompts you for a number before dialing the call. The number you enter is inserted into the dialing sequence in place of the n character



Phonebook

Note: You can store a maximum of 32 digits per number. Each character counts as one digit.

Recording a Voice Name For a Phonebook Entry







You can record a voice name for a new or existing phonebook entry. A voice name lets you call the phonebook entry using voice dial (see page 73).

Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.



Phonebook

Find the Feature  > Phonebook



Do This	To
1 Press 	scroll to the entry
2 Press VIEW ()	view entry details
3 Press EDIT ()	edit the entry
4 Press 	scroll to Voice Name
5 Press RECORD ()	begin recording
6 Press and release the voice key and say the entry's name (in two seconds)	record the voice name
7 Press and release the voice key and repeat the name	confirm the voice name
8 Press DONE ()	store the voice name

Dialing a Phonebook Entry

Use one of the following procedures to call a number (or send a text message to an email address) stored in your phonebook.

Phonebook List

Find the Feature  > Phonebook

Press	To
1 keypad key letter	jump to entries that begin with that letter (optional)
2 	scroll to the entry
3 	make the call

Voice Dial

Do This	To
Press and release the voice key and say the entry's name (in two seconds).	make the call




To speed dial a phonebook entry, see page 34. To call an entry with one-touch dial, see page 34.



Phonebook

Editing a Phonebook Entry






Find the Feature  > Phonebook

Press	To
1 	scroll to the entry
2 VIEW ()	view entry details
3 EDIT ()	edit the entry

Edit the entry as described on pages 68-70.

Deleting a Phonebook Entry

Find the Feature  > Phonebook

Press	To
1 	scroll to the entry
2 	open the Phonebook Menu
3 	scroll to Delete
4 SELECT ()	select Delete
5 YES ()	confirm the deletion

Synchronizing with TrueSync Software



You can synchronize phonebook entries between your phone and computer or hand-held device with Starfish TrueSync[®] software, a Motorola accessory product. See the TrueSync user guide for more information.



Phonebook








Note: TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.

Sorting the Phonebook List

You can sort your phonebook list by speed dial number (the standard), name, email address, or voice name.

Note: The voice name sort is identical to the name sort, except that entries with voice name tags appear first.

Find the Feature  > Phonebook

Press	To
1 	open the Phonebook Menu
2 	scroll to Setup
3 SELECT 	select Setup
4 	scroll to Sort by
5 CHANGE 	select Sort by
6 	scroll to Name, Speed No., Voice Name, or Email
7 SELECT 	select the sort order




Phonebook

Datebook

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can set the datebook to send a reminder alarm for specific events.


Note: You must set the correct time and date on your phone to use the datebook.

To schedule or review datebook events:

Find the Feature  > Datebook

Week View


The datebook initially displays a calendar for the week. Lines or filled boxes indicate scheduled events.

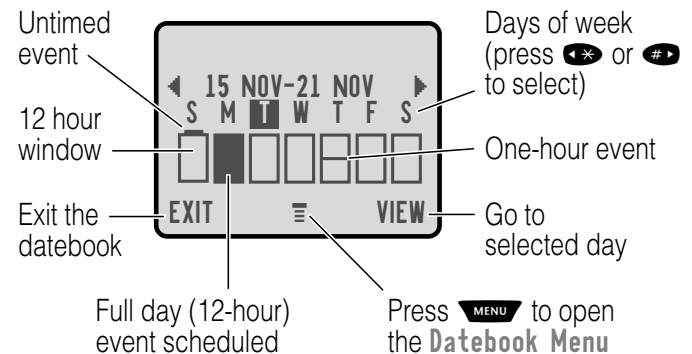

Datebook


Day View

Select a day and press **VIEW** (▶) to see the day's events.

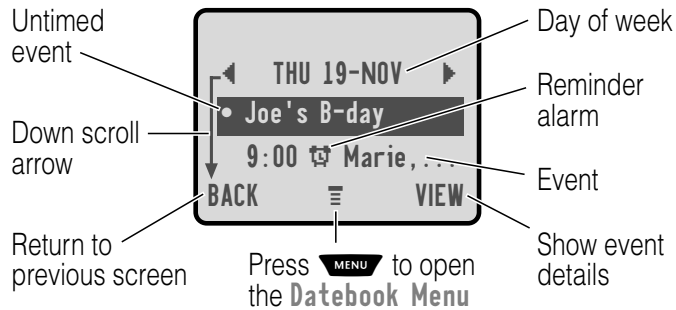

Event View

Select an event and press **VIEW** (▶) to see event details.

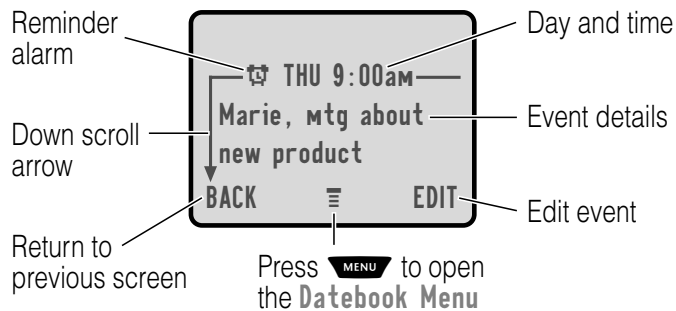

Datebook

Adding a Datebook Event

A title is required for a datebook event. All other information is optional.

Note: You must create an event to use the reminder alarm.

Find the Feature **MENU** > Datebook > day
MENU > New

Press	To
1 CHANGE (▶)	select Title
2 keypad keys	enter a title for the event
3 OK (▶)	store the event title
4	scroll to other fields and enter information as necessary
	You can set start time, duration, date, repeat interval, and reminder alarm.
5 DONE (▶)	store the event






Datebook

Changing Event Information













Find the Feature **MENU** > Datebook

Press	To
1 or	scroll to the day
2 VIEW (▶)	display the day view
3	scroll to the event
4 VIEW (▶)	display the event view
5 EDIT (▶)	edit the event

Press	To
6 	scroll to the information you want to change
7 CHANGE ()	edit the information
8 keypad keys	enter new information
9 DONE ()	store the information

Copying an Event

Find the Feature  > Datebook









Press	To
1  or 	scroll to the day
2 VIEW ()	display the day view
3 	scroll to the event
4 	open the Datebook Menu
5 	scroll to Copy
6 SELECT ()	copy the event
7 YES ()	confirm the copy
	Your phone assumes you want to change the date, and displays the Date field.
8 keypad keys	enter date information
9 	move to month, day, and year
10 DONE ()	save the copy of the event
11 	scroll to and edit event information, if necessary
12 DONE ()	store the information



Datebook

Deleting an Event

Find the Feature  > Datebook

Press	To
1  or 	scroll to the day
2 VIEW ()	display the day view
3 	scroll to the event
4 	open the Datebook Menu
5 	scroll to Delete
6 SELECT ()	select Delete
7 YES ()	confirm the deletion




Datebook

Radio







You can use your phone to listen to FM radio stations when the optional Motorola Original™ FM Stereo Radio Headset accessory is plugged into the phone's accessory connector port.

Turning the Radio On and Off

Press	To
Radio ()	turn the radio on and off



Alternatively, you can use the following procedure:

Press	To
1 	open the menu
2 	scroll to Radio
3 On () or Off ()	turn the radio on or off



Note: The **Radio** menu feature and soft key options appear only when the FM Stereo Radio Headset is plugged into the accessory connector port.





Tuning a Station

Do This	To
Press 	scroll to the next frequency
or	
Press and hold 	scroll to the next available stereo station

Storing a Preset

Do This	To
Press and hold a number key ( to )	assign its preset number to the tuned station



Selecting a Preset

Press	To
a number key ( to )	tune the station stored at the preset location


Sending and Receiving Calls With the Radio On

Your phone rings or vibrates as usual to notify you of an incoming call, message, or other event.




Do This	To
Press IGNORE ()	ignore the call
Press ANSWER ()	answer the call
or	
Press the button on the FM Stereo Radio Headset microphone	Note: You can use the FM Stereo Radio Headset microphone to converse with the other party during a call

To end the call and resume the FM broadcast:

Do This	To
Press 	end the call
or	
Press and hold the button on the FM Stereo Radio Headset microphone	

Turn the radio off before dialing outgoing calls from the phone keypad. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or recent call lists.

Tip: To dial a recently called number, press  or the button on the FM Stereo Radio Headset microphone to go to the dialed calls list. For more information, see page 64.



Messages—Voicemail




You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone.

Storing Your Voicemail Number

Storing your voicemail number on your phone makes it easy for you to listen to new voicemail messages. In many cases, your service provider has already done this for you.

Find the Feature


 > Messages
 > VoiceMail Setup

Press	To
1 keypad keys	enter your voicemail number
	Tip: You can store your PIN code with the voicemail number. See page 71.
2 	store the number

Your service provider additionally may store your voicemail number as phonebook entry number 1, so you can use one-touch dial to listen to your voicemail messages. If necessary, see page 68 to store your voicemail number for one-touch dial access.



Receiving a Voicemail Message

When you receive a voicemail message, your phone displays the  (voice message waiting) indicator and a **New VoiceMail** notification.


Press	To
CALL ()	listen to the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, listen to the message, or turn off your phone.

Listening to a Voicemail Message

Find the Feature  > Messages > VoiceMail

The phone calls your voicemail number. If no voicemail number is stored, your phone prompts you to store one.

Shortcut: If your voicemail number is also stored as phonebook entry number 1, you can press and hold  to listen to your voicemail message(s).

Turning Off the Voice Message Waiting Indicator

To clear the  (voice message waiting) indicator:

Find the Feature  > Messages
 > Clear Count

Messages—Voicemail



Messages—Text



Text messages are brief messages that you can send and receive.

Quick notes are pre-written text messages that you can incorporate into a message and




send quickly.

Your text message inbox must be set up *before* you can send and receive messages. The number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored on your phone.

Setting Up the Text Message Inbox

Note: In many cases, your service provider has already set up the text message inbox for you.

Find the Feature  > Messages
 > Inbox Setup


Press	To
1 CHANGE ()	change the C leanup setting
2 	scroll to the number of days you want to keep messages in the inbox, or the number of messages you want to keep
3 SELECT ()	select the cleanup setting

Messages—Text

Press	To
4 DONE (⬅)	save the inbox settings

Receiving a Text Message

Note: Your text message inbox must be set up before you can receive text messages. See page 86.

When you receive a text message, your phone displays the  (message waiting) indicator and a **New Inbox Message** notification, and gives an alert.

Press	To
READ (➡)	open the message

If reminders are turned on, your phone sends a reminder at regular intervals until you close the new message notification, read the message, or turn off your phone.

When your phone displays **Memory is Full!**, you must delete some existing messages to receive new messages.

Reading, Locking, or Deleting a Text Message

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted automatically as specified by the inbox cleanup setting (see page 86). If you want to save a message, you should lock it to prevent it from being deleted during cleanup.







Find the Feature  > **Messages > Inbox**



Messages—Text



Messages—Text

Press	To
1 	scroll to the message The following indicators show message status:  = unread  = unread and urgent  = read  = read and locked
2 READ (➡)	open the message
3 BACK (⬅)	close the message
or	
DELETE (➡)	delete the message
or	
	open the Text Msg Menu to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:

Option	Description
Create Message	Open a new text message.
Call Back	Call the number in the message header or embedded in the message.
Go To	Launch the micro-browser and go to a Web address (URL) embedded in the message.

Option	Description
Reply	Open a new text message, with the sender's Reply To number or email address in the To field.
Forward	Open a copy of the text message, with an empty To field.
Lock/Unlock	Lock or unlock the message.
Store Number	Create a phonebook entry, with the embedded number in the No. field.
Delete	Delete the message.
Delete All	Delete all inbox messages.
Store Address	Create a phonebook entry, with the embedded email address in the Email field.
Inbox Setup	Open the text message inbox setup menu.



Messages—Text

Sending a Text Message

You can send a text message to one or more recipients. You can manually enter each recipient's phone number or email address, or select numbers/addresses from the phonebook or recent call lists.

Note: When you manually enter numbers and/or email addresses, you must insert a space between each entry.

















Messages—Text

Press **1** one time, wait for the space to appear, then enter the next number or email address.

Find the Feature

MENU > Messages
> Create Message

Press	To
1 CHANGE ()	select To
2 keypad keys	enter one or more phone numbers and/or email addresses
Tip: Press 1 to insert a space between each number/address that you enter manually.	
or	
BROWSE ()	select numbers/addresses from the phonebook or recent call lists
3 OK ()	store the numbers/addresses
4 CHANGE ()	select Msg
5 keypad keys	enter the message
Note: Message length is limited. As you near the limit, a display counter shows how many characters are left.	
or	
BROWSE ()	select and insert a quick note message (see page 91)

Press	To
6 OK ()	store the message
7 CHANGE ()	select Priority
8 	scroll to the priority you want
9 SELECT ()	set the priority
10 CHANGE ()	select Call
11 keypad keys	enter a number for the recipient to call back
12 OK ()	store the number
13 DONE ()	finish the message
14 YES ()	send the message
or	
NO ()	cancel the message or save it in the drafts folder




Messages—Text

Sending a Quick Note Text Message



Quick notes are pre-written text messages that you can incorporate into a message and send quickly (for example, **Meet me at ...**). You can also create new quick notes.

Find the Feature  > Messages
> Quick Notes

Press	To
1 	scroll to the quick note



Messages—Text

Press	To
2 READ ()	read the quick note
or	
	open the Quick Note Menu to perform other procedures as described in the following list

The **Quick Note Menu** includes the following options:


Option	Description
New	Create a new quick note.
Edit	Edit the quick note.
Delete	Delete the quick note.
Send	Open a new message with the quick note in the Msg field.

Viewing the Status of Sent Text Messages

Messages that you send are stored in the outbox.

Find the Feature  > Messages > Outbox

Messages in the outbox are sorted from newest to oldest. The following indicators show message status:

- » = sending in progress  = sent
- ✕ = sending failed

Ring Styles

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*. You can select one of five different ring styles:

- = loud ring
- = soft ring
- = vibrate
- = vibrate and ring
- = silent

The ring style indicator in the display shows the current ring style (see page 24).

Each ring style contains settings for specific event alerts, and ringer and keypad volume.

Selecting a Ring Style

Find the Feature > Settings > Ring Styles > Style

Press	To
1	scroll to the ring style
2 SELECT ()	select the ring style

Customizing a Ring Style

Change Style Settings

You can change the alerts that notify you of the following events: incoming calls, text messages, voicemail



Ring Styles

messages, data calls, fax calls, alarms, and reminders. Any changes you make are saved to the current ring style.

Find the Feature > Settings > Ring Styles > Style Detail

Note: *Style* represents the current ring style.



Ring Styles

Press	To
1	scroll to the event
2 CHANGE ()	select the event
3	scroll to the alert you want
4 SELECT ()	select the alert

Set Ringer or Keypad Volume

Find the Feature > Settings > Ring Styles > Style Detail

Note: *Style* represents the current ring style.

Press	To
1	scroll to Ring Volume or Key Volume
2 or or	scroll to the desired volume
3 OK ()	confirm the new volume








Creating Alert Tones

You can create and store up to 32 custom alert tones on your phone. The tones appear in the list of available alerts.

Create a Tone

Find the Feature

 > Settings
> Ring Styles
> My Tones


Press	To
1 	scroll to [New Tone]
2 SELECT ()	select [New Tone]
3 CHANGE ()	select Notes
4 keypad keys	enter notes (see page 95))
5 OK ()	store the notes
6 CHANGE ()	select Name
7 keypad keys	enter a name for the tone
8 OK ()	store the name
9 DONE ()	store the tone








Ring Styles

Enter Notes

Use the keypad keys to enter each note. Press a key multiple times to cycle through its notes or options (pitch, octave, or length). The default setting for a new tone is a quarter note in octave two.

Key	Display	Description
	1	set octave one
	2	set octave two
	3	set octave three



Key	Display	Description
	A	note A
	B	note B
	C	note C
	D	note D
	E	note E
	F	note F
	G	note G
	R	rest
	#	sharp
	b	flat
	q	quarter note or rest
	h	half note or rest
	w	whole note or rest



Ring Styles

Enter a note as follows:

Task	Action
Change the octave	Set the new octave (1, 2, or 3) <i>before</i> selecting the note. The octave applies to all following notes until you change it again.
Select the note (required)	Press a keypad key.

Task	Action
Change a note to a sharp or flat	Enter a sharp or flat (# or b) <i>after</i> selecting the note. Some sharps and flats are played as standard notes. For example, B# is the same as C. Press  to scroll to valid notes when entering a new note.
Change a note's length	Set the new length (q, h, or w) <i>after</i> selecting the note. The length applies to all following notes until you change it again.
Add a rest	Enter one or more rests (R characters) as needed in the tone sequence. Set the length of the rest by entering a q, h, or w character <i>after</i> the rest, just as you would for a note.
Listen to a new tone as you compose it	Press  to enter the Compose Menu , and select Play All to play the notes you have entered.

Example



















Press the following keys to play this sequence of notes and rests in octave three: **C** (quarter note), **E flat** (quarter note), **half rest**, and **G** (whole note):



Ring Styles









Ring Styles

Press	To	Display
1   	set octave three	3
2   	enter a quarter note C	C
3    	enter a quarter note E flat	Eb
4    	enter a half rest	Rh
5    	enter a whole note G	Gw

Play a Tone

Find the Feature







 > Settings
> Ring Styles
> My Tones

Press	To
1 	scroll to the tone
2 	open the My Tones Menu
3 	scroll to Play
4 SELECT ()	select Play
5 PLAY ()	play the tone again
or	
CANCEL ()	return to my tones list

Edit a Tone

You cannot edit the predefined alert tones included with your phone. To edit a custom alert tone:

Find the Feature  > Settings
> Ring Styles
> My Tones

Press	To
1 	scroll to the tone
2 EDIT ()	open the tone details
3 	scroll to the item you want to edit (Name or Notes)
4 CHANGE ()	select the item
5 keypad keys	enter new text or notes
6 OK ()	store the new text or notes
7 DONE ()	save your changes








Ring Styles

Delete a Tone

You cannot delete the predefined alert tones included with your phone. To delete a custom alert tone:

Find the Feature  > Settings
> Ring Styles
> My Tones

Press	To
1 	scroll to the tone
2 	open the My Tones Menu
3 	scroll to Delete

Press	To
4 SELECT ()	select Delete
5 YES ()	confirm the deletion

Setting Reminders



A reminder is an alert that rings or vibrates at regular intervals to notify you about a voicemail or text message that you have received.



Ring Styles

Find the Feature  > Settings
> Ring Styles
> *Style Detail*
> Reminders

Note: *Style* represents the current ring style.

Press	To
1 	scroll to Beep or Vibrate to set the reminder alert type, or Off to turn off all reminders
2 SELECT ()	select the reminder alert

Shortcuts

Your phone includes several standard shortcuts. You can create additional shortcuts to frequently used menu items.

Standard Shortcuts

The following shortcuts are pre-programmed in your phone. You cannot edit or delete these shortcuts.

Do This	To
Press MENU , then press and hold MENU (within two seconds)	zoom in/out on your phone display
Press MENU #	see your phone number
Press CALL	go to the dialed calls list
Press END	exit the menu system

Creating a Shortcut


You can create a keypad shortcut *plus* an optional voice shortcut to a menu item. A voice shortcut takes you directly to the menu item when you say the shortcut name.



Shortcuts

Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Do This	To
1 Press MENU	enter the menu system
2 Press DOWN	scroll to the menu item
3 Press and hold MENU	open the shortcut editor
4 Press YES (LEFT)	view shortcut options
5 Press CHANGE (RIGHT)	change the keypad shortcut number
or	
Press DONE (LEFT)	select the default keypad shortcut number
or	
Press DOWN	scroll to Voice to assign a voice shortcut
6 Press RECORD (RIGHT)	begin recording
7 Press and release the voice key and say the shortcut's name (in two seconds)	record the shortcut name
8 Press and release the voice key and repeat the name	confirm the shortcut name
9 Press DONE (LEFT)	store the shortcut name

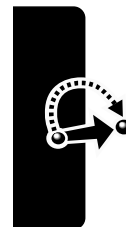

Shortcuts

Using Shortcuts


Use a Keypad Shortcut

Press	To
1 	open the menu
2 <i>the keypad shortcut number</i>	go to the menu item or perform the menu action

Select a Shortcut From the List

Find the Feature  > *Shortcuts*
> *the shortcut you want*

Use a Voice Shortcut

Do This	To
1 Press 	open the menu
2 Press and release the voice key and say the shortcut's name (in two seconds)	go to the menu item or perform the menu action



Shortcuts

Voice Notes

You can use the voice note feature to record personal messages and phone calls on your phone.

Recording a Voice Note

Use this procedure to record a voice note from the idle display, or to record a phone call in progress. Your phone plays an alert tone to notify the other party that the call is being recorded.

Note: Recording phone calls is subject to varying state and federal laws regarding privacy and recording of conversations.

Tip: Make your recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.


Voice Notes



Do This	Result
1 Press and hold the voice key for the duration of the recording.	The phone sounds an alert tone and begins recording.
2 Speak your voice note.	The phone records the voice note.
3 Release the voice key to stop recording.	The phone displays the voice note number and total recording time.

Viewing the Voice Notes List

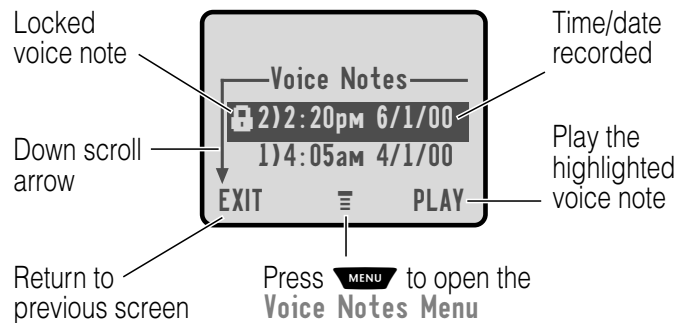

Find the Feature  > Voice Notes



105

Playing a Voice Note

Find the Feature  > Voice Notes



Press	To
1 	scroll to the voice note
2 PLAY ()	play the voice note

When you connect an optional Motorola Original™ headset or FM Stereo Radio Headset accessory to your phone, playback is automatically routed to the headset.

Tip: You can play a voice note while taking a call. It will not be transmitted to the other party.

Playback Screen

 The playback screen is displayed as the voice note plays.

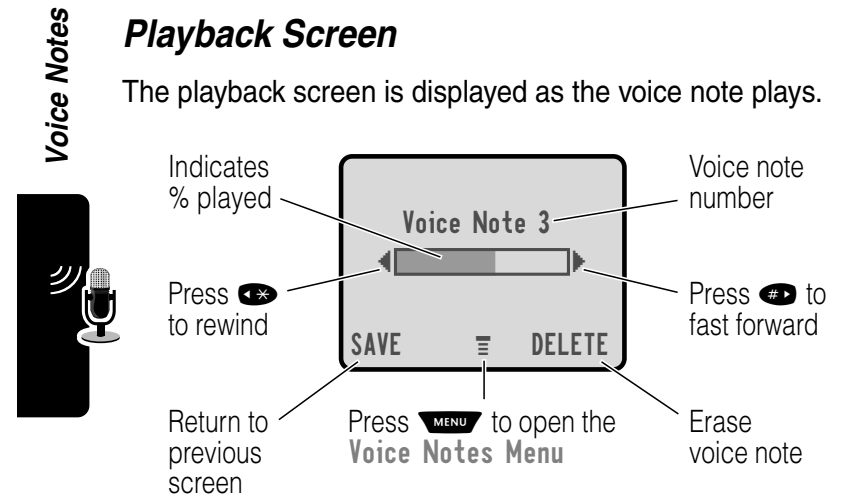

106

Voice Note Controls

Stop playback and go to **Voice Notes Menu**.


Stop playback and return to voice notes list.

Raise or lower playback volume of voice note.

Stop playback and scroll up/down to next voice note.

Rewind three seconds, resume playing.

Press and hold to rewind to the beginning.

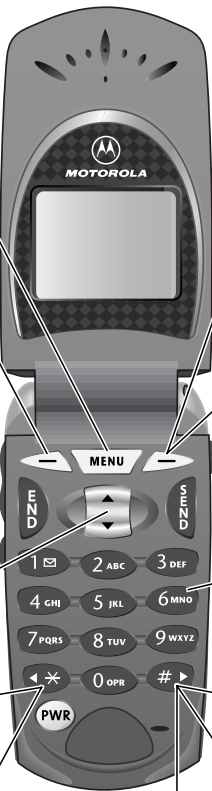

If voice note is unlocked, stop playback and display **Delete Voice Note?**

If voice note is locked, stop playback and unlock voice note.

Press any number to alternately stop and start playback.

Fast forward three seconds, resume playing.

Press and hold to fast forward to end.

When playback is complete, press to restart.

Voice Notes



Locking and Unlocking a Voice Note

Lock a voice note to prevent it from being deleted. You must unlock a voice note to delete it.

Find the Feature **MENU** > Voice Notes

Press	To
1	scroll to the voice note
2 MENU	open the Voice Notes Menu
3	scroll to Lock or Unlock
4 SELECT (lock or unlock the voice note

To lock or unlock a voice note during playback:


Press	To
1 MENU	open the Voice Notes Menu
2	scroll to Lock or Unlock
3 SELECT (lock or unlock the voice note







Playback stops when you lock or unlock a voice note. Press any number key to resume playback.

Voice Notes



Deleting a Voice Note

Find the Feature  > Voice Notes

Press	To
1 	scroll to the voice note
2 	open the Voice Notes Menu
3 	scroll to Delete or Delete All
4 SELECT ()	select the highlighted option
5 YES ()	confirm the deletion
or	
NO ()	cancel deletion

Notes:

- You cannot delete a locked voice note.
- You cannot recover a delete voice note.

Voice Notes



109

Micro-Browser






The micro-browser lets you access Web pages and Web-based applications on your phone. Contact your service provider to set up access, if necessary.



Starting a Micro-Browser Session

Find the Feature  > Browser

Press	To
1 	scroll to a bookmark, service, or application
2 SELECT ()	select the item

Shortcut: If you open a text message with a Web address (URL) embedded in it, you can press  > **Go To** to launch the micro-browser and go directly to the URL.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

Micro-Browser



110

Interacting With Web Pages

Press	To
	scroll through text, or highlight a selectable item
SELECT ()	select the highlighted item
	call the highlighted phone number from the micro-browser
keypad keys, followed by OK ()	enter information Tip: Press to delete one letter at a time if you make a mistake.
	go back to the previous page
	open the Browser Menu

Micro-Browser



111


Calculator

You can use your phone as a calculator and currency converter.

Calculating Numbers

Find the Feature > Calculator

Press	To
1 number keys	enter a number
2 or	highlight a calculator function
3 SELECT ()	perform the function

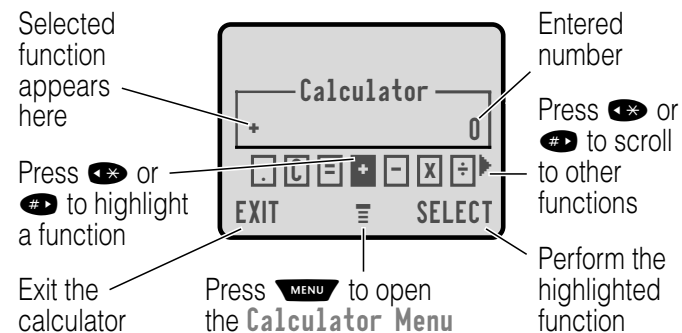

112

The calculator can perform the following functions:

Function	Description
.	Insert a decimal point
C	Clear the calculation
CE	Clear entry (replaces C when you enter subsequent values in a calculation)
=	Calculate the result
+	Add
-	Subtract
x	Multiply
÷	Divide
%	Divide the displayed value by 100
±	Change the entry's sign (positive/negative)
\$	Calculate the exchange rate
MS	Store the value in memory (overwrites current stored value)
MC	Clear the value stored in memory
MR	Replace the displayed value with the value stored in memory



Calculator

Converting Currency

The currency converter works just like the calculator, but uses the \$ (currency) function:

Find the Feature

MENU > Calculator
MENU > Exchange Rate



Calculator



Press	To
1 number keys	enter the exchange rate
2 OK (▶)	store the exchange rate
3 number keys	enter the amount to convert (amount to multiply by the exchange rate)
4 [*] or [#]	highlight the \$ function
5 SELECT (▶)	perform the conversion

Games





You can play games on your phone between phone calls. An incoming call, message, alarm, or alert automatically ends the game.

Playing a Game

Find the Feature  > Games

Press	To
1 	scroll to a game
2 SELECT ()	start the game

When the game is over:

Press	To
NEW () or YES ()	start another session of the same game
BACK () or NO ()	end the game session



Games

Game Options

Press  to select the following options during a game.

Note: Some options may not be available for all games.

Option	Description
Game Sounds	Switch game sounds on/off.
New Game	Start a new game session.
Help	Review the goal of the game.



Games

Blackjack

In this classic card game, you play against the dealer to see who can get closer to 21 points without going over.

Rules of the Game

- The first card is dealt to the dealer. The dealer's cards are shown at the top of the display, and your cards are shown at the bottom.
- Face cards count as 10 points. Number cards count as the points shown on their face.
- An ace counts as 11 points, unless that would put you over 21 points. Otherwise, an ace is counted as 1 point. An ace that is originally counted as 11 may later be counted as 1 if it will bring your total under or equal to 21 points.
- An initial deal of an ace and a card with a face value of 10 points counts as exactly 21 points or Blackjack.



- Blackjack automatically wins against any other hand that totals 21 points.
- If you score more than 21 points, you go “bust” or lose.
- If you get five cards without going bust, you win.
- If you and the dealer have the same score, the dealer wins.
- You can ask for a “hit” or another card as long as you do not go bust.
- As long as the dealer’s total is less than 17 points, the dealer must continue to take a hit.



Games

How to Play

When the game begins, you are dealt two cards.

Press	To
STAY ()	see the results of the hand
HIT ME ()	request another card

Falling Numbers

Score points by pressing the corresponding number key for numbers as they “fall” down the display.

Rules of the Game

- If a number reaches the bottom of the display or if you press an incorrect number key, you score one miss.
- The game is over when you score three misses.




Games

- The game has five levels. When you complete a level, play continues automatically at the next level.
- You earn a bonus if you finish a level without a miss.

How to Play

When the game begins, numbers start falling from the upper portion of the display. Press the corresponding number key to eliminate a falling number before it reaches the bottom of the display.

Press  to select the following options:

Option	Description
Level	Choose the starting level of play.
Top Scores	View the top five scores.

Video Poker

Turn 100 credits into 9,999-plus credits by making the best possible poker hands.









Rules of the Game

- You start a new game with 100 credits. You must bet from 1-10 credits for each hand you play.
- You are dealt five cards face up, and have one opportunity to trade in cards (zero to five) for new ones.
- A winning hand earns credits as listed in the **Awards Table**.

- Your credit total is saved when you exit the game. The next time you play, you start with the number of credits that remain from the previous session.
- The game is over when you lose all of your credits.


How to Play

Place your initial bet or change your bet (from 1-10 credits) and then:

Press	To
DEAL ()	start a new hand
	select the card to the left
	select the card to the right
 or DISCARD ()	discard selected card
 or UNDO ()	undo discard (replaces previous option after discard)
DONE ()	remove discarded cards and deal replacements



Games

Press  to select the following options:


Option	Description
Change Bet	Change bet amount (not available while hand is in play).
Choose Deck	Choose the deck image.
Awards Table	View the list of odds/payouts for each winning hand.

Adjusting Your Settings

Reordering Menu Items





You can reorder the items in your phone's main menu.

Find the Feature



-  > Settings
- > Other Settings
- > Personalize
- > Main Menu



Adjusting Your Settings





Press	To
1 	scroll to a menu item
2 GRAB ()	grab the menu item
3 	move the item to a new location in the menu
4 INSERT ()	insert the menu item

Customizing a Soft Key Function

You can relabel the soft keys ( and ) and the smart key to access different menu items from the idle display.

Find the Feature

-  > Settings
- > Other Settings
- > Personalize > Keys

Press	To
1 	scroll to Left, Right, or Smart
2 CHANGE ()	select the key
3 	scroll to the new key function
4 CHANGE ()	confirm the new function

TTY Operation



You can use an optional TTY device with your phone to send and receive calls. You must plug the TTY device into the phone's headset jack and set the phone to operate in one of three TTY modes.

Notes:

- Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to your phone.
- Set the phone volume to level 4 (middle setting) for proper operation. If you experience a high number of incorrect characters, adjust the volume as necessary to minimize the error rate.
- For optimal performance, your phone should be at least 12 inches (30 centimeters) away from the TTY device. Placing the phone too close to the TTY device may cause high error rates.




Adjusting Your Settings





121

Set TTY Mode

When you set your phone to a TTY mode, it operates in that mode whenever the TTY device is connected.

Find the Feature

 > **Settings**
 > **Other Settings**
 > **Initial Setup**
 > **TTY Setup**

Press	To
1 	scroll to TTY Setup
2 CHANGE ()	change the TTY mode
3 	scroll to the TTY mode
4 SELECT ()	select the TTY mode




Adjusting Your Settings

The **TTY Setup** menu includes the following options:






Option	Description
TTY	Transmit and receive TTY characters
VCO	Receive TTY characters but transmit by speaking into the microphone
HCO	Transmit TTY characters but receive by listening to the earpiece
Voice	Return to normal voice mode



When your phone is in a TTY mode, the international TTY symbol and the mode setting are shown in the display. You can press **TTYMODE** () to change the mode setting.

122

Switch to TTY Mode During a Voice Call

Press	To
1 	open the Call menu
2 	scroll to TTY Setup
3 SELECT ()	display the TTY Setup menu
4 	scroll to the TTY mode
5 SELECT ()	select the TTY mode

Return to Voice Mode

To return to normal voice mode, select **Voice** from the **TTY Setup** menu as described on page 122.

Hands-Free Use



You can purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.









Adjusting Your Settings

Automatic Answer

You can set your phone to automatically answer calls after two rings (four seconds) when connected to a car kit or headset.

Find the Feature  > **Settings**
> **Other Settings**

Press	To
1 	scroll to Car Settings or Headset
2 SELECT ()	select the feature
3 	scroll to Auto Answer
4 CHANGE ()	select Auto Answer
5 	scroll to On or Off
6 SELECT ()	confirm the setting





Adjusting Your Settings

Automatic Hands-Free

You can set your phone to automatically route calls to a car kit when it detects a connection.

Find the Feature  > **Settings**
> **Other Settings**
> **Car Settings**
> **Auto Handsfree**

Press	To
1 	scroll to On or Off
2 SELECT ()	confirm the setting



Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a period of time after you switch off the ignition. This prevents the phone from draining your vehicle battery, but leaves the phone on long enough that you do not have to re-enter your unlock code when making short stops.

Note: This feature may not work with all car ignition switches.

Caution: If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to drain your vehicle battery if you select this option.

Find the Feature  > Settings
> Other Settings
> Car Settings
> Power-Off Delay

Press	To
1 	scroll to the time delay
2 SELECT ()	confirm your selection

Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.





Adjusting Your Settings

125

Note: This feature may not work with all car ignition switches.

Find the Feature  > Settings
> Other Settings
> Car Settings
> Charger Time

Press	To
1 	scroll to the charge time
2 SELECT ()	confirm your selection



Adjusting Your Settings

126

Data and Fax Calls



A Motorola Original™ data kit lets you transfer data between your phone and a computer or other external device. You can:

- synchronize data between your phone and an external device with Starfish TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.
- Note:** TrueSync software is designed to synchronize with basic features of many popular Personal Information Management (PIM) software and hardware products.
- use your phone as a modem to connect to the Internet.
 - use your phone to send and receive data and fax calls on your computer or hand-held device.

Data and Fax Calls



Connecting Your Phone to an External Device

Connect your phone to a computer or hand-held device using a serial cable or a USB cable.

Note: Not all devices are compatible with serial cable or USB cable connections. Check your external device for specifications.

Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.


Note: Check your computer or hand-held device to determine the type of cable you need.

Attaching a Serial Cable


Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

Do This

- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.
- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

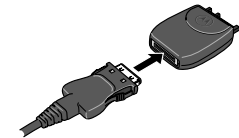

Data and Fax Calls

 

Do This

- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.

Attaching a USB Cable

Do This

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.



- 2 Plug the other end—the USB connection—into the USB port on the external device.

Install the Software

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

Data and Fax Calls



Sending a Data or Fax Call

Use this procedure to send data or a fax from a connected device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone to the device as described on page 127 and do the following:

Do This


To

- | | | |
|---|---------------------------------------|----------------------------------------------------------------------------|
| 1 | Check the phone | make sure that the phone is connected and powered on |
| 2 | Open the application on your computer | place the call through the application (such as dial-up-networking or fax) |

Note: You cannot dial data or fax numbers through your phone's keypad. You must dial them through your computer.

- | | | |
|---|----------------------------------------|-------------------------------------------------------------|
| 3 | End the call from the connected device | close the call and connection when the transfer is complete |
|---|----------------------------------------|-------------------------------------------------------------|

 Data and Fax Calls






Receiving a Data or Fax Call

Use this procedure to transfer data or a fax to your computer or hand-held device.

Set Up Your Phone

Find the Feature  > **Settings**
 > **Connection**
 > **Incoming Call**

Do This	To
1 Press CHANGE ()	select Next Call
2 Press 	scroll to Data In Only or Fax In Only
3 Press SELECT ()	set the call format
4 Connect your phone to the device	enable the data or fax transfer

Note: You cannot answer incoming voice calls when your phone is in data or fax mode. Any voice calls you receive are treated as unanswered calls. To return a voice call, reset your phone to voice mode as described on page 132.

Transfer the Data or Fax

Your phone notifies you when the data or fax call arrives, and transfers the call to the connected device. Use the application running on the device to answer the call.

Data and Fax Calls



End the Data/Fax Connection




When the data or fax transfer is complete:

Do This	To
End the call from the connected device	close the connection

Reset Normal Voice Operation


After making a data or fax call, you must reset your phone to resume normal voice operations.

Find the Feature  > **Settings**
 > **Connection**
 > **Incoming Call**

Do This	To
1 Press CHANGE ()	select Next Call
2 Press 	scroll to Normal
3 Press SELECT ()	reset your phone

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.

 Data and Fax Calls




Security

Assigning a New Code or Password

Your phone's unlock code is originally set to 1234, and the security code is originally set to 000000. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information. The unlock code must contain four digits, and the security code must contain six digits.

Notes:

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code.
- If the unlock code is the only code you can change, the **New Passwords** menu is not available. In this case, change the unlock code by selecting:  > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.

To change a code or password:

Find the Feature






 > **Settings** > **Security**
> **New Passwords**



133





134

Press	To
1 	scroll to the code or password
2 CHANGE ()	select the code or password
3 keypad keys	enter your old code
4 OK ()	submit your old code
5 keypad keys	enter the new code
6 OK ()	assign the new code
7 keypad keys	re-enter the new code
8 OK ()	confirm the new code

If You Forget a Code or Password

If you forget your security code, contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following at the **Enter UnLock Code** prompt:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 OK ()	submit your security code

Locking and Unlocking Your Phone


You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*

You can make emergency calls on your phone even when it is locked. For more information, see page 33.


Lock Your Phone Manually


Find the Feature  > Settings > Security
> Phone Lock
> Lock Now

Press	To
1 keypad keys	enter your unlock code
2 OK ()	lock the phone

Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off.

Find the Feature  > Settings > Security
> Phone Lock
> Automatic Lock > On


Press	To
1 keypad keys	enter your unlock code
2 OK ()	activate automatic lock



135

Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your unlock code
2 OK ()	unlock your phone






Restricting Calls

You can stop all incoming and/or outgoing calls, or you can restrict outgoing calls to the numbers stored in your phonebook.

Notes:


- You can make emergency calls when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.

Find the Feature  > Settings > Security
> Restrict Calls

Press	To
1 keypad keys	enter your unlock code
2 OK ()	open the restrict calls menu
3 	scroll to Outgoing Calls or Incoming Calls
4 CHANGE ()	select the option
5 CHANGE ()	change the Allow setting
6 	scroll to All , None , or Phonebook



136

Press	To
7 SELECT ()	select the allowed calls

Tip: The phonebook is not locked when you restrict outgoing calls to numbers stored in the phonebook. To prevent a user from adding (and then calling) a new phonebook entry, you may want to lock the phonebook. See the “Lock Application” item on page 58.

Security






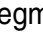



Troubleshooting



Check these questions first if you have problems with your phone. If you need additional help, contact the Motorola Customer Call Center at 1-800-331-6456 (United States) or 1-800-461-4575 (Canada).

Troubleshooting

Question	Answer
Is your phone set up correctly?	Press   . If you do not see your phone number, contact your service provider.
Is your battery charged? Do you see  in the display?	The battery level indicator should have at least one segment showing (). If it does not, recharge your battery. See page 19.
Does the handset have a signal? Do you see  in the display?	Make sure that your antenna is fully extended. The signal strength indicator should have at least one segment showing (). If it does not, move to an area with a stronger signal to use your phone.
Is the earpiece volume too low?	While on a call, press the upper volume key on the side of your phone.

Question	Answer
Is the other party unable to hear you?	Make sure that your antenna is fully extended and that your phone is not muted. Press UNMUTE () if necessary to unmute the phone. Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.
Has the phone been damaged, dropped, or gotten wet?	Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.
Was a non-Motorola battery or battery charger used?	

The following refer to specific problems:



Problem	Solution
My phone was stolen. To whom should I report this?	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
I forgot my password.	See page 134.



Troubleshooting



Troubleshooting

Problem	Solution
I pressed the power key, but nothing happened.	Be sure to press and hold PWR (the power key) until the display appears and you hear an alert. This could take several seconds. If nothing happens, check that a charged battery is installed. See page 18.
The display says: Enter UnLock Code. How do I unlock my phone?	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. If this fails, call your service provider (the company that sends you your monthly wireless service bill).
My phone asks for an unlock code when I try to open a feature.	The application you want is locked. If you do not know the unlock code, see page 134.
My phone does not ring.	If you see  or  in the display, then the ringer is turned off. See page 93. Also, the ringer may be set to Silent even though your phone is set to an audible ring style. See page 93.

Problem	Solution
My phone rings even though I selected the Silent (or Vibrate) ring style.	The ringer may be set to play a tone even though your phone is set to a silent ring style. See page 93.
I tried to place a call and heard an alternating high/low tone.	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display says Ready before making a call.
I cannot send/receive calls.	<p>Make sure that your antenna is fully extended and that you have a phone signal (see the “Signal Strength Indicator” item on page 25). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the Restrict Calls feature turned on. If you know the unlock code, you can change this setting in the security menu (MENU > Settings > Security).</p>



Troubleshooting



Troubleshooting

Problem	Solution
My phone has poor reception and drops calls.	<p>Make sure that your antenna is fully extended and is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the “Signal Strength Indicator” item on page 25). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
I cannot hear others on my phone.	<p>While on a call, press the upper volume key. The display should show the volume increasing.</p> <p>Also, make sure that your phone’s earpiece is not blocked by its carrying case.</p>
I cannot open my message inbox.	Before you can use text messages, you must set up the message inbox. See page 86.
How do I see the calls I sent or received?	<p>To see the most recent calls you dialed or received:</p> <p>MENU > Recent Calls > Received Calls or Dialed Calls</p>

Problem	Solution
My phone will not send voicemail commands, passwords, or other codes.	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be Long, Short, or Off. If you have trouble sending numbers, try changing the DTMF setting.</p> <ol style="list-style-type: none"> From the idle display, press: <ul style="list-style-type: none"> MENU > Settings > Other Settings > Initial Setup > DTMF Press ↓ to scroll to Long or Short (some analog networks may not recognize short tones). Press SELECT (→) to select it.
My phone's display is too dark.	<p>Use the Contrast feature to change the level of contrast in your display. See page 61.</p> <p>You can also use the Backlight feature to change the length of time that the display backlight stays on. See page 60.</p>




Troubleshooting

Problem	Solution
My battery didn't last as long as I expected. What can I do to extend battery life	Your battery's performance is affected by charge time, feature use, temperature changes, backlight use, and other factors. For tips on extending your battery life, see page 29.
I am unable to record a voice note, voice name, or voice shortcut.	Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone in a normal tone of voice.
My TTY device doesn't work with my phone.	Your phone must be set to a TTY mode for the phone to detect your TTY device. See page 121.
I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Also, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, to automatically activate the port.</p>



Troubleshooting

Problem	Solution
My phone beeped when I attached the data cable, but my data and fax applications don't work.	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator (D).</p> <p>Some wireless networks may not support data or fax transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.</p>
When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?	<p>19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.</p>
I can't end my data call by closing the application on my computer. What can I do?	<p>Try pressing  on your phone. Or try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer, as these alternative methods may disrupt the application on your computer.</p>



Troubleshooting

Problem	Solution
I launched the micro-browser but the display says: Service Not Available.	<p>You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (D). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.</p>
I launched the micro-browser but the display says: Data Server Unavailable.	<p>Try again in a few minutes. The servers may be temporarily busy.</p>



Troubleshooting

Programming Instructions

Follow this procedure if you need to program your phone's phone number(s) or system ID.

Note: Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS Sys ID number
- 5-digit CDMA Sys ID number

Do This	To
1 Press , , , , , , , (These keys spell P-H-O-N-E + , , .)	open the user activation menu
2 Press	scroll to NAM1 (phone number 1) or NAM2 (phone number 2)

Programming Instructions

Do This	To
3 Press SELECT ()	open the NAM programming menu
4 Press the keypad keys for the 10-digit MIN	open the MIN editor and enter the new MIN
5 Press OK ()	store the new MIN
6 Similarly, enter appropriate numbers for the IMSI, MDN, AMPS Sys ID, and CDMA Sys ID	
7 Press DONE ()	close the NAM programming menu
8 Press EXIT ()	close the user activation menu

Programming Instructions

Specific Absorption Rate Data

This model phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the U.S. Federal Communications Commission for the United States and by Health Canada for Canada. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by Health Canada is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are



Specific Absorption Rate Data

149

to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.42 W/kg², and when worn on the body, as described in this user guide, is 1.23 W/kg.² (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure.

The FCC and Industry Canada have granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as being in compliance with the FCC and Health Canada RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID IHDT56AD1. You may also refer to Motorola's Web site:

<http://www.motorola.com/rfhealth>



Specific Absorption Rate Data

150

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

ITC01-064

Specific Absorption Rate Data

The U.S. Food and Drug Administration's Center for Devices and Radiological Health
Consumer Update on Mobile Phones



Additional Health and Safety Information

FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

Why the concern?

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

What kinds of phones are in question?

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

How much evidence is there that hand-held mobile phones might be harmful?

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results obtained from animal studies apply to the use

of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain

cancers by the National Cancer Institute is expected to bear on the accuracy and repeatability of these results.¹

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.²

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while

Additional Health and Safety Information

they performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.³

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.⁴

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

What is known about cases of human cancer that have been reported in users of hand-held mobile phones?

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the

Additional Health and Safety Information

U.S. population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

What is FDA's role concerning the safety of mobile phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile

Additional Health and Safety Information

phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

In the absence of conclusive information about any possible risk, what can concerned individuals do?

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people

Additional Health and Safety Information

are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

Where can I find additional information?

For additional information, see the following Web sites:

Federal Communications Commission (FCC) RF Safety Program (select "Information on Human Exposure to RF

Fields from Cellular and PCS Radio Transmitters"): <http://www.fcc.gov/oet/rfsafety>

World Health Organization (WHO) International Commission on Non-Ionizing Radiation Protection (select Qs & As): <http://www.who.int/emf>

United Kingdom, National Radiological Protection Board: <http://www.nrpb.org.uk>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

U.S. Food and Drug Administration (FDA) Center for Devices and Radiological Health: <http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Valey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

ITC00-010

Warranty

MOTOROLA LIMITED WARRANTY FOR PERSONAL COMMUNICATION PRODUCTS, ACCESSORIES AND SOFTWARE PURCHASED IN THE UNITED STATES OR CANADA

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its wireless telephones, pagers and consumer two-way radios that operate via Family Radio Service or General Mobile Radio Service ("Products"), Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Warranty



Products and Accessories

Products Covered	Length of Coverage
<u>Products and Accessories</u> as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<u>Decorative Accessories and Cases.</u> Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
<u>Monaural Headsets.</u> Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
<u>Consumer Two-Way Radio Accessories.</u>	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
<u>Products and Accessories that are Repaired or Replaced.</u>	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Warranty



Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or

Warranty



(d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided "as is" and without warranty.

Warranty



Who is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

USA	Canada
Phones 1-800-331-6456	All Products 1-800-461-4575
Pagers 1-800-548-9954	
Two-Way Radios 1-800-353-2729	TTY 1-888-390-6456
TTY 1-888-390-6456	
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

Warranty

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE

Warranty

FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

ITC02-154

Warranty



Product Registration

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

Index

A

accessories
 optional 10, 81, 106,
 121, 123, 127
 standard 18
accessory connector port
 1
active line indicator
 defined 25
 illustration 24
Add Digits feature 65
alarm 76, 78
alert
 creating 94–100
 defined 93
 reminders, turning on/off
 100
 selecting 93–94
 turning off 33
analog signal indicator
 defined 25
 illustration 24
animation 61
answering a call 23
antenna 22
application, locking 58
appointments. *See*
 datebook

Attach Number feature 35,
 65
auto PIN dial 59
automatic redial
 turning on/off 60
 using 31–32

B

backlight 60
banner text 59
battery
 car kit charger time 125
 charging 19–20
 extending battery life
 26, 29–30, 60, 61
 installing 18–19
 level indicator 20, 24,
 25
 meter 56
blackjack 116–117
block cursor, defined 42
browse text mode 43
browser alerts 54
browser. *See*
 micro-browser

Index

C

calculator 112–114
calendar. *See* datebook
call
 adding digits after phone
 number 65
 alert, creating 94–100
 alert, selecting 93–94
 alert, turning off 33
 answer options 57
 answering 23
 call waiting 37
 calling card 71
 canceling 33
 data call 130–132
 datebook, opening 38
 deleting 64–65
 dialed calls list 36, 38,
 64–65
 dialing 22
 dialing a recent call
 64–65
 emergency number 33
 ending 23
 fax call 130–132
 in-call timer 57
 incoming call type,
 setting 131–132
 making 22
 message center,
 accessing 38
 muting 38
 call (continued)
 prefix digits, inserting
 35
 received calls list 36,
 38, 64–65
 receiving 23
 recent calls 64–65
 restricting 136–137
 ring style, setting 93
 ring style, setting in
 external display
 28
 speakerphone,
 activating 38
 storing 64–65
 three-way call 37
 timing 66–67
 unanswered call 28, 32
 voice dial 36
Call Failed message 31
call timers 66–67
 resetting 67
 viewing 67
call waiting 37
caller ID 32
calling card call 71
calling line identification.
 See caller ID
car kit
 automatic answer 124
 automatic hands-free
 124

Index

car kit (continued)
 charger time 125
 power-off delay 125
clock 24
codes
 changing 133–134
 default 22
 if you forget a
 code/password
 134
 original 133
computer
 connecting to phone
 127–129
 synchronizing data 74,
 127
contrast, display 61
convertible covers 20–21
currency converter 114
cursor 42
customer service, calling
 53
customizing the menu 120

D

data call
 connecting to external
 device 127–129
 incoming call format,
 setting 131–132
 receiving 131–132
 sending 130

date, setting 59
datebook
 adding an event 78
 alarm 78
 calendar 76
 changing event
 information 78
 copying an event 79
 day view 77
 deleting an event 80
 event reminders, turning
 on/off 100
 event view 77
 reminders 78
 week view 76
deleting a call 64–65
dialed calls list 36, 38,
 64–65
dialing a number 22
digital signal indicator
 defined 25
 illustration 24
display
 animation 61
 backlight 60
 banner text 59
 contrast 61
 described 24–26
 greeting 59
 idle display 24
 illustration 24
 language 61

Index

display (continued)
 zoom setting 60
 zooming in/out 26
drafts folder 54
DTMF tones 38, 61, 65,
 143

E

earpiece
 illustration 1
 volume, adjusting 27
email
 address, storing in
 phonebook
 68–70
 email, sending 73, 89–91
 emergency number 33
 end key
 functions 1, 23
 menu functions 39
 ending a call 23
Enter Unlock Code
 message 134, 136
 event alert 93–94
 exchange rate, calculating
 114
 external device
 connecting to phone
 127–129
 synchronizing data 74,
 127
 external display 28

F

factory settings, resetting
 61–62
falling numbers 117–118
fax call
 connecting to external
 device 127–129
 incoming call format,
 setting 131–132
 receiving 131–132
 sending 130
flashing cursor, defined 42
flip
 external display and 28
 open to answer call 57
 turning the phone on 22
FM Stereo Radio Headset
 53, 81–83

G

games 115–119
greeting, display 59

H

hands-free mode
 automatic answer 124
 automatic call routing
 124
 charger time 125
 defined 123
 external display and 28

Index

hands-free mode
(continued)
power-off delay 125
speakerphone,
activating 38
headset
automatic answer 124
FM Stereo Radio
Headset 53,
81–83
use with external display
28
headset jack 1

I
idle display, defined 24
in use indicator
defined 25
illustration 24
inbox, text message
86–87
in-call timer 57
incoming call
canceling 33
type, setting 131–132
Incoming Call message
32
indicators
active line 24, 25
battery level 20, 24, 25
digital/analog signal 24,
25

indicators (continued)
in use 24, 25
loud ring style 26, 93
menu 24, 25
message waiting 24,
25, 87
missed call 32
ring style 24, 26, 93
roam 24, 25
signal strength 24, 25
silent alert 26
silent ring style 26, 93
soft ring style 26, 93
vibrate and ring style
26, 93
vibrate style 26, 93
voice message waiting
24, 25, 85
voice name 68
iTAP software 48–51

K
key
end 1, 23, 39
left soft key 1, 24, 39,
120
menu 1, 10, 25, 39
power 1, 22
right soft key 1, 24, 39,
120
scroll 1, 39
send 1, 23, 64

Index

key (continued)
smart 1, 27–28
smart key 120
voice 1, 72, 104
volume control 1, 27, 39
keypad
answering calls 57
volume, setting 94

L
language, setting 61
left soft key
customizing 120
functions 1, 24, 39
lock
applications 58
phone 135–136
voice notes 108
lock application feature 58
loud ring style indicator
26, 93
Low Battery message 25

M
making a call 22
master clear 62
master reset 61
Memory is Full! message
87
menu
Browser Menu 111
Calculator Menu 112

menu (continued)
customizing 120
Datebook Menu 76, 77
Dialing Menu 35, 66
entering text 41–42,
43–51
features 52–63
language, setting 61
Last Calls Menu 65
lists 40
locking applications 58
My Tones Menu 98, 99
navigating 10, 39
Phonebook Menu 68
Quick Note Menu 92
rearranging features
120
scroll feature 60
Text Msg Menu 88–89
using features 10,
40–42
Voice Notes Menu 105,
106, 107
menu indicator
defined 25
illustration 24
menu key 1, 10, 25, 39
message
browser alert 54
deleting, text 87–89
dialing number from 35
drafts folder 54

Index

message (continued)
 inbox setup, text
 message 86–87
 locking, text 87–89
 outbox 54, 92
 quick note 91–92
 reading, text 87–89
 receiving, text 87
 reminders, receiving 85,
 87
 reminders, turning on/off
 100
 sending 35, 89–91
 status 92
 text 86–92
 voicemail 84–85
message waiting indicator
 defined 25
 displayed 87
 illustration 24
micro-browser
 browser alerts 54
 using 110–111
microphone 1
missed call indicator 32
Missed Call message 32
missed call, dialing 36
Missed Calls message 28
muting a call 38
my telephone number 23,
 38, 56
my tones 94–100

N
network settings 62
notepad
 defined 65
 entering digits 65
 retrieving digits 65
number, viewing your own
 56
numeric text mode 43

O
one-touch dial
 defined 34
 using 34
 voicemail number 34
optional accessory,
 defined 10
optional feature, defined
 10
outbox 54, 92

P
passwords. *See* codes
pause character 71
phone
 active line indicator 25
 alert, turning off 33
 answer options 57
 codes 133–134
 connecting to external
 device 127–129

Index

phone (continued)
 erase user-entered
 information 62
 feature specifications
 38, 56
 flip 22
 information 38
 locking 135–136
 reset all options 61
 security code 133
 specifications 38, 56
 turning on/off 22
 unlock code 22, 133,
 134
 unlocking 22, 135–136
phone number
 active line indicator 25
 active phone line,
 changing 56
 adding digits after 65
 attaching to prefix digits
 35
 attaching two numbers
 65
 redialing 31
 seeing your own 23, 38
 sending text message to
 35
 storing in phonebook
 68–70
 viewing your own 56
 voice dial 36

phonebook
 attaching two numbers
 65
 deleting an entry 74
 dialing a number 73
 editing an entry 74
 email address 68
 entry details 68
 entry name 68
 number type indicator
 68
 one-touch dial 34
 phone number 68
 prefix digits, inserting
 35
 sending an email 73
 sorting entries 75
 speed dial number 68,
 70
 speed dial number,
 defined 34
 speed dial, using 34
 storing an entry 68–70
 synchronizing entries
 74, 127
 voice name entry 72
 voice name indicator 68

PIN code
 dialing automatically 59
 storing with phonebook
 entry 71

Index

power key 1, 22
predictive text entry 48–51

Q

quick dial
 changing number(s) 59
 using 53
quick note 91–92
 defined 86

R

radio 81–83
received calls list 36, 38,
 64–65
recent calls 64–65
redial
 automatic redial 31–32
 busy number 31
reminders
 datebook 78
 defined 100
 text message 87
 turning on/off 100
 voicemail message 85
restricting calls 136–137
right soft key
 customizing 120
 functions 1, 24, 39
ring alert
 selecting 93–94
 turning off 33

ring style
 customizing 93–94
 defined 93
 indicators 26, 93
 setting 93
 setting in external
 display 28
ring style indicator
 defined 26, 93
 illustration 24
ringer
 volume, adjusting 27
 volume, setting 94
roam indicator
 defined 25
 illustration 24

S

scroll feature 60
scroll key 1, 39
security code
 changing 133–134
send key 1, 23, 64
short message service.
 See text message
shortcuts
 creating 101–102
 standard 101
 using 103
signal strength indicator
 defined 25
 illustration 24

Index

silent alert indicator 26
silent ring style indicator
 26, 93
smart key
 customizing 120
 defined 27–28
 functions 27–28
 illustration 1
SMS. See text message
soft keys
 customizing 120
 functions 24, 39
 illustration 1
 labels 24
soft ring style indicator 26,
 93
speakerphone, activating
 38
speed dial
 changing number 70
 number, defined 34
 sorting phonebook
 entries by 75
 using 34
standby time
 defined 27
 increasing 30
status light 1, 26–27, 60
storing a call 64–65
symbol text mode 47–48

symbols, entering 47–48
synchronizing data 74,
 127

T

tap method text entry
 44–46
telephone number, viewing
 your own 56
text
 block cursor 42
 browse mode 43
 character chart 46
 entering from keypad
 43–51
 entry mode, changing
 43
 flashing cursor 42
 iTAP software predictive
 text entry 48–51
 numeric mode 43
 symbol chart 47
 symbol mode 47–48
 tap method 44–46
text message
 defined 86
 deleting 87–89
 dialing number from 35
 drafts folder 54
 inbox setup 86–87
 locking 87–89
 outbox 54

Index

text message (continued)
 quick note 91–92
 reading 87–89
 receiving 87
 reminders 87
 sending 35, 89–91
 status 92
text mode, changing 43
three-way call 37
time, setting 59
timers 66–67
 resetting 67
 viewing 67
travel charger, using 19
TrueSync 74, 127
TTY device 121–123

U

unlock
 phone 135–136
unlock code 134
 bypassing 134
 changing 133–134
 entering 22, 135, 136

V

vibrate alert
 selecting 93–94
 turning off 33
vibrate and ring style
 indicator 26, 93

vibrate ring style
 setting 93
 setting in external
 display 28
vibrate style
 indicator 26, 93
video poker 118–119
voice dial
 dialing a number 36, 73
 recording voice name
 72
voice key
 dialing a number 36
 functions 1
 recording a voice name
 72
 recording a voice note
 104
voice message waiting
 indicator 24, 25, 85
voice name
 defined 72
 phonebook indicator 68
 recording 72
voice notes 104–109
voice shortcut
 creating 101–102
 defined 101
 using 103

Index

voicemail
 dialing with one-touch
 dial 34
 reminders, turning on/off
 100
 using 84–85
volume
 earpiece 27
 keypad 94
 ringer 27, 94
volume keys 1, 27, 39

W

wait character 71
warranty 161–167
Web pages 110–111

Z

zoom setting 60
zooming in/out 26

U.S. patent Re. 34,976



Wireless Phone Safety Tips

"Safety is your most important call!"

Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:

- 1 **Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.

- 2 **When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.
- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a "to do" list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.



- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.*
- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.*

* Wherever wireless phone service is available.

Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

For more information,
please call
1-888-901-SAFE
or visit the
CTIA Web site at
www.wow-com.comTM

ITC00-011



motorola.com

8988485L49-O