

Motorola v186

User Instructions



Lost/Stolen Equipment

If your equipment is lost or stolen you must contact Cellhire immediately at support@cellhire.com or call **+1.214.355.5200** (follow the prompts).

All calls made are the responsibility of the customer until the line is suspended by the network.

For a complete users manual please visit:
www.cellhire.com/support/equipment-manuals

24 Hour Technical Support

Cellhire's Support Center is available 24 hours a day, 7 days week:

Within the US: **1 877 244 7242**

Outside the US: **+1 214 355 5200**

support@cellhire.com
www.cellhire.com/support

Your Mobile Number

Motorola v186

▶ Basic Phone Operation

To power phone on

Press the red phone key until the phone powers on.

To power phone off

Press the red phone key until the phone powers off.

To make an emergency call

Press 112 and the green phone key.

To redial the last number called

Press the green phone key twice.

To answer & end a call

To answer press the green phone key.

To end press the red phone key.

To make a call

1. Press and hold the zero key until the + sign appears.
2. Dial the country code, (e.g. 1 to dial the US), then the area/city code, and the phone number. e.g.
To make a call to the US – dial +1 214 355 5200.

For a list of country codes please see below.

Australia	61	Japan	81
Austria	43	Netherlands	31
Belgium	32	Norway	47
Brazil	55	Portugal	351
Canada	1	Russia	7
China	86	South Africa	27
Finland	358	Spain	34
France	33	Sweden	46
Germany	49	Switzerland	41
Greece	30	Taiwan	886
Hong Kong	852	UK	44
Italy	39	USA	1

Important note: Most numbers outside North America start with a 0. Please omit the first 0 when making international calls.

Volume adjustments

Press the arrow keys at the side of the phone. The top arrow increases the volume and the bottom decreases volume.

▶ Network selection

Manual Network Search

Your Motorola handset should automatically pick up a signal when in your destination country. If there is no signal present, please try the following:

- Press the menu key and select Settings, Network, and Available Networks. Press Search. The phone will automatically search for available networks.

Once a list of Network Providers is displayed highlight your chosen network and press the menu key. Select Register now onto your chosen network.

Network Selection

1. Press the menu key and select Settings, Network and Network Setup
2. Highlight Band and select Change.
3. Select Automatic. If you are in the US and some parts of South America you may also select 850/1900.
4. For the rest of the world including you may also select 900/1800.

Important note: The Motorola V186 handset works on GSM 850/900/1800/1900. The phone is setup to automatically switch between bands. If you are not able to pick up a signal, please ensure the phone is set to the appropriate frequency for the country (ies) in which you are traveling and then try performing a Manual Network Search.

▶ VoiceMail Instructions